



YAMAHA

PARTS LIST

MODEL **YB50**

MODEL **YB60**

YAMAHA MOTOR CO., LTD.



YB50



YB60

against the name of each part. If any two different assemblies (e.g., right and left side components) consist of almost the same type components, these two assemblies are listed in two lines, and then the names of component parts are listed in the subsequent lines with an indention as mentioned earlier. The quantity of parts is given in the following manner; that is, in the case of parts being the same in type between the right and left, a total quantity of parts is given. On the other hand, if the right and left side parts are different in type, the quantity of part(s) on each side is given.

Example

Description	Q'ty
CARBURETOR ASS'Y, left	1
CARBURETOR ASS'Y, right	1
. JET, pilot	2
. NOZZLE, main	2
.	
.	
.	
. LEVER, starter, left	1
. LEVER, starter, right	1

(3) Key to Symbols

U.R.		Use size (thickness) and/or number as required
T		Number of teeth in a gear
V		Voltage for light bulbs
S		"S" type oil seal or "S" type circlip
SD		"SD" type oil seal
SO		"SO" type oil seal
SW		"SW" type oil seal
E		"E" type circlip
R		"R" type circlip
F/No.		Frame No. (Applicable machine No.)



- (4) The right and left in relation to parts are determined on the basis of the rider facing toward the front.
- (5) This Parts List is based on the model in the production line on Jan 10, 1973. Accordingly, if any modifications which have been made to parts will be announced in the Yamaha Parts News. It is advisable that according to the Yamaha Parts News, You will make necessary corrections to the Parts List on hand to keep it up-to dated.

CONTENTS

ENGINE

Fig. 1	Crankcase · Cylinder	1
Fig. 2	Crankcase Cover	5
Fig. 3	Crank · Piston	7
Fig. 4	Clutch	11
Fig. 5	Transmission	15
Fig. 6	Shifter 1	19
Fig. 7	Shifter 2	21
Fig. 8	Kick Starter	23
Fig. 9	Intake	25
Fig. 10	Carburetor	27
Fig. 11	Exhaust	31
Fig. 12	Oil Pump	33
Fig. 13	Flywheel Magneto (MITSUBISHI)	37
Fig. 14	Flywheel Magneto (HITACHI)	39

CHASSIS

Fig. 15	Frame · Rear Fender	43
Fig. 16	Rear Arm · Rear Cushion · Chain Case	47
Fig. 17	Stand · Footrest · Brake Pedal	51
Fig. 18	Front Fork · Front Fender	53
Fig. 19	Steering	57
Fig. 20	Handle · Wire	59
Fig. 21	Fuel Tank	63
Fig. 22	Oil Tank	65
Fig. 23	Seat · Carrier	67
Fig. 24	Front Wheel	69
Fig. 25	Rear Wheel	73
Fig. 26	Head Lamp · Speedometer	79


Fig. 27	Tail Lamp		81
Fig. 28	Flasher Lamp		83
Fig. 29	Electrical		85
Fig. 30	Leg Shield		89

NUMERICAL INDEX

ENGINE

YAMAHA
PARTS

Fig. 1 CRANKCASE & CYLINDER

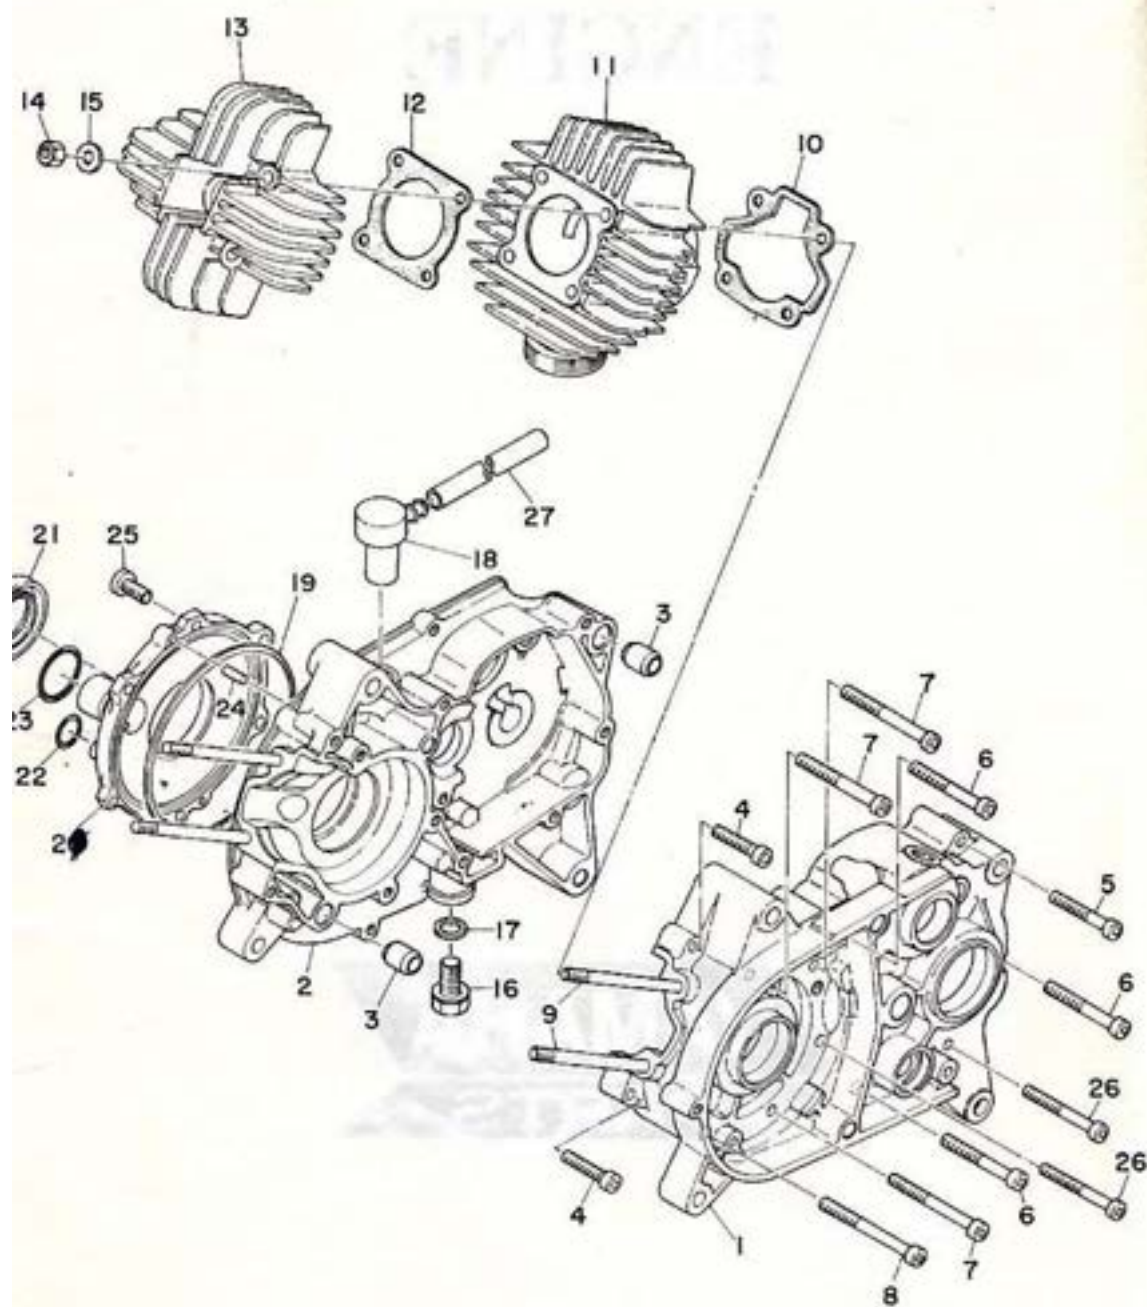

FWD


CRANKCASE - CYLINDER

Ref. No.	Part No.	Description	Q'ty		Applicable Machine No.	Remarks
			YB50	YB60		
1- 1	257-15111-01	CASE, crank left	1	1		
1- 2	257-15121-01	CASE, crank right	1	1		
1- 3	91810-05016	PIN, dowel (1.8-12-16)	2	2		
1- 4	92501-06030	SCREW, panhead	2	2		
1- 5	92501-06045	SCREW, panhead	1	1		
1- 6	92501-06050	SCREW, panhead	4	4		
1- 7	92501-06060	SCREW, panhead	4	4		
1- 8	92501-06065	SCREW, panhead	1	1		
1- 9	109-11361-00	BOLT, cylinder holding	4	4		
1-10	109-11351-00	GASKET, cylinder	1	1		
1-11	257-11311-00	CYLINDER	1			
	259-11311-00	CYLINDER		1		
1-12	102-11181-01	GASKET, cylinderhead	1			
	107-11181-01	GASKET, cylinderhead		1		
1-13	257-11111-01	HEAD, cylinder	1	1		
	259-11111-00	HEAD, cylinder		1		
1-14	126-11171-60	NUT, cylinder holding	4	4		
1-15	92901-06200	WASHER, plain	4	4		
1-16	132-15351-00	PLUG, drain	1	1		
1-17	132-15353-00	GASKET, drain plug	1	1		
1-18	120-15371-00	BREATHER	1	1		
1-19	180-13554-00	RING, rubber	1	1		
1-20	257-13551-00	COVER, valve	1	1		
1-21	93103-28012	OIL SEAL (SW-25-47-8)	1	1		

www.bratschirepuestos.com.uy



Fig. 1 CRANKCASE - CYLINDER


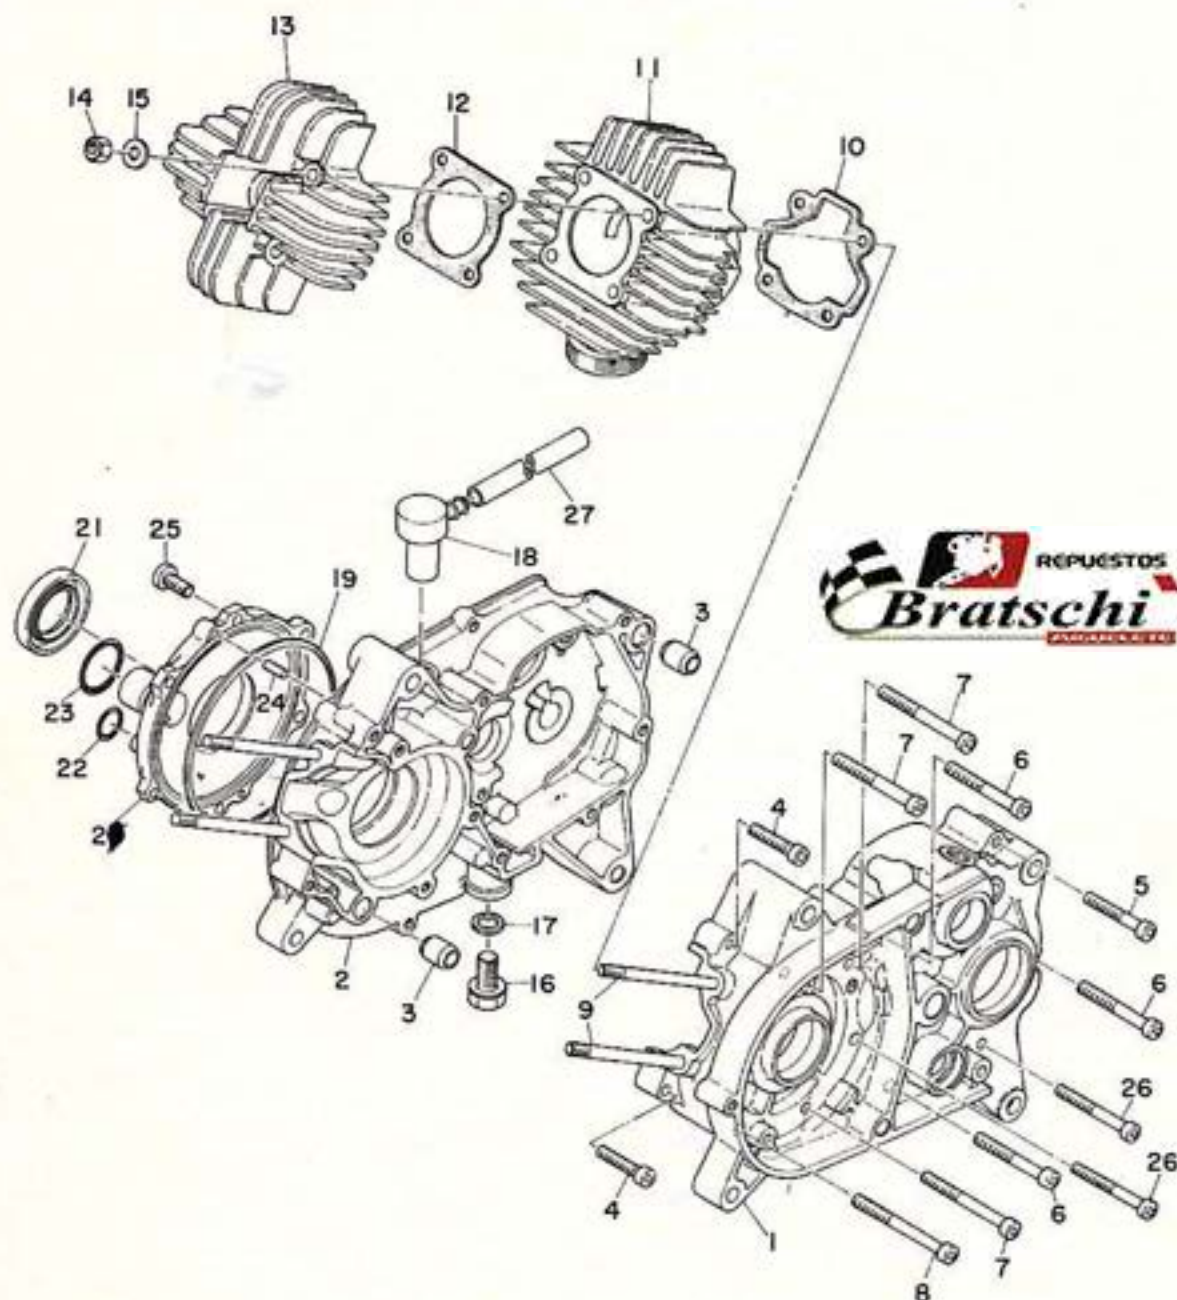


CRANKCASE - CYLINDER

Ref. No.	Part No.	Description	Q'ty		Applicable Machine No.	Remarks
			YB50	YB60		
1-22	93210-23029	O-RING (3.53-21.82)	1	1		
1-23	93210-12014	O-RING	1	1		
1-24	93604-14012	PIN, dowel	2	2		
1-25	92501-06015	SCREW, panhead	6	6		
1-26	92501-06055	SCREW, panhead	2	2		
1-27	304-15373-00	PIPE, breather	1	1		



Fig. 2 CRANKCASE COVER

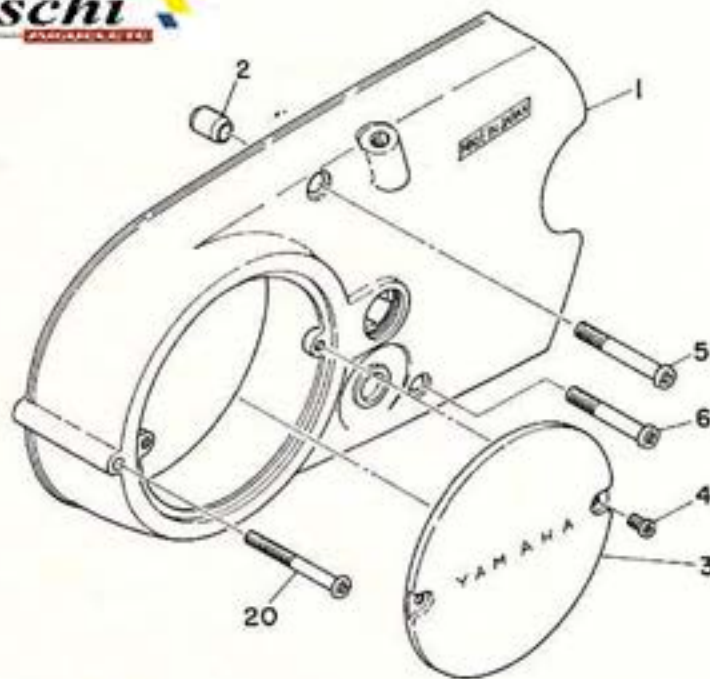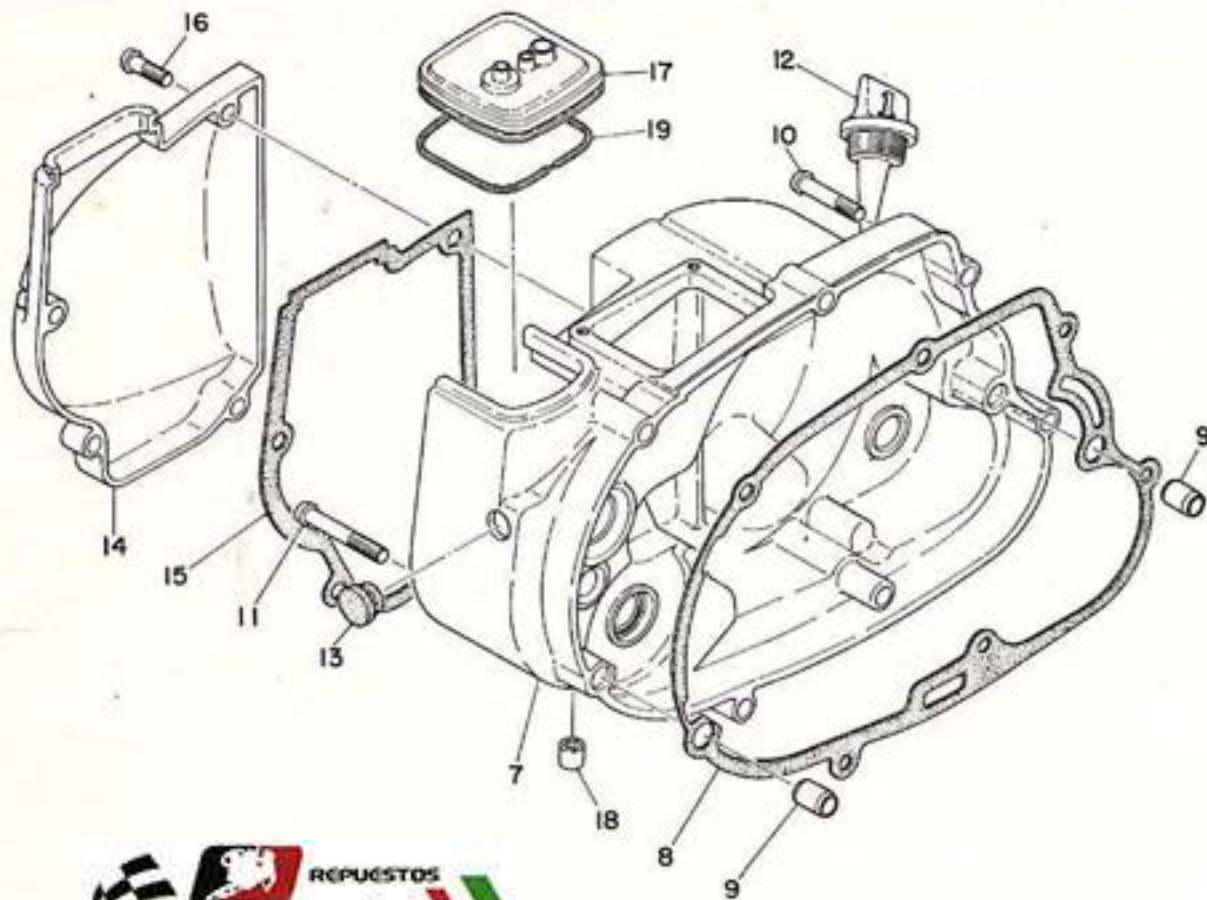


CRANKCASE COVER

Ref. No.	Part No.	Description	Q'ty		Applicable Machine No.	Remarks
			YB50	YB60		
2- 1	257-15410-01	COVER, crankcase left	1	1		
2- 2	91810-02014	PIN, dowel (8.5-10-14)	2	2		
2- 3	164-15415-00	COVER, generator	1	1		
2- 4	98501-04006	SCREW, panhead	2	2		
2- 5	92501-06045	SCREW, panhead	2	2		
2- 6	92501-06040	SCREW, panhead	1	1		
2- 7	257-15421-01	COVER, crankcase right	1	1		
2- 8	257-15451-00	GASKET, crankcase cover	1	1		
2- 9	91810-02014	PIN, dowel (8.5-10-14)	2	2		
2-10	92501-60030	SCREW, panhead	6	6		
2-11	92501-06040	SCREW, panhead	1	1		
2-12	315-15362-01	PLUG, oil level	1	1		
2-13	122-15486-00	GROMMET	1	1		
2-14	257-15413-00	COVER, carburetor	1	1		
2-15	257-15463-00	GASKET, carburetor cover	1	1		
2-16	92501-06018	SCREW, panhead	4	4		
2-17	288-14481-01	CAP. carburetor	1	1		
2-18	257-15433-00	CLEANER, drain	1	1		
2-19	288-14455-00	BAND	1	1		
2-20	92501-06050	SCREW, panhead	1	1		

www.bratschirepuestos.com.uy



Fig. 3 CRANK · PISTON

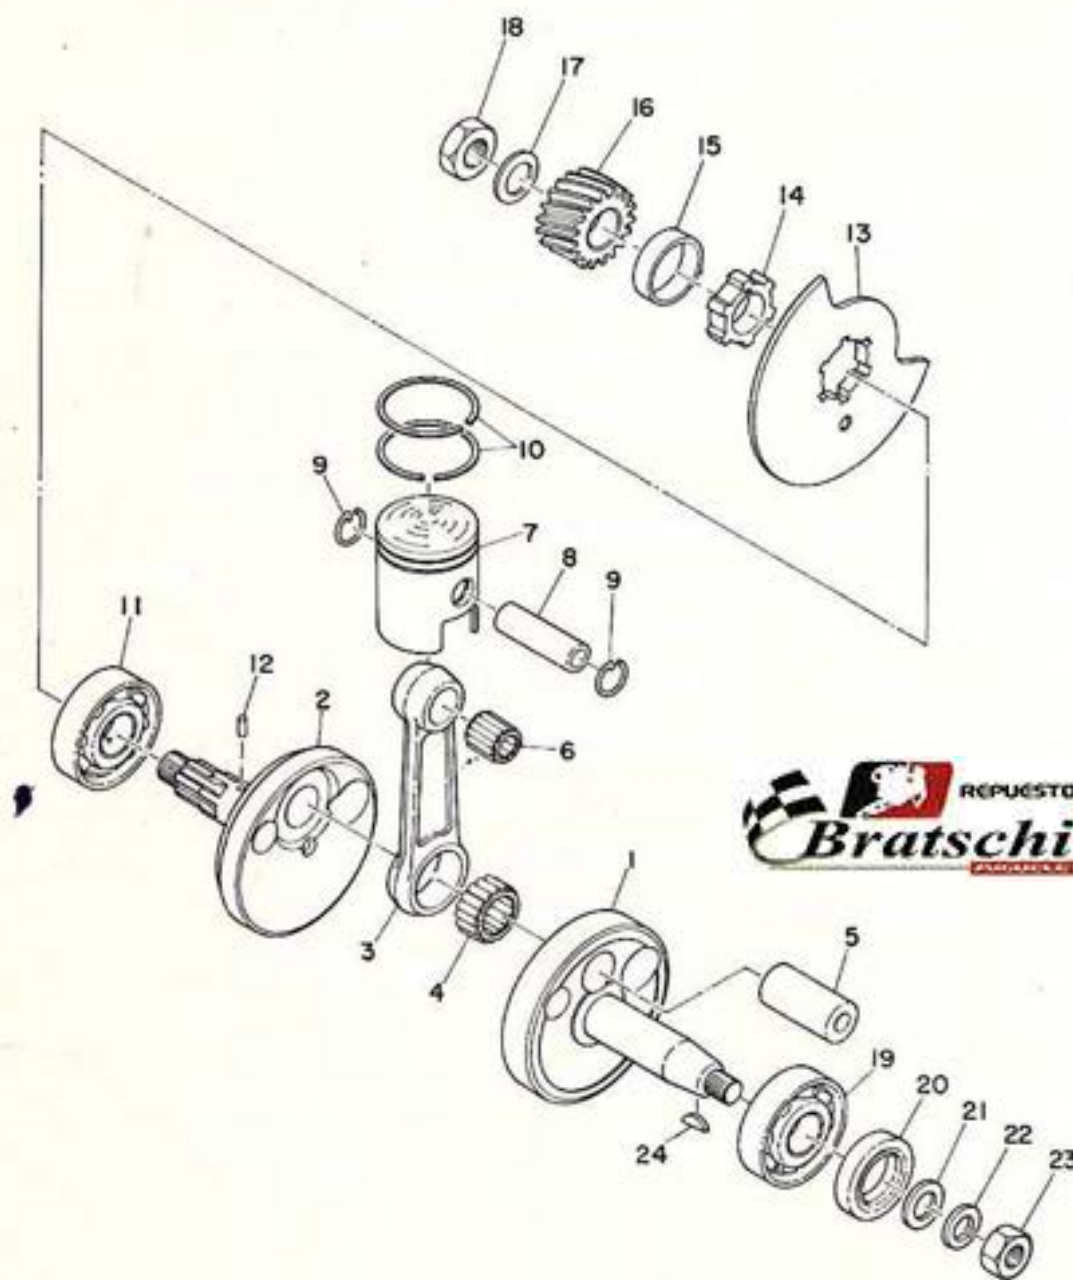


CRANK · PISTON

Ref. No.	Part No.	Description	Q'ty		Applicable Machine No.	Remarks
			YB50	YB60		
3- 0-1	257-11400-01	CRANK ASS'Y	1			
	259-11400-00	CRANK ASS'Y		1		
3- 1	257-11412-01	. CRANK, left	1			
	259-11412-00	. CRANK, left		1		
3- 2	257-11422-00	. CRANK, right	1			
	259-11422-00	. CRANK, right		1		
3- 3	126-11651-00	. ROD, connecting	1	1		
3- 4	93310-41810	. BEARING, con-rod big end ..	1	1		
3- 5	257-11681-00	. PIN, crank	1	1		
3- 6	93310-11268	BEARING, con-rod small end ..	1	1		
3- 7	109-11631-62-97	PISTON (. 97mm STD)	} U.R	1		
	109-11631-62-98	PISTON (. 98mm STD)				
	109-11635-62	PISTON (1st O.S)	1			Alternate Parts
	109-11636-62	PISTON (2nd O.S)	1			Alternate Parts
	113-11631-62-97	PISTON (. 97mm STD)	} U.R	1		
	113-11631-62-98	PISTON (. 98mm STD)				
	113-11635-62	PISTON (1st O.S)	1			Alternate Parts
	113-11630-62	PISTON (2nd O.S)	1			Alternate Parts
3- 8	102-11633-01	PIN, piston	1	1		
3- 9	132-11634-00	CLIP, piston	2	2		
3-10	260-11601-00	PISTON RING SET	1s			
	260-11601-10	PISTON RING SET (1st O.S) ...	1s			
	260-11601-20	PISTON RING SET (2nd O.S) ...	1s			
	288-11601-00	PISTON RING SET		1s		
	288-11601-10	PISTON RING SET (1st O.S) ...		1s		
	288-11601-20	PISTON RING SET (2nd O.S) ...		1s		

www.bratschirepuestos.com uy

Fig. 3 CRANK · PISTON

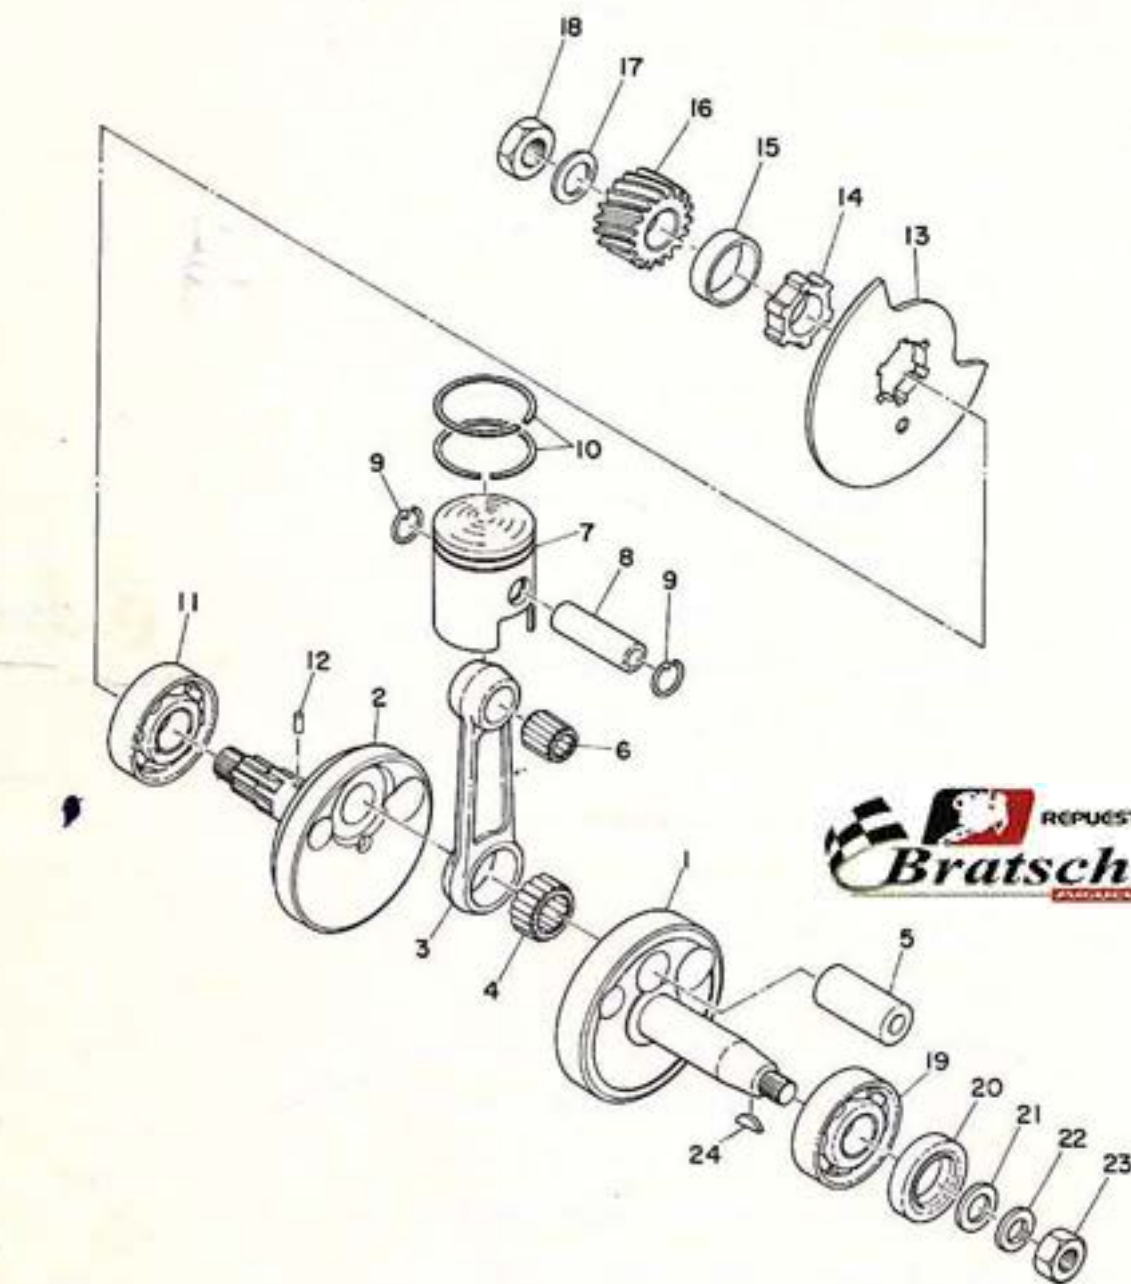

REPUESTOS
Bratschi
PISTONETTES

FWD


CRANK · PISTON

Ref. No.	Part No.	Description	Q'ty		Applicable Machine No.	Remarks
			YB50	YB60		
3-11	93306-30302	BEARING (6303C3)	1	1		
3-12	93603-08067	PIN, dowel (3-8)	1	1		
3-13	257-13512-00	VALVE	1	1		
3-14	257-13515-00	COLLAR, valve	1	1		
3-15	257-16136-00	COLLAR, distance	1	1		
3-16	257-16111-00	GEAR, primary drive	1	1		
3-17	164-16119-00	SPRING, bellevile	1	1		
3-18	137-16377-00	NUT, clutch boss	1	1		
3-19	93306-20412	BEARING <i>6204C3</i>	1	1		
3-20	93102-20009	OIL SEAL (SD-20-35-7)	1	1		
3-21	214-11557-01	WASHER	1	1		
3-22	92901-12100	WASHER, spring	1	1		
3-23	98801-12200	NUT	1	1		
3-24	146-11545-00	KEY, woodruff	1	1		

www.bratschirepuestos.com.uy



Fig. 4 CLUTCH

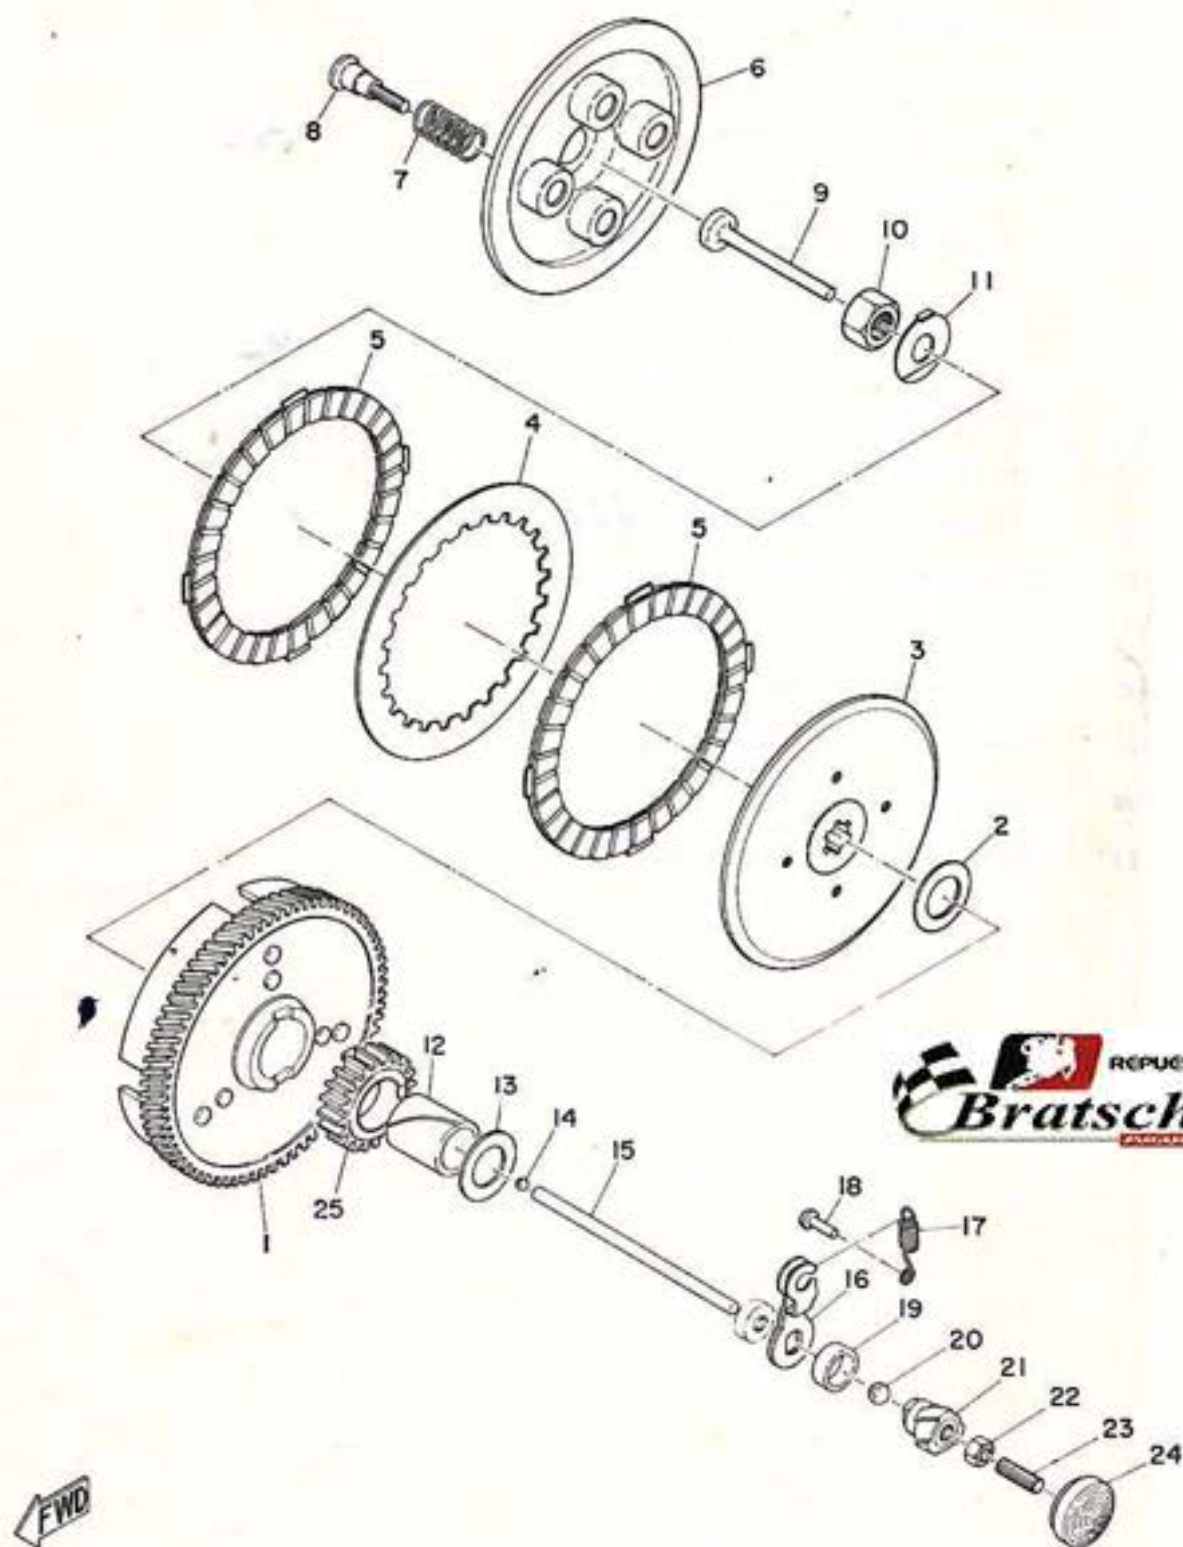


CLUTCH

Ref. No.	Part No.	Description	Q'ty		Applicable Machine No.	Remarks
			YB50	YB60		
4- 0-1	257-16301-00	CLUTCH ASS'Y	1	1		
4- 1	257-16150-00	. DRIVEN GEAR COMP.	1	1		
4- 2	122-16164-00	. PLATE, thrust	1	1		
4- 3	257-16371-00	. BOSS, clutch	1	1		
4- 4	257-16324-00	. PLATE, clutch	1	1		
4- 5	131-16321-00	. PLATE, friction	2	2		
4- 6	257-16351-00	. PLATE, pressure	1	1		
4- 7	137-16333-00	. SPRING, clutch	4	4		
4- 8	137-16337-01	. SCREW, spring	4	4		
4- 9	137-16356-00	ROD, push 1	1	1		
4-10	137-16377-00	NUT, clutch boss	1	1		
4-11	137-16378-00	WASHER, clutch boss	1	1		
4-12	257-16181-00	SPACER	1	1		
4-13	122-16164-00	PLATE, thrust	1	1		
4-14	93501-04004	BALL (1/4 inch)	1	1		
4-15	257-16357-00	ROD, push 2	1	1		
4-16	257-16342-01	LEVER, push	1	1		
4-17	257-16345-00	SPRING, lever return	1	1		
4-18	132-16346-00	FOOK, spring	1	1		
4-19	93108-15001	OIL SEAL (OSO-15-22-7)	1	1		
4-20	93503-16003	BALL (3/16 inch)	1	1		
4-21	257-16341-00	SCREW, push	1	1		
4-22	98801-06300	NUT	1	1		

www.bratschirepuestos.com.uy

Fig. 4 CLUTCH

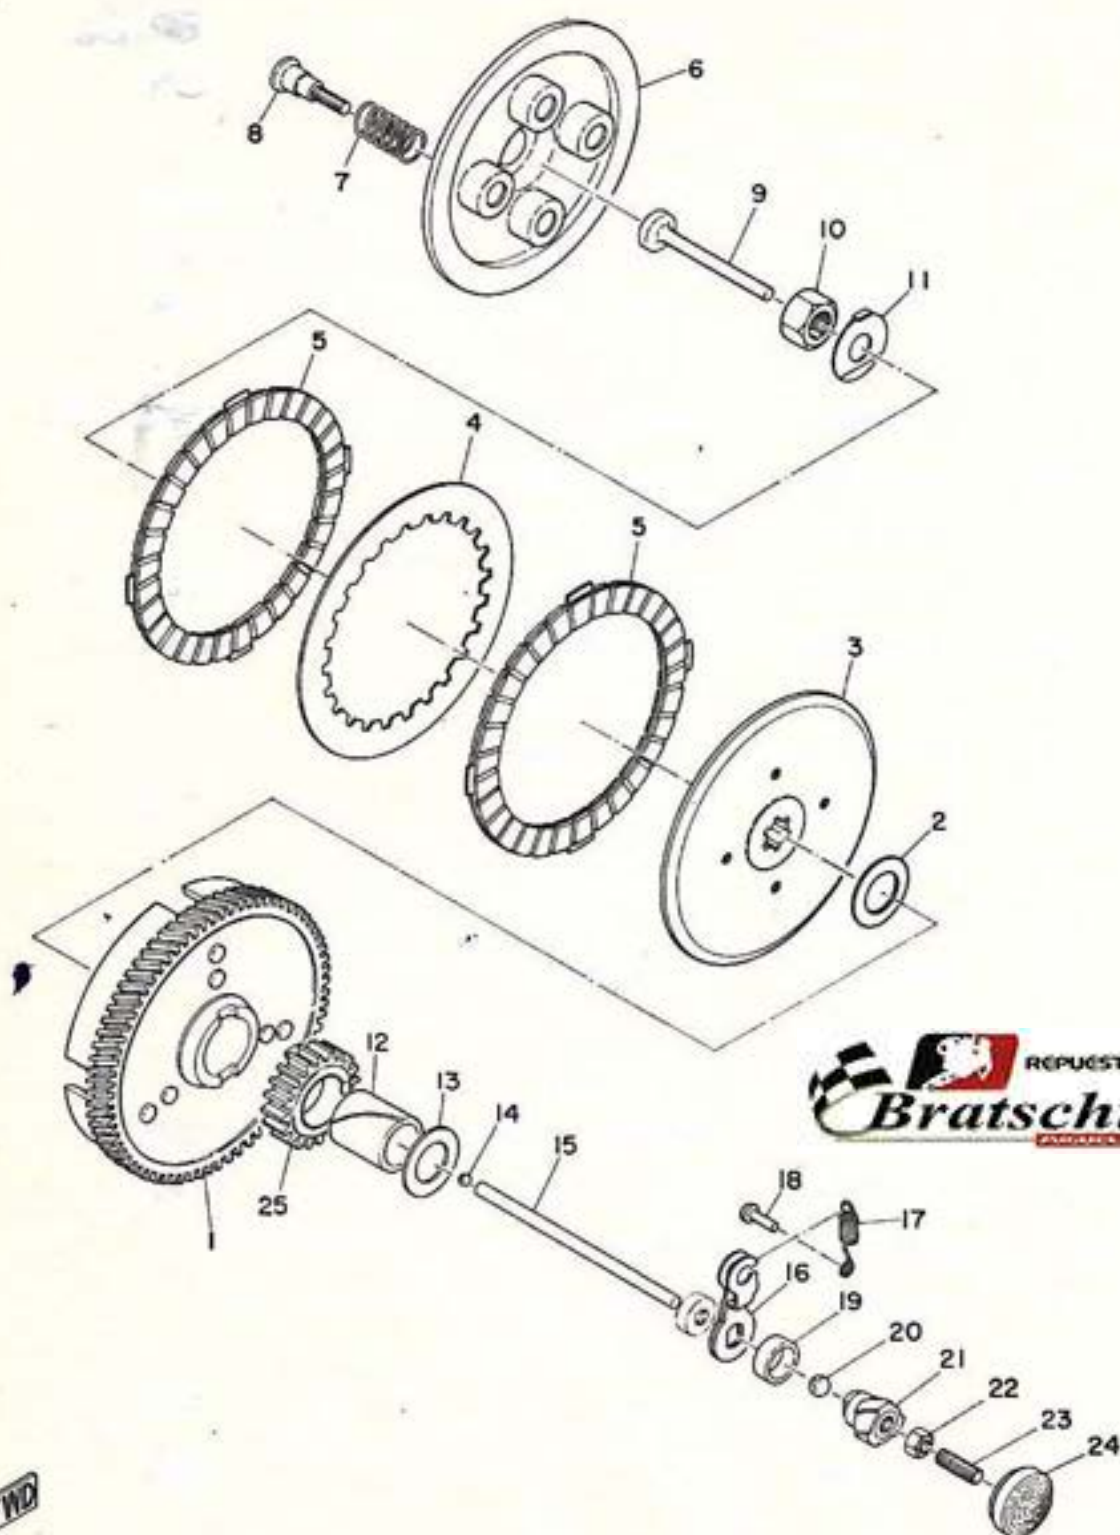


CLUTCH

Ref. No.	Part No.	Description	Q'ty		Applicable Machine No.	Remarks
			YB50	YB60		
4-23	257-16343-00	SCREW, adjusting	1			
4-24	257-15417-01	COVER, cap	1			
4-25	254-15631-00	GEAR, kick pinion	1			
4-26	257-15389-00	reten varilla embrague				



Fig. 5 TRANSMISSION

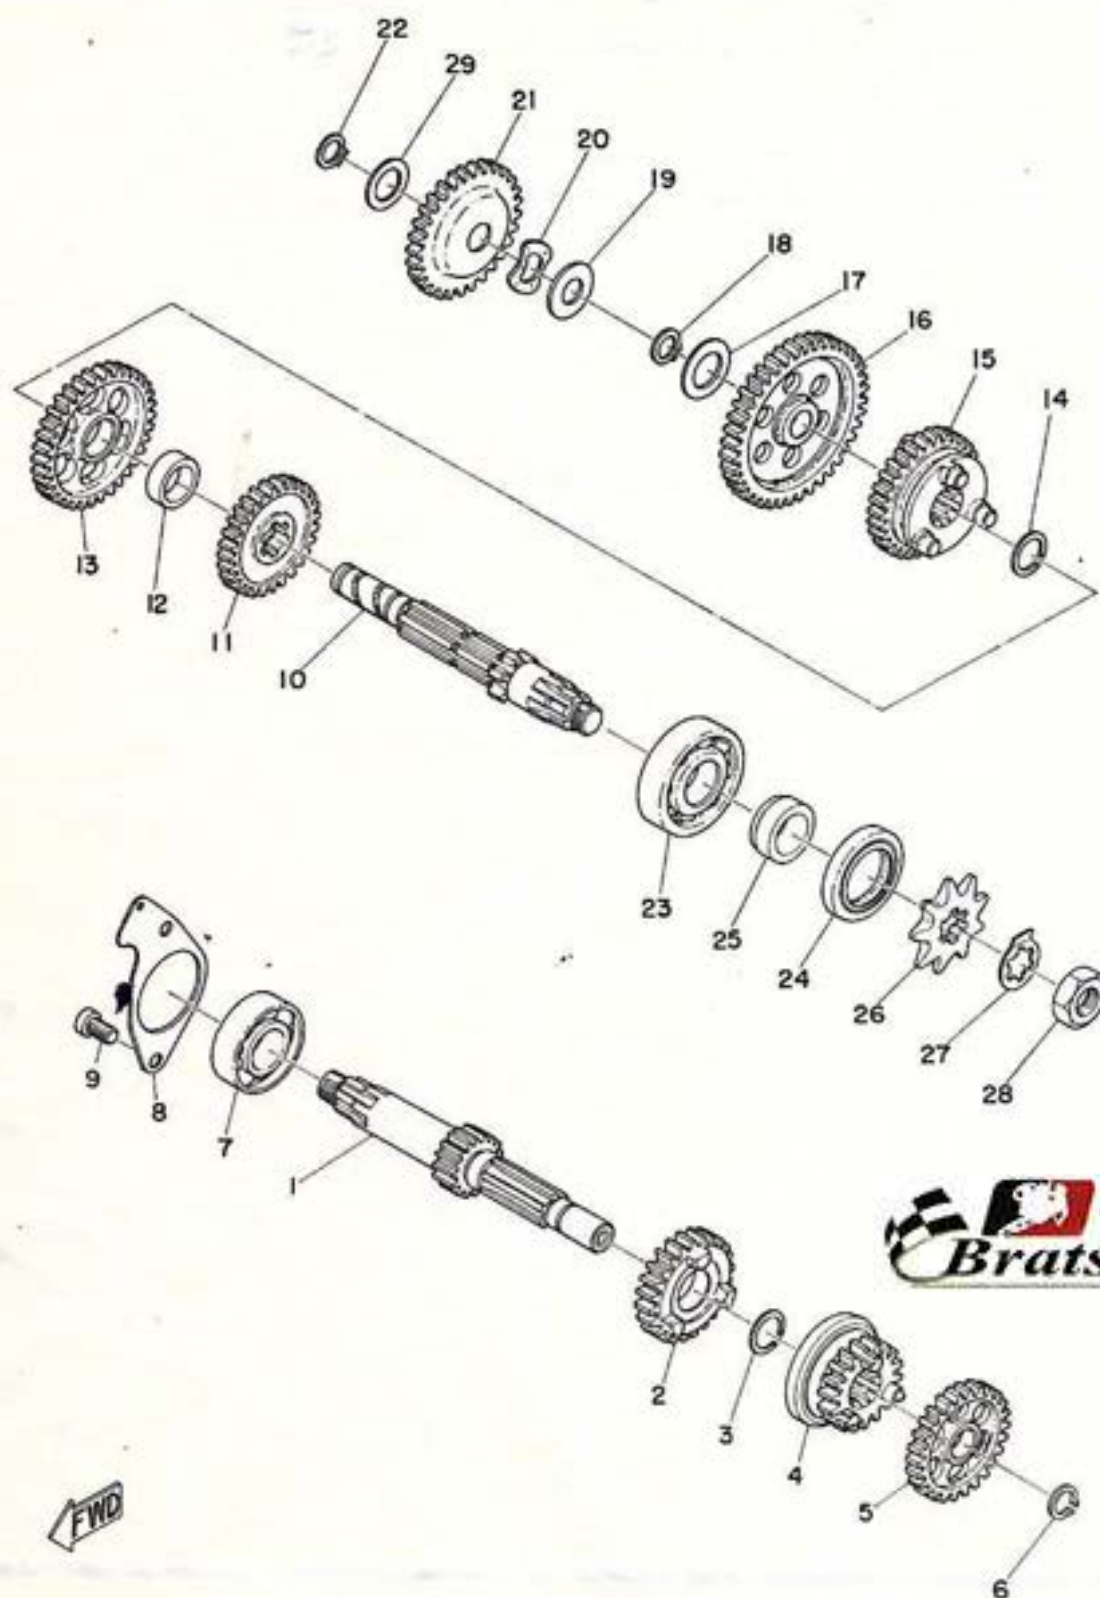


REPUESTOS
Bratschi
PASADENA, CA

TRANSMISSION

Ref. No.	Part No.	Description	Q'ty		Applicable Machine No.	Remarks
			YB50	YB60		
5- 1	257-17411-01	AXLE, main	1	1		
5- 2	257-17131-01	GEAR, 3rd pinion (23T)	1	1		
5- 3	257-17414-00	CLIP	1	1		
5- 4	257-17121-00	GEAR, 2nd pinion (18T)	1	1		
5- 5	257-17141-00	GEAR, 4th pinion	1	1		
5- 6	93410-13004	CIRCLIP	1	1		
5- 7	93306-20303	BEARING (6203)	1	1		
5- 8	257-17471-01	PLATE, bearing cover	1	1		
5- 9	92501-06012	SCREW, panhead	2	2		
5-10	257-17421-01	AXLE, drive	1	1		
5-11	257-17241-00	GEAR, 4th wheel (27T)	1	1		
5-12	257-17258-00	COLLAR, distance	1	1		
5-13	257-17221-01	GEAR, 2nd wheel (34T)	1	1		
5-14	257-17414-00	CLIP	1	1		
5-15	257-17231-00	GEAR, 3rd wheel (30T)	1	1		
5-16	257-17211-00	GEAR, 1st wheel (40T)	1	1		
5-17	257-17219-00-04	SHIM (13.2-24-0.4)	1	1	U.R. U.F.	
	257-17219-00-06	SHIM (13.2-24-0.6)				
	257-17219-00-08	SHIM (13.2-24-0.8)				
5-18	93410-13004	CIRCLIP	1	1		
5-19	201-15653-00	WASHER, thrust	1	1		
5-20	137-15643-00	WASHER, wave	1	1		
5-21	257-15651-01	GEAR, kick idle (28T)	1	1		
5-22	93410-13004	CIRCLIP	1	1		

www.bratschirepuestos.com.uy

Fig. 5 TRANSMISSION

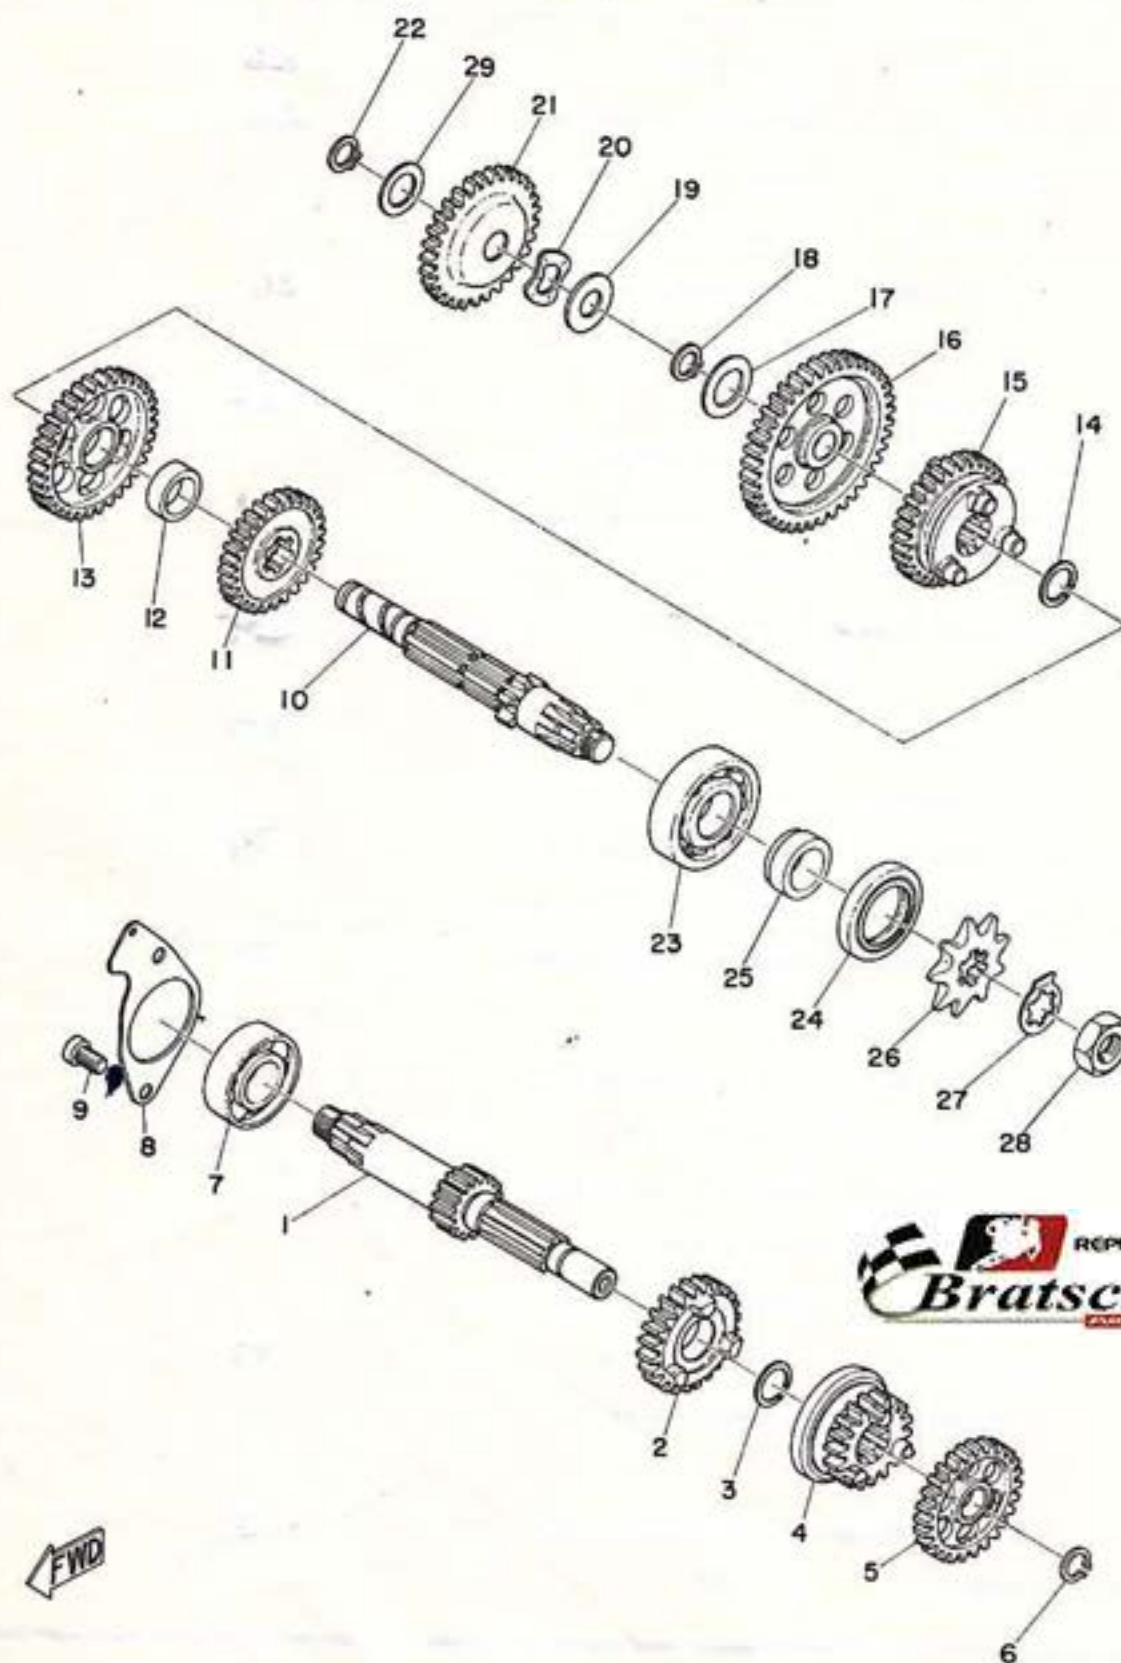


TRANSMISSION

Ref. No.	Part No.	Description	Q'ty		Applicable Machine No.	Remarks
			YB50	YB60		
5-23	93306-30305	BEARING (6303)	1	1		
5-24	93102-25017	OIL SEAL (SD-25-40-5)	1	1		
5-25	257-17462-00	COLLAR, distance	1	1		
5-26	257-17461-20	SPROCKET, drive (12T)	1	1	U.R	U.R
	257-17461-30	SPROCKET, drive (13T)				
	257-17461-40	SPROCKET, drive (14T)				
	257-17461-50	SPROCKET, drive (15T)				
5-27	257-17464-00	WASHER, lock	1	1		
5-28	257-17463-00	NUT, lock	1	1		
5-29	132-15653-00	SHIM	1	1		



Fig. 6 SHIFTER 1

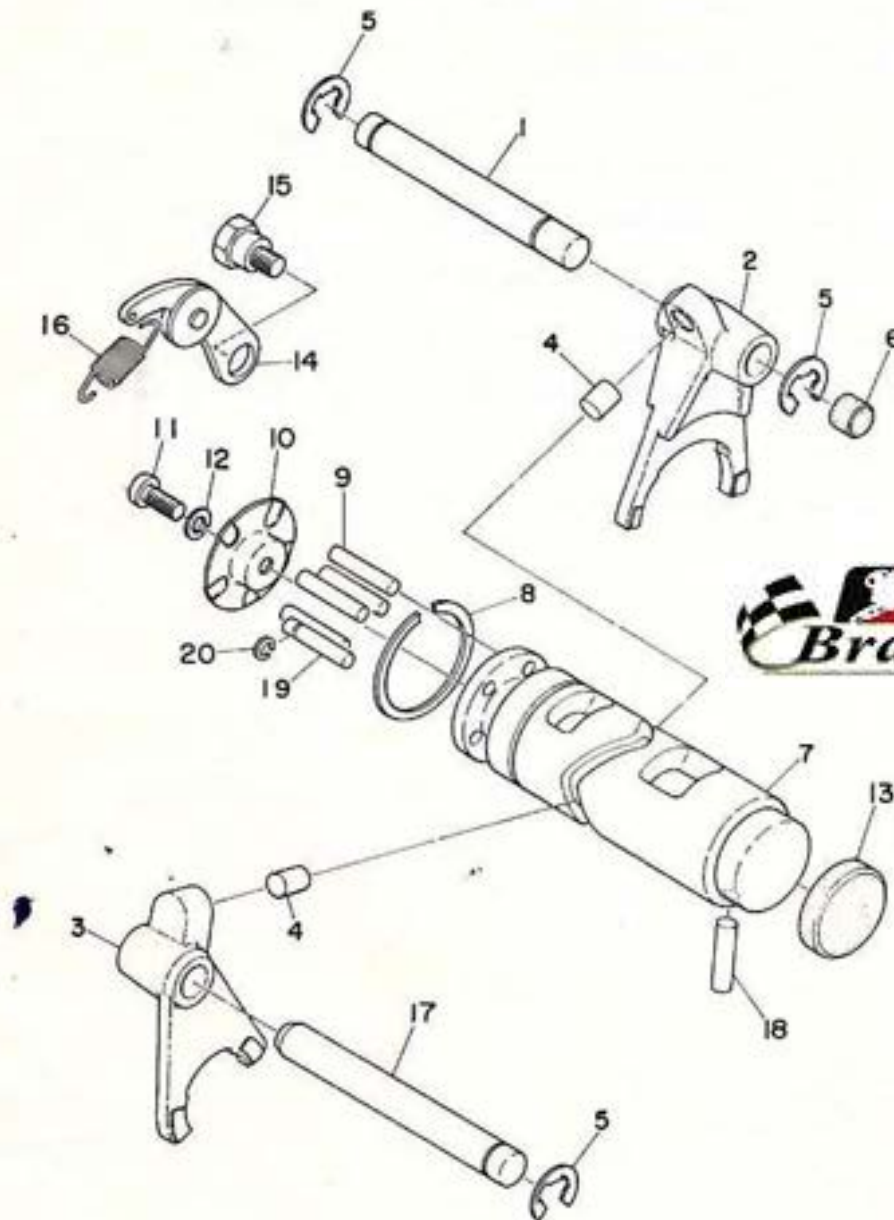


SHIFTER 1

Ref. No.	Part No.	Description	Q'ty		Applicable Machine No.	Remarks
			YB50	YB60		
6- 1	257-18534-00	BAR, shift fork guide	1	1		
6- 2	257-18511-01	FORK, shift 1	1	1		
6- 3	257-18512-01	FORK, shift 2	1	1		
6- 4	257-18552-00	PIN, cam follower	2	2		
6- 5	93430-08006	CIRCLIP	3	3		
6- 6	150-18328-00	PLUG, blind	1	1		
6- 7	257-18541-61	CAM, shift	1	1		
6- 8	93440-32017	CIRCLIP	1	1		
6- 9	93604-22050	PIN, dowel	4	4		
6-10	164-18561-00	PLATE, side	1	1		
6-11	98501-05012	SCREW, panhead	1	1		
6-12	92901-05100	WASHER, spring	1	1		
6-13	257-18589-00	PLUG, blind	1	1		
6-14	296-18140-02	STOPPER LEVER ASS'Y	1	1		
6-15	132-18177-00	BOLT, stopper	1	1		
6-16	132-18143-00	SPRING, stopper	1	1		
6-17	257-18531-00	BAR, shift fork guide	1	1		
6-18	93605-20043	PIN, dowel	1	1		
6-19	174-18544-00	PIN, dowel	1	1		
6-20	93430-03014	CLIP	1	1		

www.bratschirepuestos.com.uy



Fig. 7 SHIFTER 2

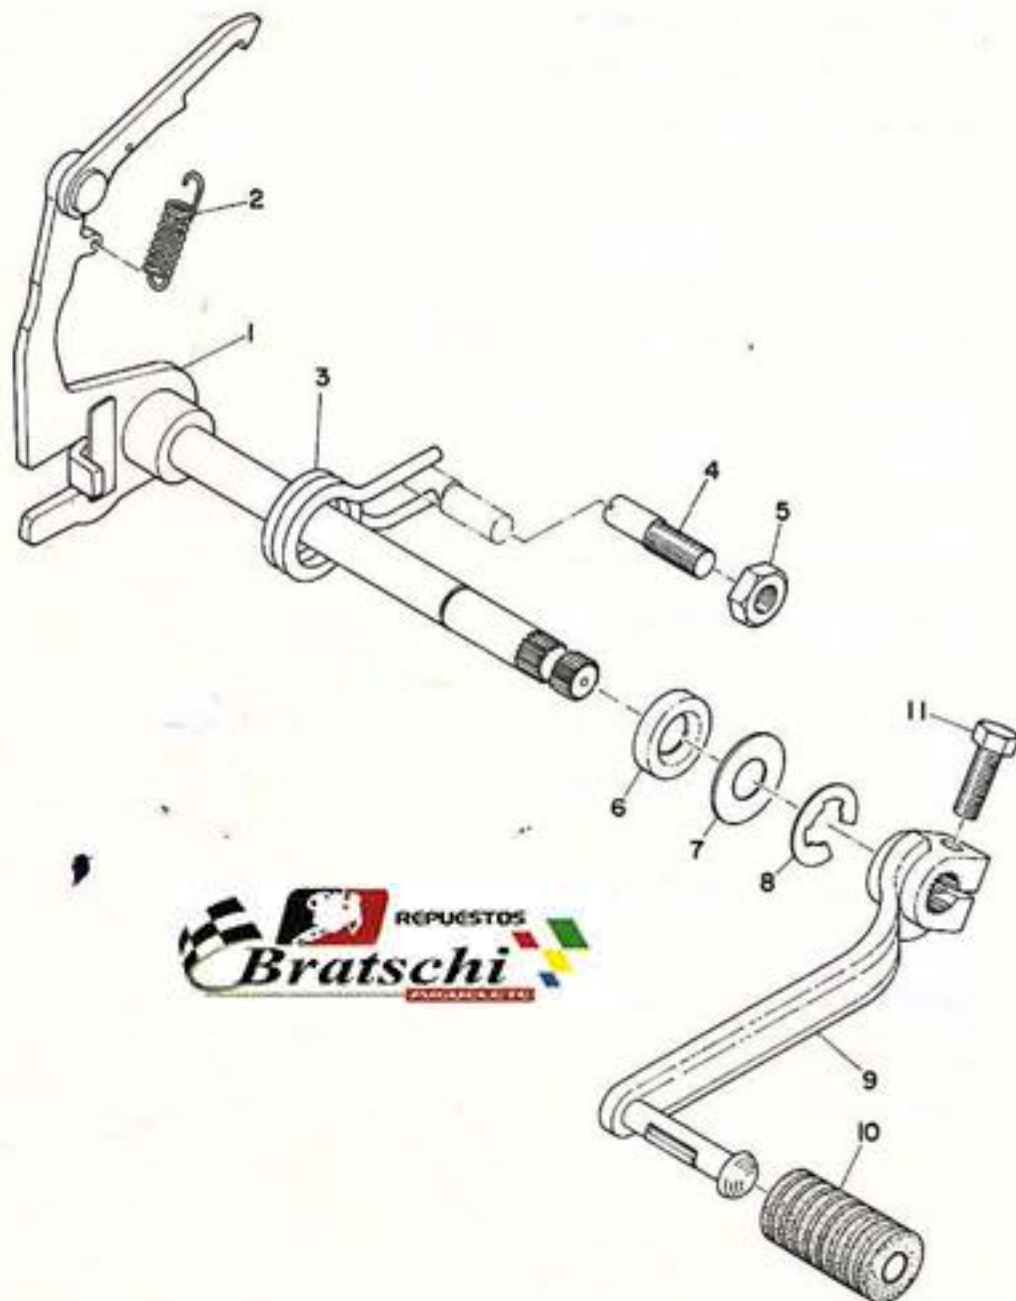


SHIFTER 2

Ref. No.	Part No.	Description	Q'ty		Applicable Machine No.	Remarks
			YB50	YB60		
7- 1	257-18101-01	CHANGE LEVER ASS'Y	1	1		
7- 2	132-18123-00	SPRING, shift arm	1	1		
7- 3	132-18124-00	SPRING, shaft return	1	1		
7- 4	132-18133-00	SCREW, adjusting	1	1		
7- 5	98801-08100	NUT	1	1		
7- 6	93101-12004	OIL SEAL (S-12-22-5)	1	1		
7- 7	132-18137-00	WASHER, change axle	1	1		
7- 8	93430-10016	CIRCLIP	1	1		
7- 9	257-18111-00	PEDAL, change	1	1		
7-10	132-18113-01	COVER, change pedal	1	1		
7-11	91201-06020	BOLT	1	1		

www.bratschirepuestos.com.u



Fig. 8 KICK STARTER

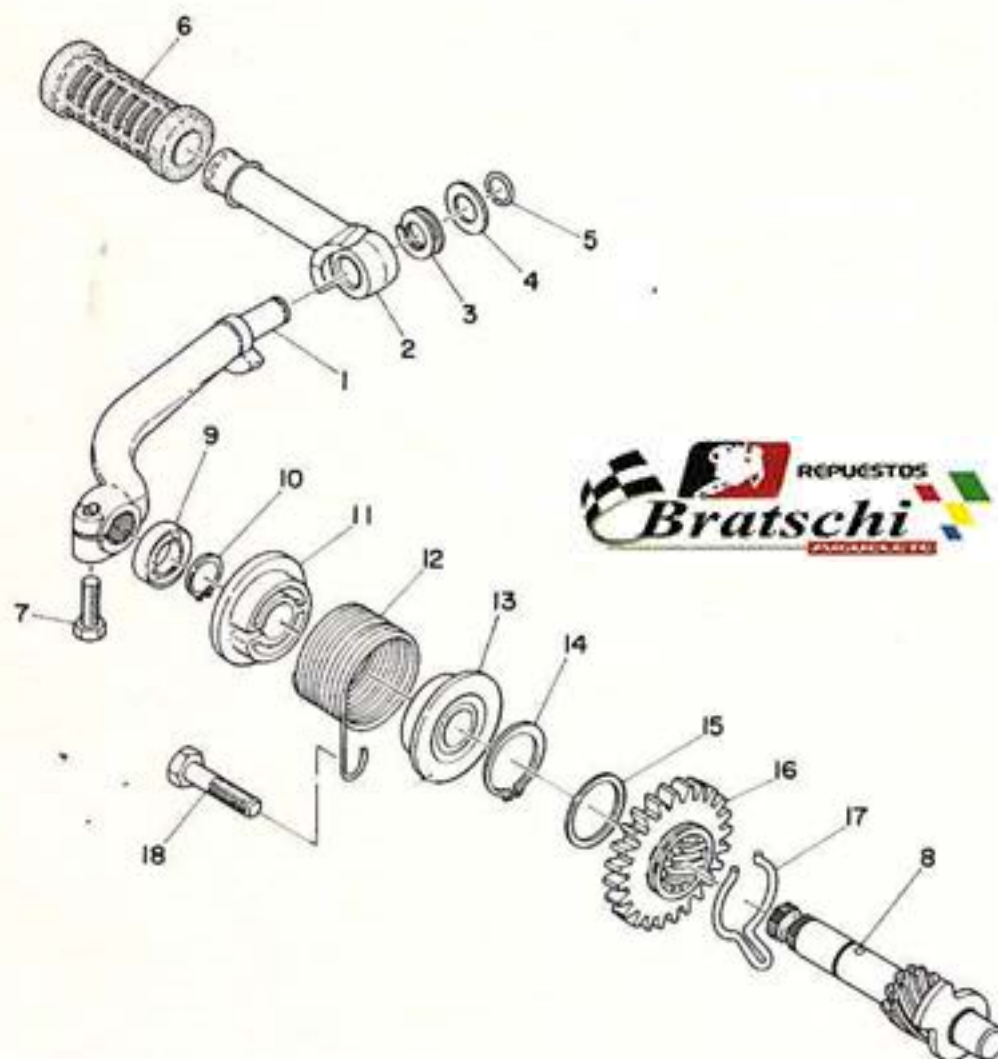


KICK STARTER

Ref. No.	Part No.	Description	Q'ty		Applicable Machine No.	Remarks
			YB50	YB60		
8- 0-1	357-15610-00	KICK CRANK ASS'Y	1	1		
8- 1	357-15611-00	. CRANK, kick	1	1		
8- 2	122-15612-02	. LEVER, kick	1	1		
8- 3	132-15625-01	. SPRING, kick crank	1	1		
8- 4	132-15616-01	. WASHER, kick lever	1	1		
8- 5	132-15617-00	. CLIP, kick lever	1	1		
8- 6	156-15618-01	COVER, kick lever	1	1		
8- 7	91101-06020	BOLT	1	1		
8- 8	305-15660-01 - e2	KICK AXLE ASS'Y	1	1		
8- 9	93109-15001	OIL SEAL (SDO-15-26-6)	1	1		
8-10	93410-15005	CIRCLIP	1	1		
8-11	132-15676-00	COVER, kick spring	1	1		
8-12	132-15665-00	SPRING, kick	1	1		
8-13	132-15664-00	GUIDE, kick spring	1	1		
8-14	93410-25017	CIRCLIP	1	1		
8-15	117-15644-00	SHIM (25.1-32-1)	1	1		
8-16	305-15641-00	GEAR, kick	1	1		
8-17	345-15687-00	CLIP, kick	1	1		
8-18	257-15668-00	STOPPER, kick spring	1	1		

www.bratschirepuestos.com.uy



Fig. 9 INTAKE

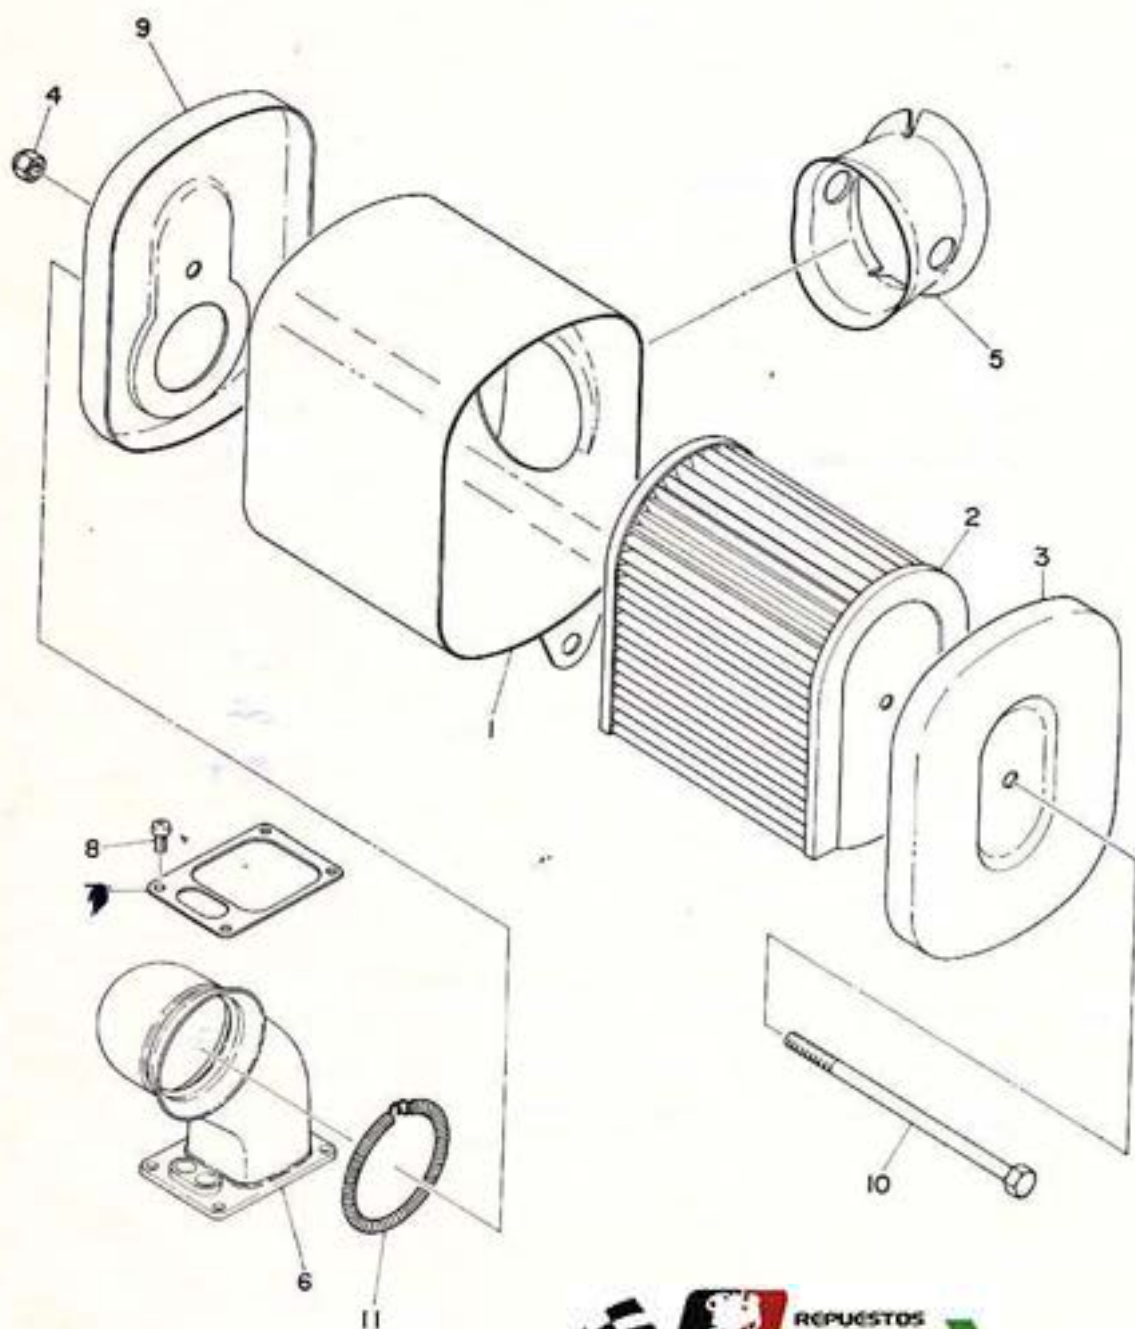


INTAKE

Ref. No.	Part No.	Description	Q'ty		Applicable Machine No.	Remarks
			YB50	YB60		
9- 1	355-14411-00-R5	CASE, air cleaner	1	1		High Sparkle Black
	355-14411-00-A4	CASE, air cleaner	1	1		High Sparkle Red
	355-14411-00-F7	CASE, air cleaner	1	1		High Sparkle Blue
9- 2	355-14451-00	ELEMENT, air cleaner	1	1		
9- 3	355-14412-00	CAP, air cleaner	1	1		
9- 4	98803-06700	NUT, crown	2	2		
9- 5	355-14454-00	JOINT, suction pipe	1	1		
9- 6	355-14453-00	JOINT, air cleaner 257-14417-00 ⁹⁵⁷⁻¹⁴⁴⁵³⁻⁰⁰	1	1		
9- 7	257-14417-00	COVER, air cleaner	1	1		
9- 8	98501-04008	SCREW, panhead	4	4		
9- 9	355-14422-00	CAP, case 2	1	1		
9-10	90115-06002	BOLT, weld	2	2		Cross Out
9-11	220-14455-00	BAND	1	1		

www.bratschirepuestos.com.uy



Fig. 10 CARBURETOR

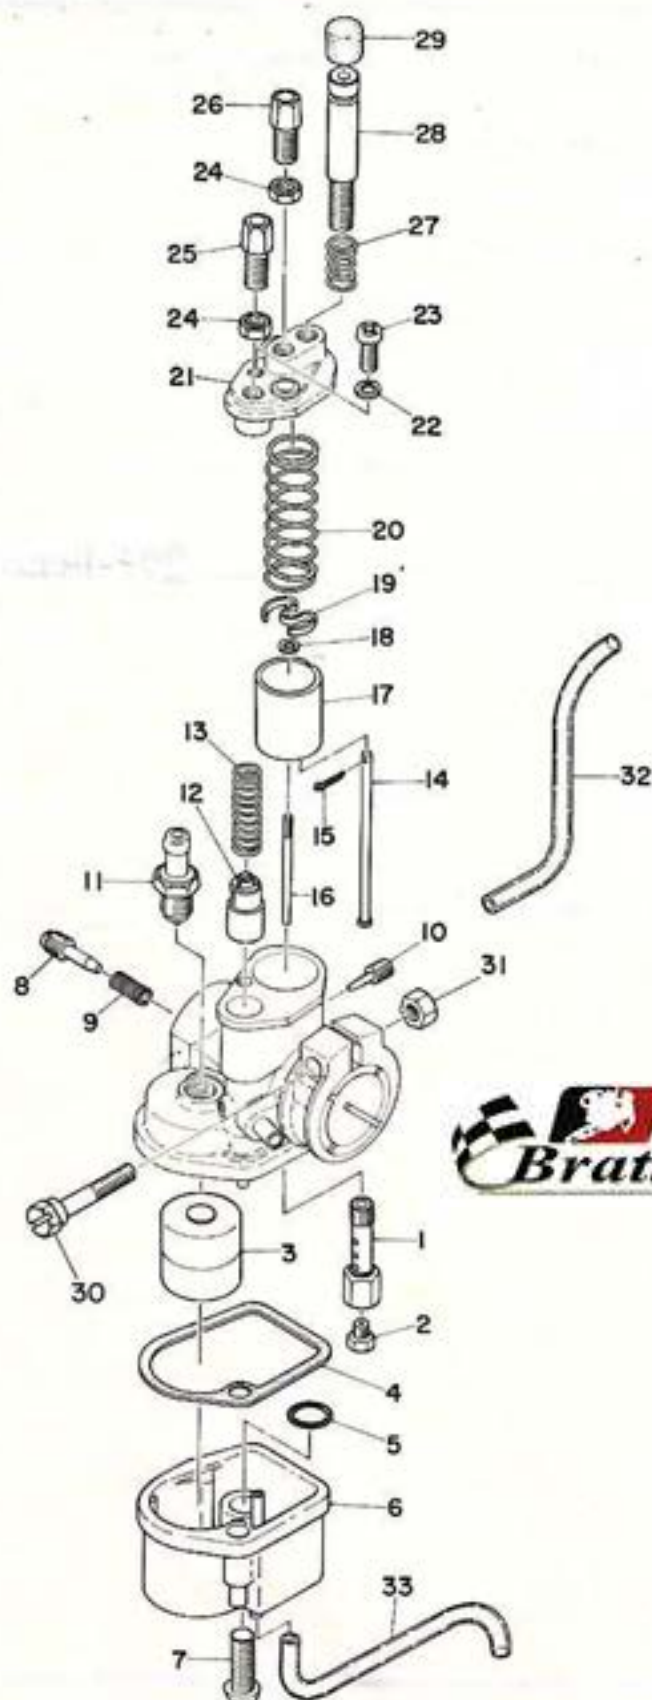


CARBURETOR

Ref. No.	Part No.	Description	Q'ty		Applicable Machine No.	Remarks
			YB50	YB60		
10- 0-1	355-14101-60	CARBURETOR ASS'Y	1	1		
10- 1	127-14141-14	. NOZZLE, main (E-2)	39	1		
10- 2	127-14143-24	. JET, main (#120)	1	1		
	127-14143-26	. JET, main (#130)	1	1		
	127-14143-28	. JET, main (#140)	1	1		
10- 3	260-14185-00	. FLOAT	1	1		
10- 4	260-14184-00	. GASKET, float chamber	1	1		
10- 5	93220-08002	. O-RING	1	1		
10- 6	260-14181-00	. BODY, float chamber	1	1		
10- 7	92501-06018	. SCREW, panhead	1	1		
10- 8	127-14123-00	. SCREW, air adjusting	1	1		
10- 9	127-14134-00	. SPRING, air adjusting	1	1		
10-10	260-14142-25	. JET, pilot (#25)	1	1		
10-11	260-14190-12	. VALVE SEAT ASS'Y (#1.2)	39	1		
10-12	127-14171-00	. PLUNGER, starter	1	1		
10-13	127-14135-00	. SPRING, plunger	1	1		
10-14	260-14114-00	. BAR, throttle	1	1		
10-15	91401-12008	. PIN, cotter	1	1		
10-16	127-14116-09	. NEEDLE (3G9-3)	1	1		
10-17	257-14112-15	. VALVE, throttle (#1.5)	1	1		
10-18	127-14137-00	. CLIP	1	1		
10-19	127-14136-00	. SEAT, spring	1	1		
10-20	260-14131-00	. SPRING, throttle valve	1	1		
10-21	260-14158-01	. TOP, mixing chamber	1	1		

www.bratschirepuestos.com.uy



Fig. 10 CARBURETOR

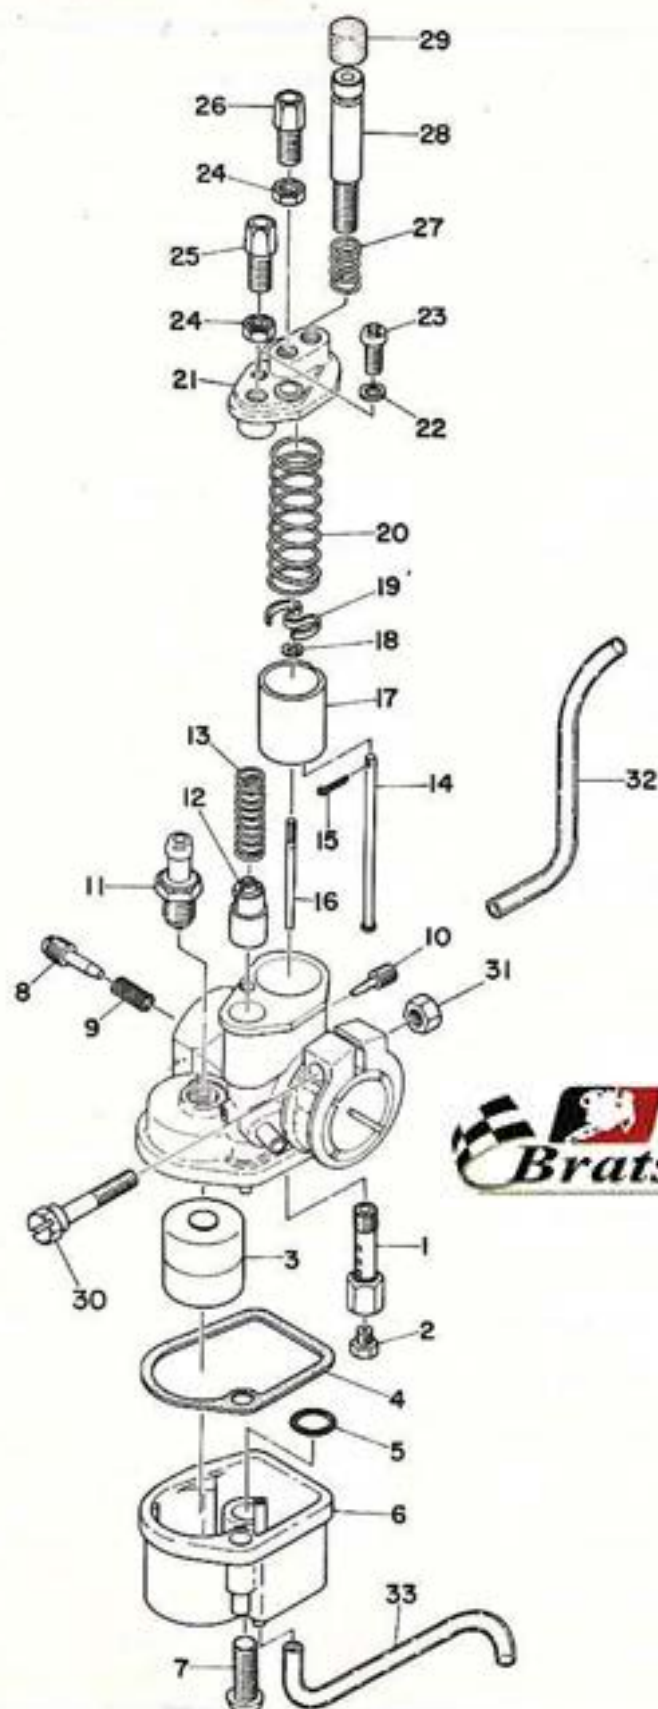


FWD

CARBURETOR

Ref. No.	Part No.	Description	Q'ty		Applicable Machine No.	Remarks
			YB50	YB60		
10-22	92901-04100	. WASHER, spring	1	1		
10-23	98501-04010	. SCREW, panhead	1	1		
10-24	127-14161-00	. NUT, wire adjusting	2	2		
10-25	127-14124-23	. SCREW, wire adjusting (23L)	1	1		
10-26	127-14124-20	. SCREW, wire adjusting (20L)	1	1		
10-27	137-14133-00	. SPRING, throttle stop	1	1		
10-28	167-14121-00	. SCREW, throttle	1	1		
10-29	167-14119-00	. CAP, throttle screw	1	1		
10-30	127-14125-01	. SCREW, body fitting	1	1		
10-31	98801-05100	. NUT	1	1		
10-32	257-14197-00	PIPE, air vent	1	1		
10-33	137-14197-00	PIPE, over flow	1	1		



Fig. 11 EXHAUST

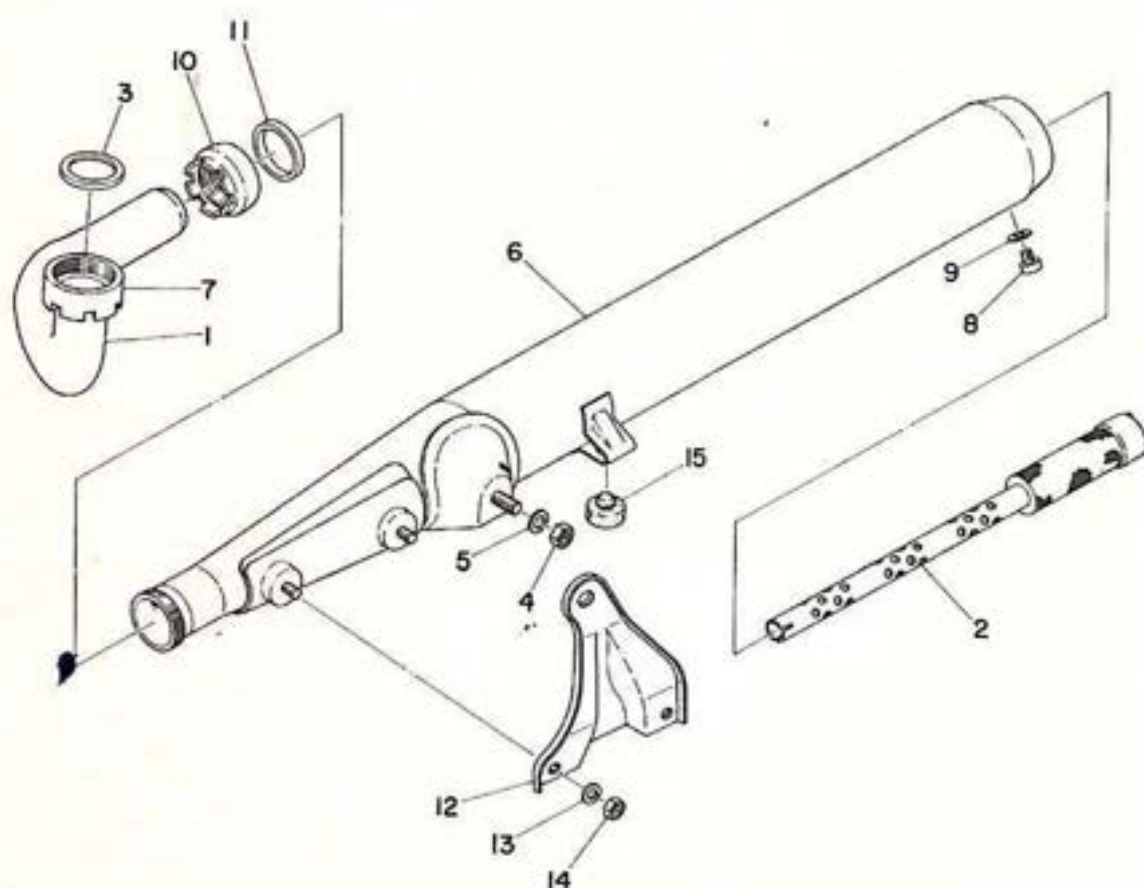


FLYWHEEL MAGNETO (MITSUBISHI)

Ref. No.	Part No.	Description	Q'ty		Applicable Machine No.	Remarks
			YB50	YB60		
13- 0-1	257-81300-21	FLYWHEEL MAGNETO ASS'Y	1	1		
13- 1	257-81350-21	. ROTOR ASS'Y	1	1		
13- 2	207-81312-20	. COIL, source	1	1		
13- 3	207-81313-20 -12	. COIL, lighting	1	1		
13- 4	110-81348-20	. SCREW, panhead (4-25)	4	4		
13- 5	92901-04100	. WASHER, spring	4	4		
13- 6	166-81332-20	. PLATE, timing	1	1		
13- 7	120-81321-20	. CONTACT BREAKER ASS'Y	1	1		
13- 8	110-81347-20	. SCREW, panhead (4-12)	1	1		
13- 9	92901-04100	. WASHER, spring	1	1		
13-10	92901-04200	. WASHER, plain	1	1		
13-11	104-81326-20	. CONDENSER	1	1		
13-12	802-81331-20	. LUBRICATOR	1	1		
13-13	110-81346-20	. SCREW, panhead (4-10)	1	1		
13-14	92901-04100	. WASHER, spring	1	1		
13-15	92901-04200	. WASHER, plain	1	1		
13-16	104-81328-20	. CLAMP, lead	1	1		
13-17	165-81145-21	. SCREW, panhead (4-8)	1	1		
13-18	92901-04100	. WASHER, spring	1	1		
13-19	98701-05015	SCREW, flathead	2	2		

www.bratschirepuestos.com.uy



Fig. 14 FLYWHEEL MAGNETO (HITACHI)

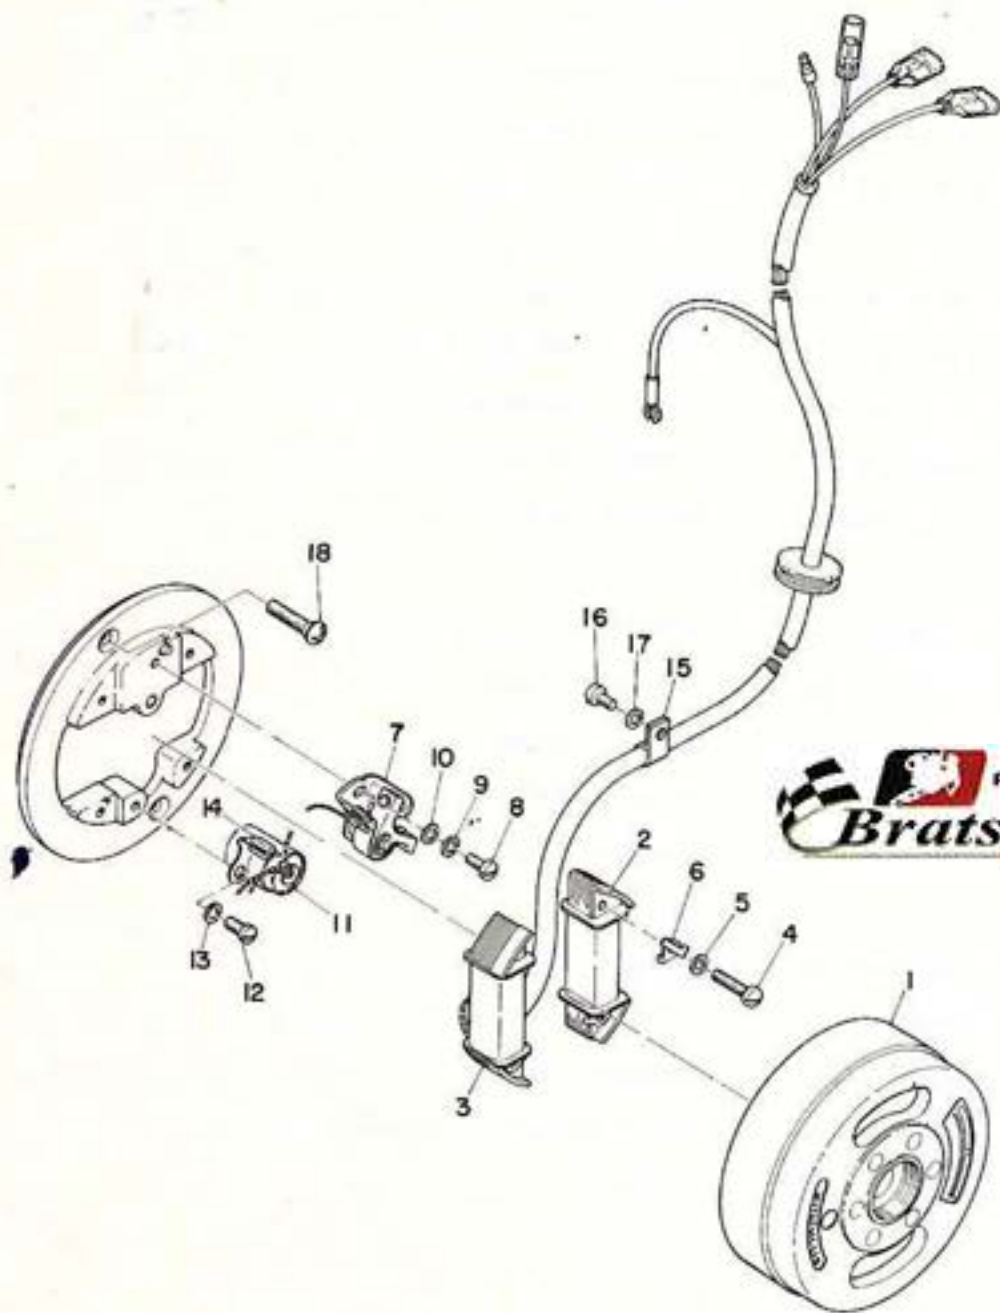

CHASSIS




FRAME · REAR FENDER

Ref. No.	Part No.	Description	Q'ty		Applicable Machine No.	Remarks
			YB50	YB60		
15- 1	355-21110-00-R5	FRAME COMP.	1	1		High Sparkle Black
	355-21110-00-A4	FRAME COMP.	1	1		High Sparkle Red
	355-21110-00-F7	FRAME COMP.	1	1		High Sparkle Blue
15- 2	355-21610-00-R5	REAR FENDER COMP.	1	1		High Sparkle Black
	355-21610-00-A4	REAR FENDER COMP.	1	1		High Sparkle Red
	355-21610-00-F7	REAR FENDER COMP.	1	1		High Sparkle Blue
15- 3	91101-06015	BOLT	2	2		
15- 4	92901-06200	WASHER, plain	2	2		
15- 5	97101-08120	BOLT	1	1		
15- 6	97101-08095	BOLT	1	1		
15- 7	98801-08100	NUT	1	1		
15- 8	92901-08100	WASHER, spring	1	1		
15- 9	355-21711-00-R5	COVER, side left	1	1		High Sparkle Black
	355-21711-00-A4	COVER, side left	1	1		High Sparkle Red
	355-21711-00-F7	COVER, side left	1	1		High Sparkle Blue
15-10	122-21724-00	KNOB, side cover left	1	1		
15-11	136-21713-00	NUT, latch clamp	1	1		
15-12	207-28100-00	TOOL ASS'Y	1s	1s		
15-13	355-21784-01	EMBLEM, side cover	1	1		
15-14	355-21398-01	HANGER, helmet	1	1		
15-15	116-21783-00	BOLT, engine mounting	1	1		
15-16	97101-08080	BOLT	1	1		
15-17	92901-08100	WASHER, spring	2	2		
15-18	97201-08015	BOLT	2	2		

www.bratschirepuestos.com.uy

Fig. 15 FRAME - REAR FENDER

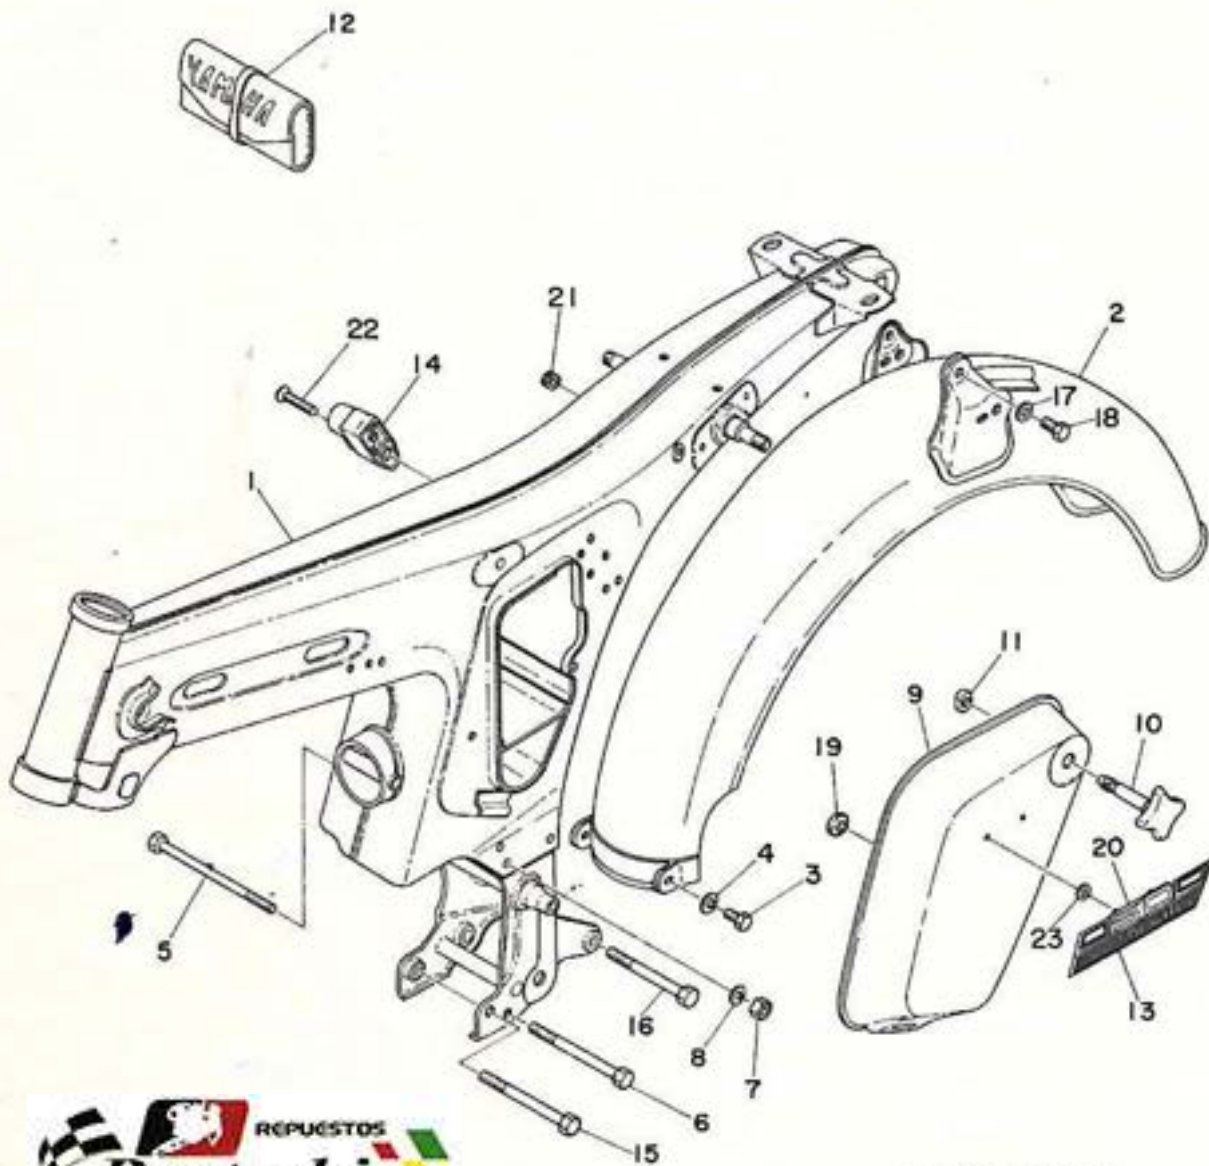


FRAME · REAR FENDER

Ref. No.	Part No.	Description	Q'ty		Applicable Machine No.	Remarks
			YB50	YB60		
15-19	141-21717-00	DAMPER, side cover	1	1		
15-20	355-21786-00	EMBLEM, side cover 50	1			
	356-21786-00	EMBLEM, side cover 60		1		
15-21	136-82598-00	GROMMET	1	1		
15-22	92701-06030	SCREW, flathead	1	1		
15-23	116-28317-01	NUT	2	2		



Fig. 16 REAR ARM · REAR CUSHION · CHAIN CASE

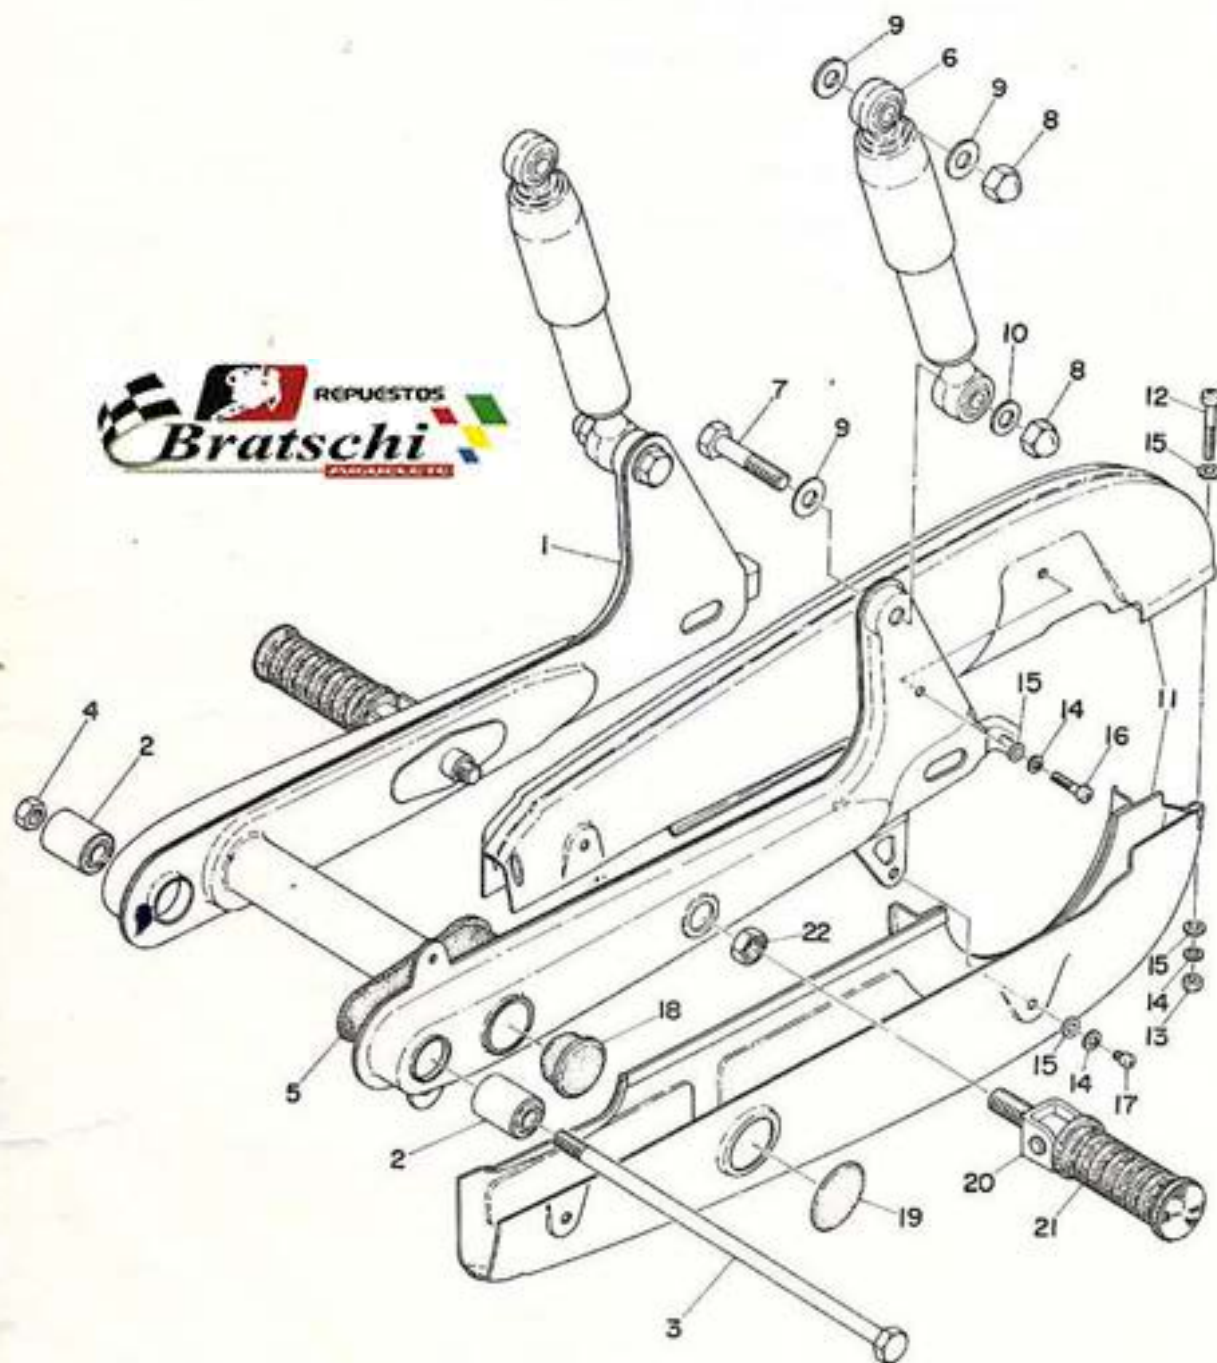


REAR ARM · REAR CUSHION · CHAIN CASE

Ref. No.	Part No.	Description	Q'ty		Applicable Machine No.	Remarks
			YB50	YB60		
16- 1	207-22110-00-R5	REAR ARM COMP.	1	1		High Sparkle Black
	207-22110-00-A4	REAR ARM COMP.	1	1		High Sparkle Red
	207-22110-00-F7	REAR ARM COMP.	1	1		High Sparkle Blue
16- 2	102-22123-00	BUSHING, rear arm	2	2		
16- 3	109-22141-00 40X-22141-00	SHAFT, pivot	1	1		
16- 4	92801-10100	NUT	1	1		
16- 5	122-22151-00	SEAL, guard	1	1		
16- 6	207-22210-00-R5	REAR CUSHION ASS'Y '.....	2	2		High Sparkle Black
	207-22210-00-A4	REAR CUSHION ASS'Y	2	2		High Sparkle Red
	207-22210-00-F7	REAR CUSHION ASS'Y	2	2		High Sparkle Blue
16- 7	296-22242-00	BOLT, rear cushion	2	2		
16- 8	92804-10700	NUT, crown	4	4		
16- 9	102-22243-00	WASHER, rear cushion (10-25-2)	6	6		
16-10	92901-10200	WASHER, plain	2	2		
16-11	207-22310-00-35	CHAIN CASE ASS'Y	1	1		
16-12	98501-05035	SCREW, panhead	1	1		
16-13	98801-05100	NUT	1	1		
16-14	92901-05100	WASHER, spring	5	5		
16-15	92901-05200	WASHER, plain	6	6		
16-16	98501-05020	SCREW, panhead	1	1		
16-17	207-22331-00	SCREW, chain case fitting ...	3	3		
16-18	180-22117-00	CAP, rear arm	1	1		
16-19	148-22315-00	CAP	1	1		
16-20	120-27430-02	REAR FOOTREST ASS'Y	2			
	120-27430-00	REAR FOOTREST ASS'Y		2		

www.bratschirepuestos.com.uy

Fig. 16 REAR ARM · REAR CUSHION · CHAIN CASE

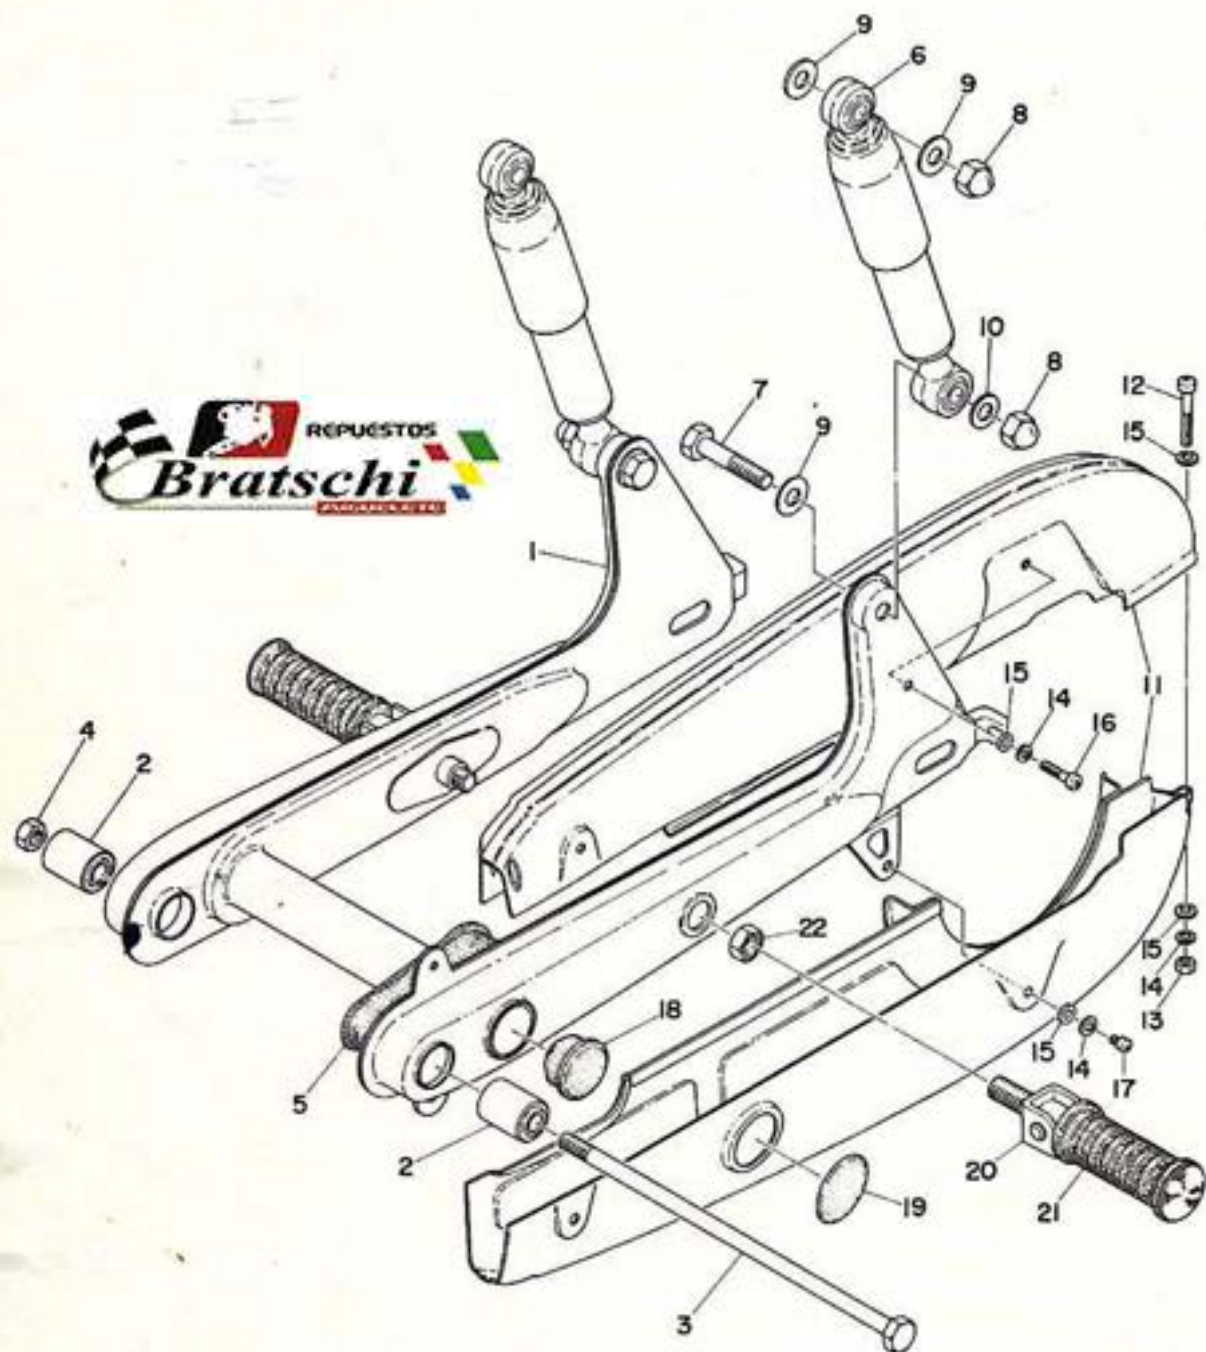


REAR ARM · REAR CUSHION · CHAIN CASE

Ref. No.	Part No.	Description	Q'ty		Applicable Machine No.	Remarks
			YB50	YB60		
16-21	120-27433-00	COVER, rear footrest	 2	2		
16-22	206-27436-00	NUT, rear footrest	 2	2		



Fig. 17 STAND · FOOTREST · BRAKE PEDAL

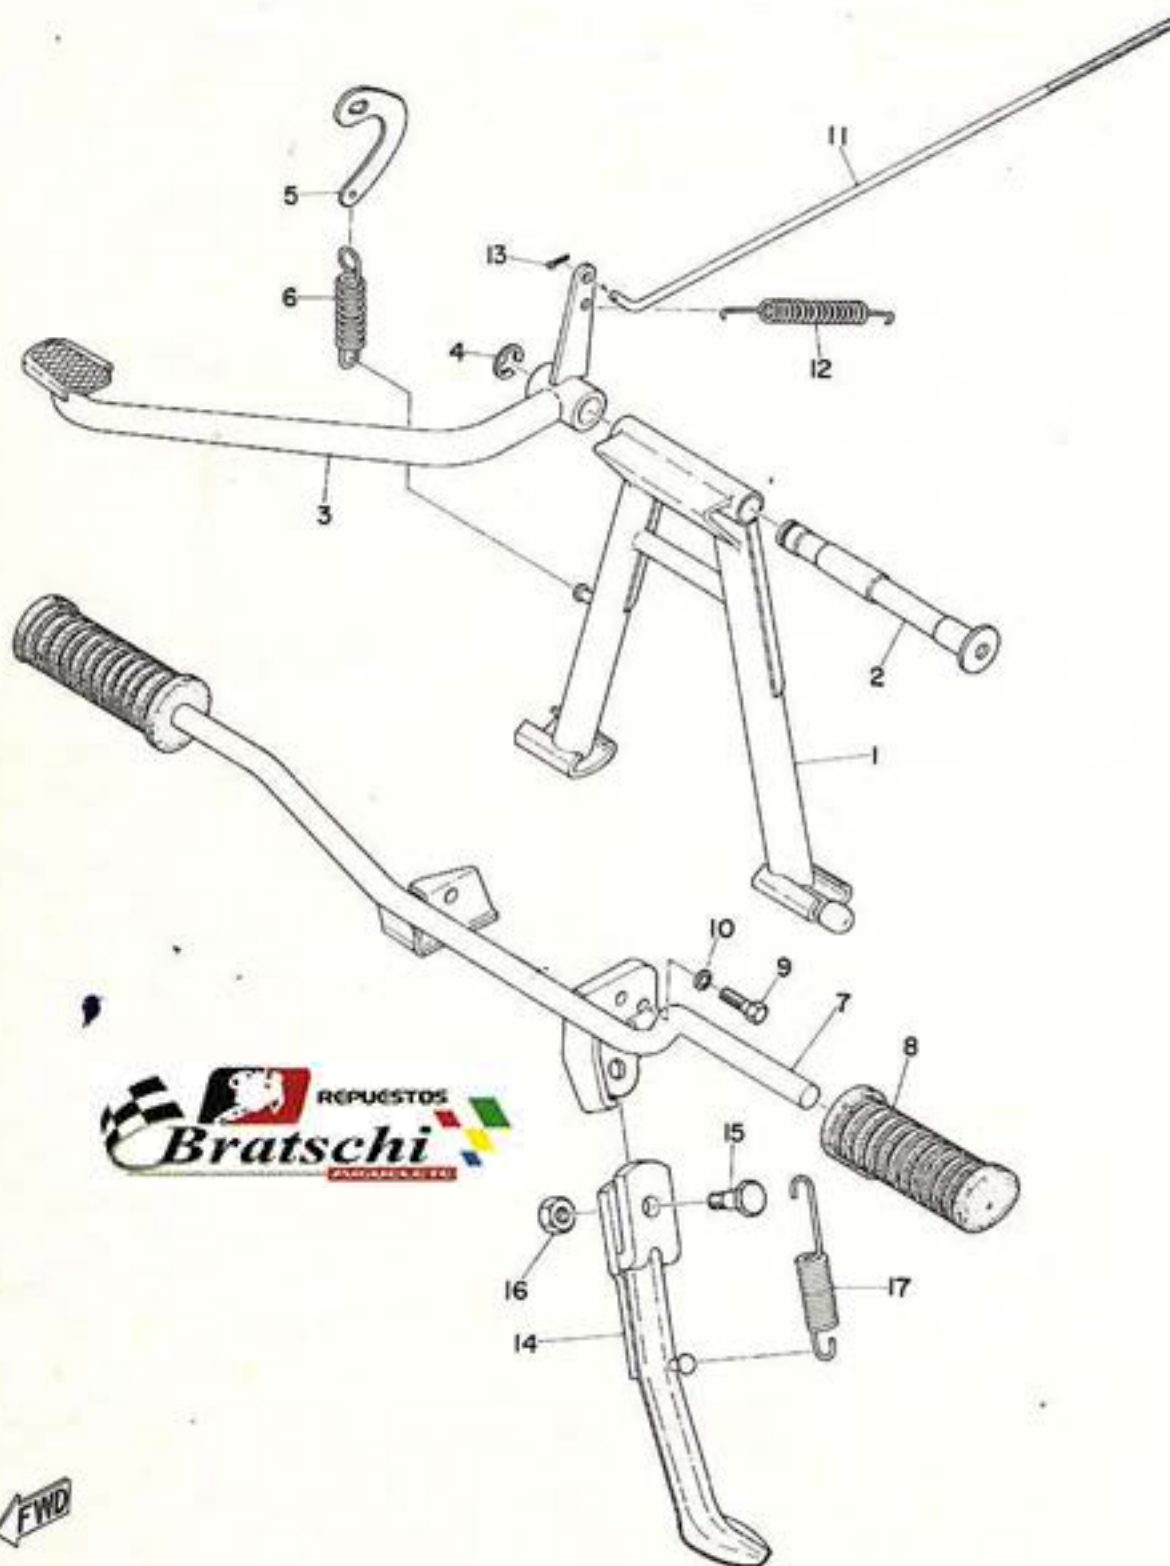

STAND · FOOTREST · BRAKE PEDAL


Ref. No.	Part No.	Description	Q'ty YB50 YB60	Applicable Machine No.	Remarks
17- 1	207-27111-00-33	STAND, main	1		
17- 2	122-27112-00	SHAFT, main stand	1		
17- 3	257-27211-00	PEDAL, brake	1		
17- 4	93430-12008	CIRCLIP (E-12)	1		
17- 5	109-27115-00	LINK, main stand	1		
17- 6	122-27116-00	SPRING, main stand	1		
17- 7	257-27411-00-33	FOOTREST	1		
17- 8	122-27413-00	COVER, footrest	2		
17- 9	97201-08020	BOLT	1		
17-10	92901-08100	WASHER, spring	1		
17-11	180-27231-01	ROD, brake	1		
17-12	109-27216-00	SPRING, pedal return	1		
17-13	91401-20012	PIN, cotter	1		
17-14	266-27311-00-33	STAND, side	1		
17-15	266-27317-00	BOLT, side stand	1		
17-16	98801-08300	NUT	1		
17-17	150-27316-00	SPRING, side stand	1		

95014-73100

www.bratschirepuestos.com.uy



Fig. 18 FRONT FORK - FRONT FENDER

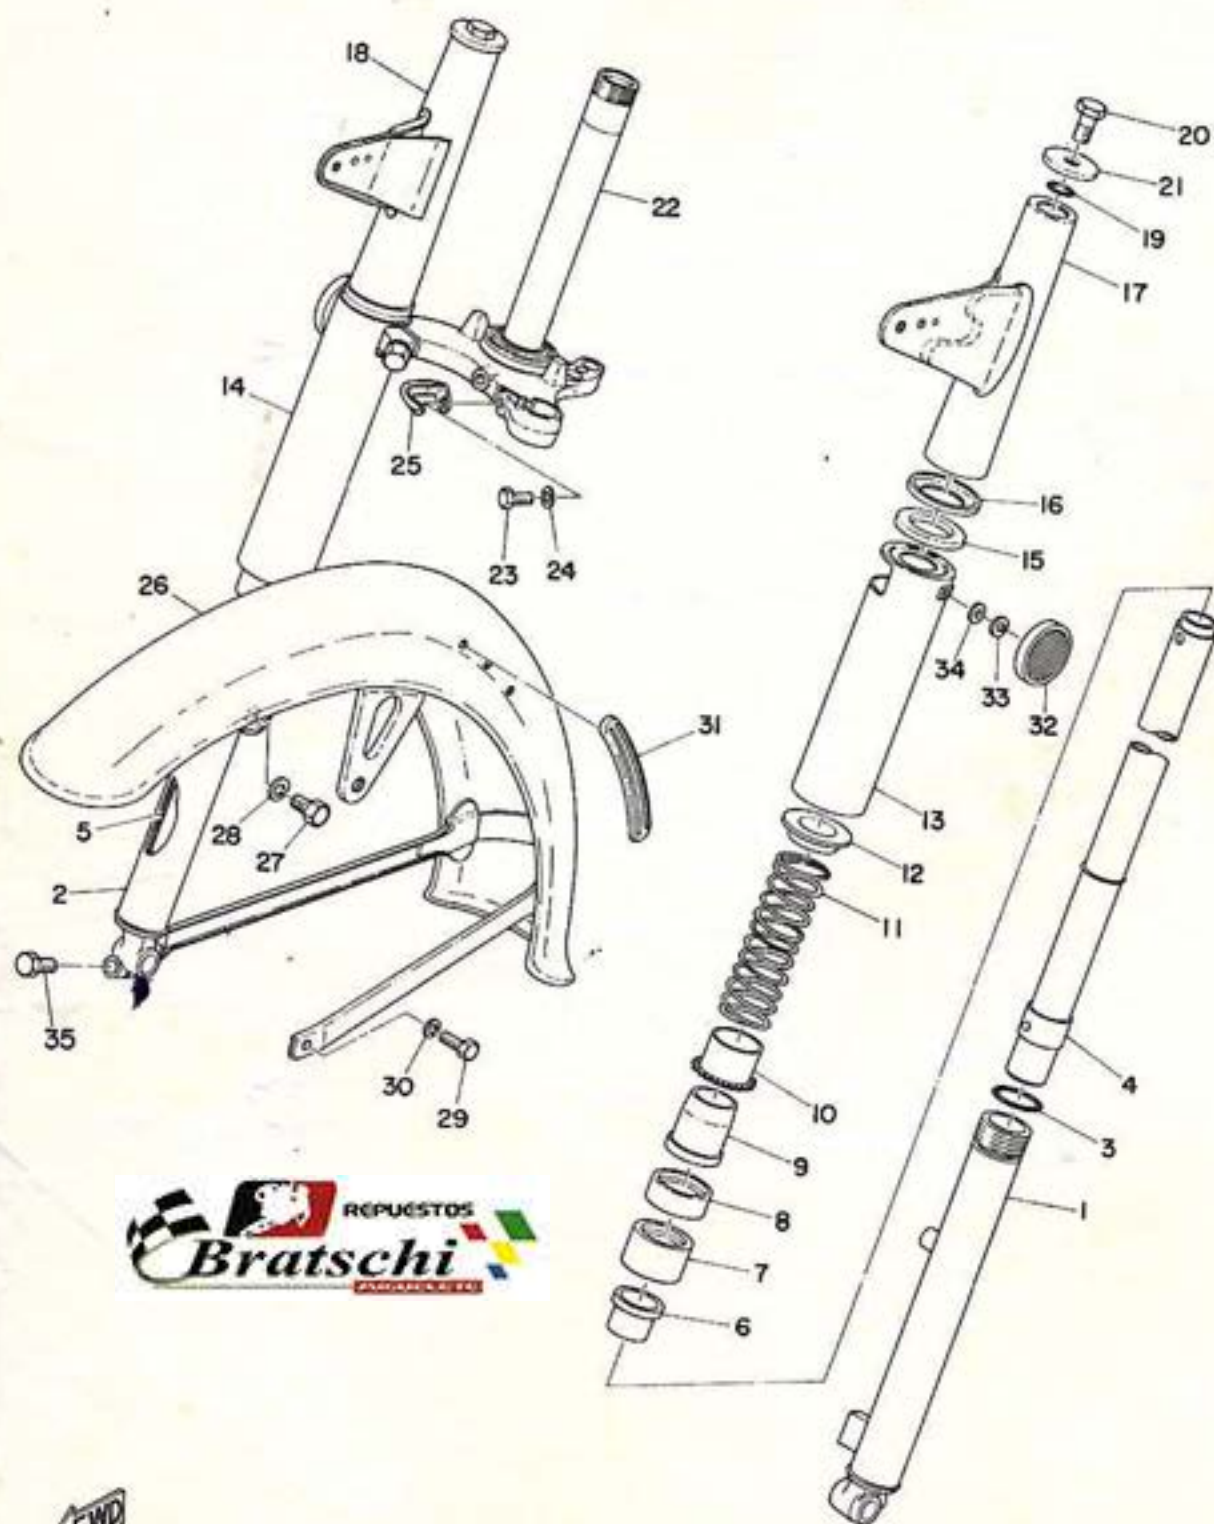

REPUESTOS
Bratschi
PARTS & ACCESSORIES


FWD

FRONT FORK · FRONT FENDER

Ref. No.	Part No.	Description	Q'ty		Applicable Machine No.	Remarks
			YB50	YB60		
18- 0-1	355-23101-90-R5	FRONT FORK ASS'Y	1	1		High Sparkle Black
	355-23101-90-A4	FRONT FORK ASS'Y	1	1		High Sparkle Red
	355-23101-90-F7	FRONT FORK ASS'Y	1	1		High Sparkle Blue
18- 1	355-23126-90-35	. TUBE, outer left	1	1		
18- 2	355-23136-90-35	. TUBE, outer right	1	1		
18- 3	207-23147-00	. O-RING	2	2		
18- 4	355-23124-90	. TUBE, inner left	1	1		
18- 5	355-23134-90	. TUBE, inner right	1	1		
18- 6	109-23125-00	. METAL, slide	2	2		
18- 7	207-23150-00	. OUTER NUT COMP.	2	2		
18- 8	109-23145-00	. . OIL SEAL	2	2		
18- 9	109-23143-00	. SEAT, spring under	2	2		
18-10	207-23117-00	. GUIDE, spring	2	2		
18-11	207-23141-00	. SPRING, upper	2	2		
18-12	207-23142-00	. SEAT, spring upper	2	2		
18-13	257-23122-90-R5	. COVER, under left	1	1		High Sparkle Black
	257-23122-90-A4	. COVER, under left	1	1		High Sparkle Red
	257-23122-90-F7	. COVER, under left	1	1		High Sparkle Blue
18-14	257-23132-90-R5	. COVER, under right	1	1		High Sparkle Black
	257-23132-90-A4	. COVER, under right	1	1		High Sparkle Red
	257-23132-90-F4	. COVER, under right	1	1		High Sparkle Blue
18-15	207-23163-00	. PACKING	2	2		
18-16	207-23116-01	. GUIDE, cover under	2	2		
18-17	355-23121-90-R5	. COVER, upper left	1	1		High Sparkle Black
	355-23121-30-A4	. COVER, upper left	1	1		High Sparkle Red

www.bratschirepuestos.com.uy

Fig. 18 FRONT FORK · FRONT FENDER

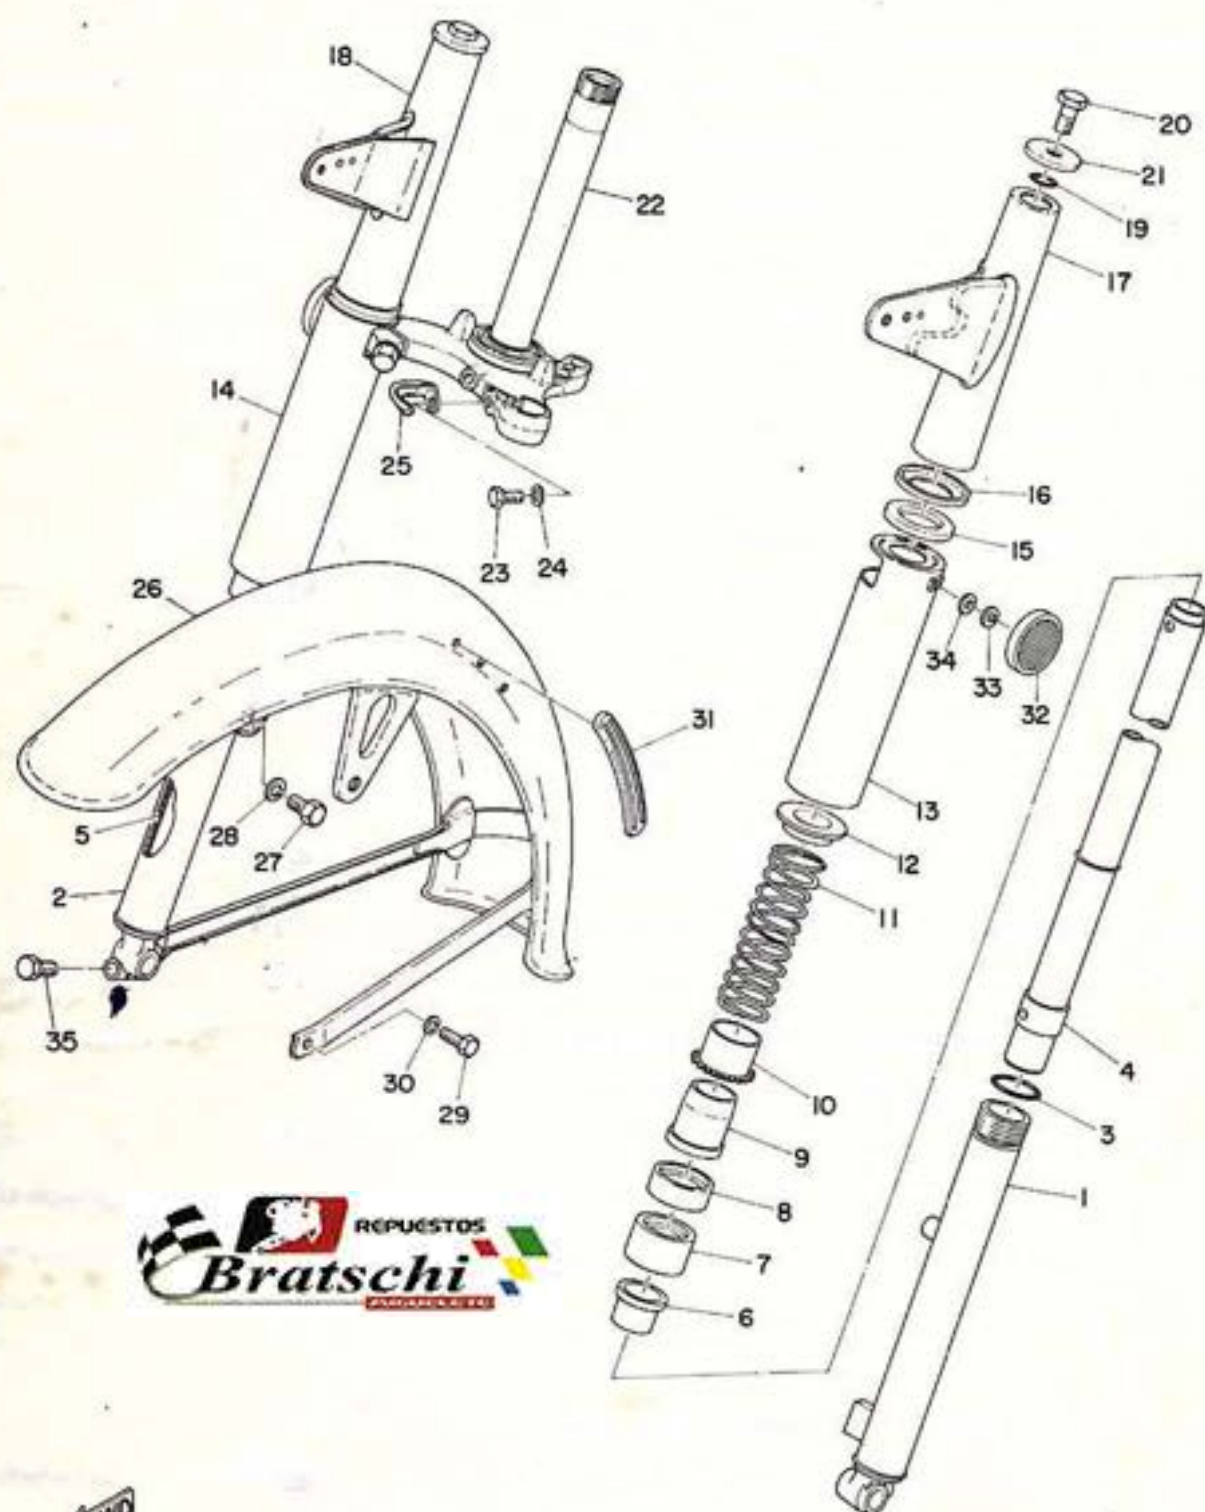


FRONT FORK · FRONT FENDER

Ref. No.	Part No.	Description	Q'ty		Applicable Machine No.	Remarks
			YB50	YB60		
	355-23121-90-F7	. COVER, upper left	1	1		High Sparkle Blue
18-18	355-23131-90-R5	. COVER, upper right	1	1		High Sparkle Black
	355-23131-90-A4	. COVER, upper right	1	1		High Sparkle Red
	355-23131-90-F7	. COVER, upper right	1	1		High Sparkle Blue
18-19	122-23114-00	. PACKING	2	2		
18-20	205-23111-40	. BOLT, cap	2	2		
18-21	207-23112-00	. WASHER, cap	2	2		
18-22	257-23340-00-33	. UNDER BRACKET COMP. ...	1	1		
18-23	122-23346-01	. BOLT, under bracket	2	2		
18-24	92901-10100	. WASHER, spring	2	2		
18-25	260-23318-40	. HOLDER, wire	1	1		
18-26	355-21510-00-35	FRONT FENDER COMP.	1			
18-27	97201-08012	BOLT	2	2		
18-28	92901-08100	WASHER, spring	2	2		
18-29	91201-06012	BOLT	2	2		
18-30	92901-06100	WASHER, spring	2	2		
18-31	122-21517-00	PAD, wire	1	1		
18-32	256-85111-10	REFLECTOR 1	2	2		
18-33	92901-05100	WASHER, spring	2	2		
18-34	92901-05200	WASHER, plain	2	2		
18-35	122-23128-00	BOLT	1	1		

www.bratschirepuestos.com.uy



Fig. 19 STEERING

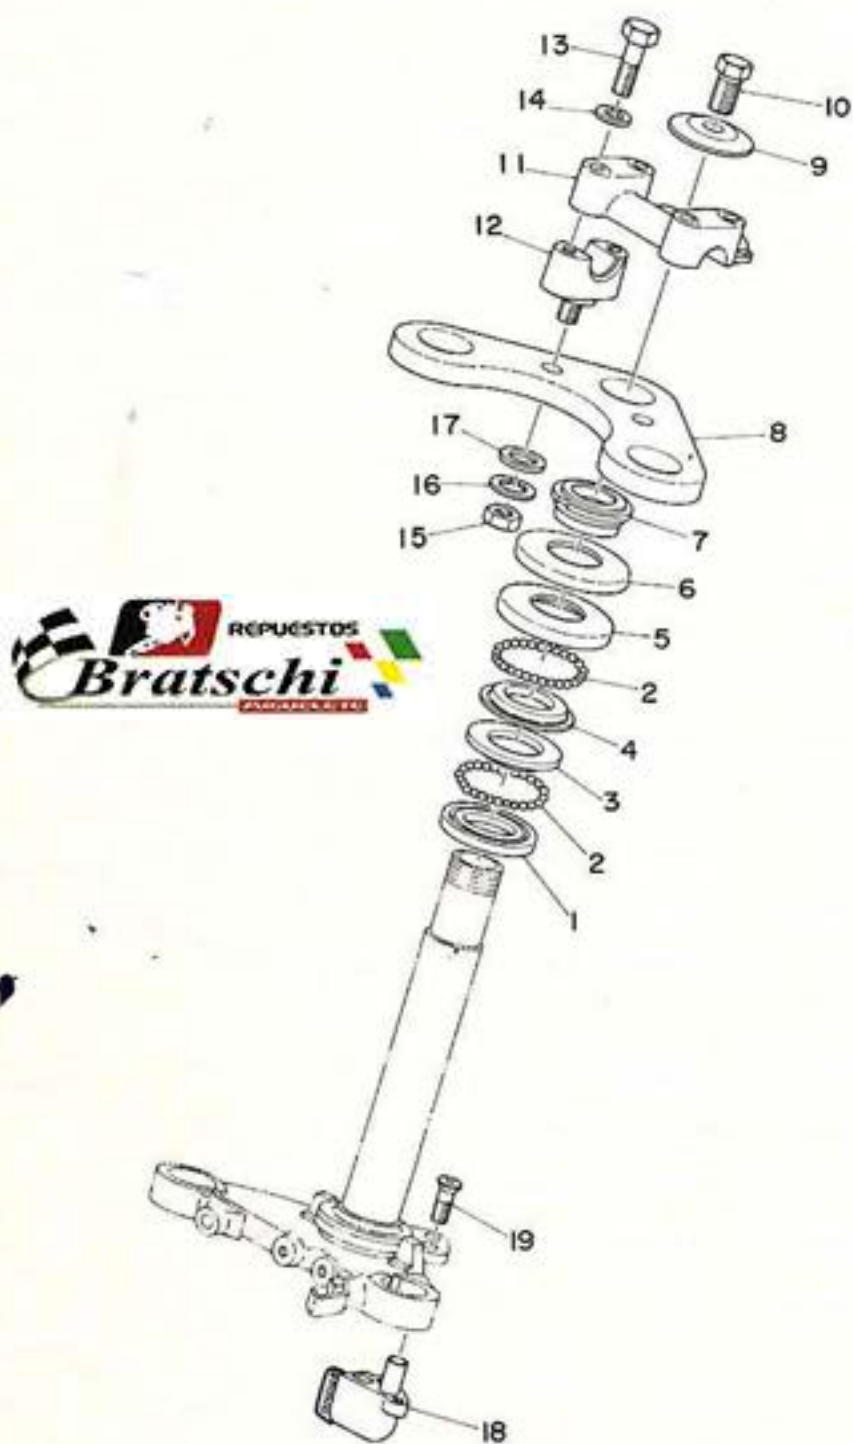


STEERING

Ref. No.	Part No.	Description	Q'ty		Applicable Machine No.	Remarks
			YB50	YB60		
19- 1	156-23411-00	RACE, ball 1	1	1		
19- 2	93501-04011	BALL (1/4 inch)	38	38		
19- 3	156-23412-00	RACE, ball 2	1	1		
19- 4	183-23412-00	RACE, ball 2	1	1		
19- 5	183-23411-00	RACE, ball 1	1	1		
19- 6	136-23415-00	COVER, ball race	1	1		
19- 7	122-23453-00	NUT, fitting	1	1		
19- 8	207-23435-00-33	CROWN, handle	1	1		
19- 9	122-23443-00	WASHER, crown	1	1		
19-10	122-23451-00	BOLT, fitting	1	1		
19-11	355-23441-00	HOLDER, handle upper	1	1		
19-12	122-23442-02	HOLDER, handle under	2	2		
19-13	91214-06035	BOLT	4	4		
19-14	92901-06100	WASHER, spring	4	4		
19-15	92801-10100	NUT	2	2		
19-16	92901-10100	WASHER, spring	2	2		
19-17	92801-10200	WASHER, plain	2	2		
19-18	355-23480-00	STEERING LOCK ASS'Y	1	1		
19-19	92701-06015	SCREW, flathead	2	2		

www.bratschirepuestos.com.uy



Fig. 20 HANDLE WIRE

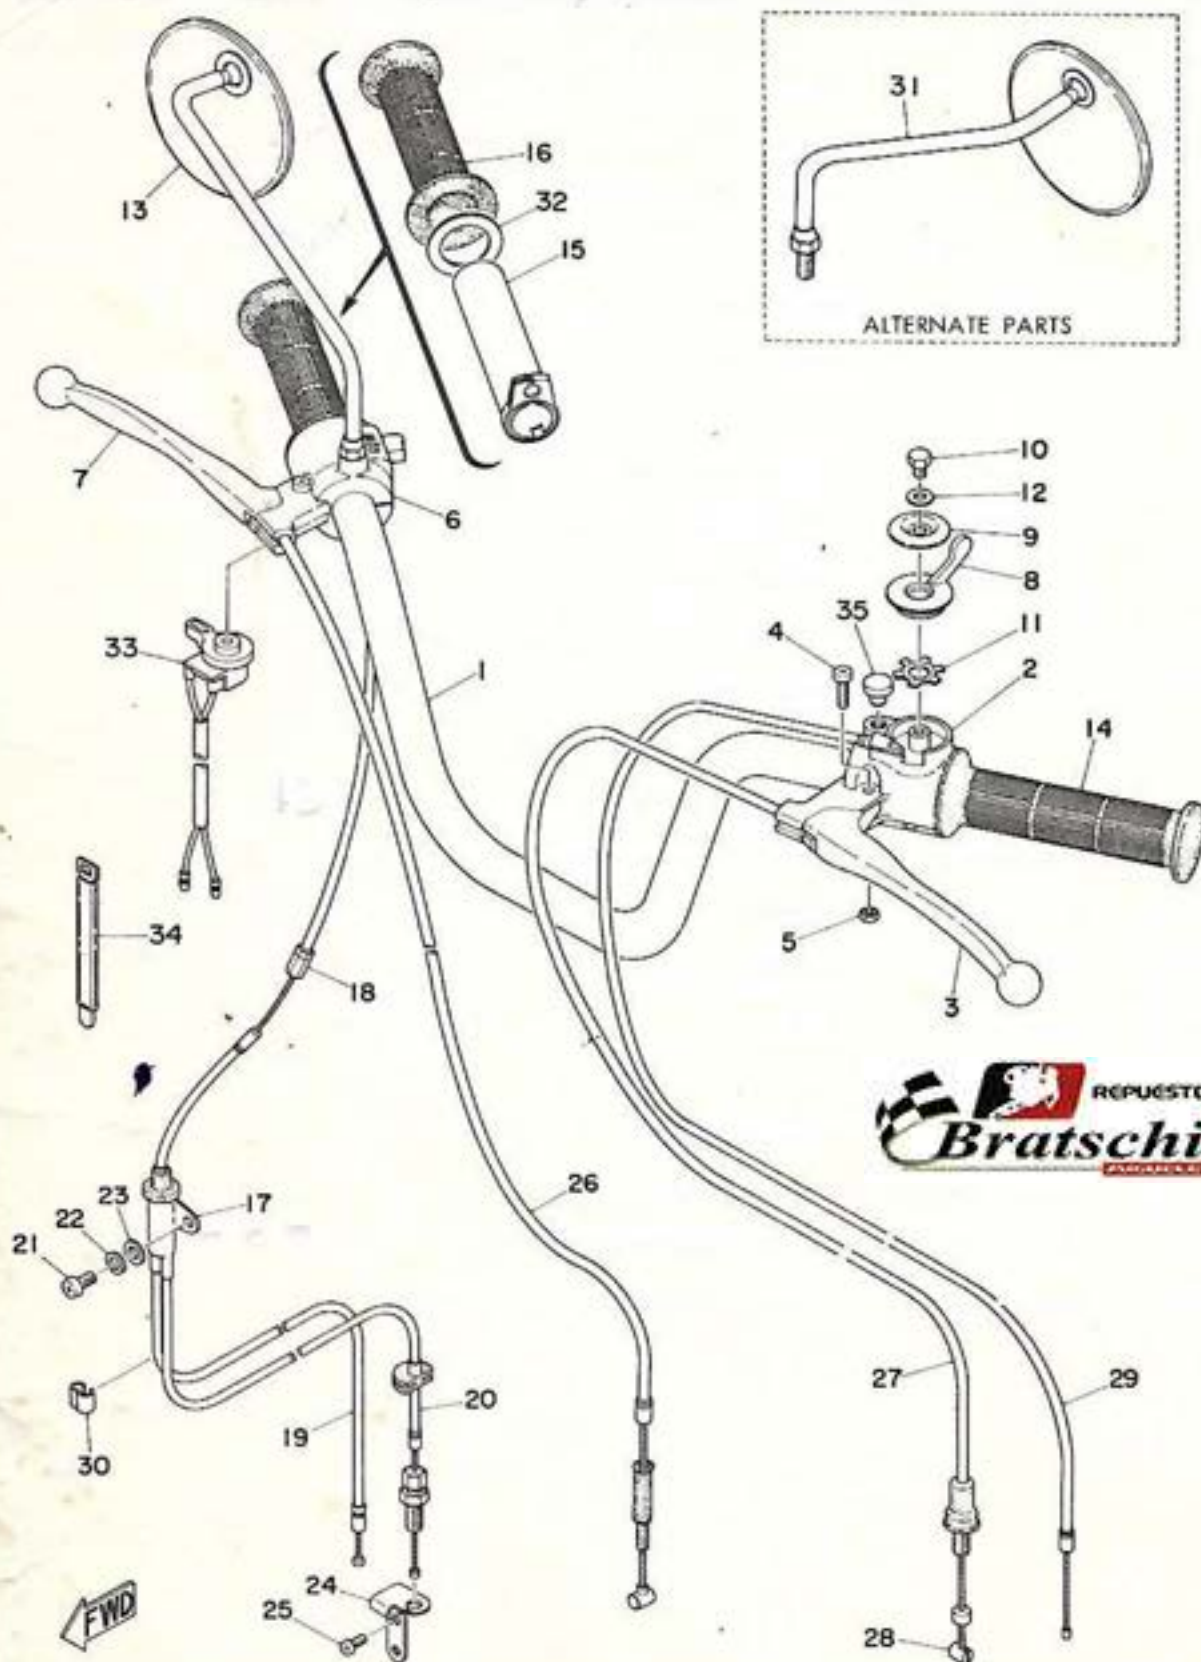

REPUESTOS
Bratschi
PIRELLA & C. S.p.A.


HANDLE : WIRE

Ref. No.	Part No.	Description	Q'ty		Applicable Machine No.	Remarks
			YB50	YB60		
20- 1	115-26111-10	HANDLE	1	1		
20- 2	137-82710-10	LEVER HOLDER ASS'Y, left ..	1	1		
20- 3	137-83912-01	. LEVER, left	1	1		
20- 4	207-83915-00	. SCREW, lever fitting	2	2		
20- 5	98803-05300	. NUT	2	2		
20- 6	232-82720-30	LEVER HOLDER ASS'Y, right	1	1		
20- 7	232-83922-30	. LEVER, right	1	1		
20- 8	137-83941-01	LEVER, starter	1	1		
20- 9	122-83942-00	COVER, starter	1	1		
20-10	137-83945-00	BOLT, lever	1	1		
20-11	137-83944-00	WASHER, spring	1	1		
20-12	92901-06200	WASHER, plain	1	1		
20-13	266-26290-00	BACK MIRROR ASS'Y	1	1		
20-14	353-26241-00	GRIP, left	1	1		
20-15	137-26243-60	TUBE, guide	1	1		
20-16	353-26242-00	GRIP, right	1	1		
20-17	137-26261-01	CYLINDER, wire	1	1		
20-18	212-26311-00	WIRE, throttle 1	1	1		
20-19	207-26312-00	WIRE, throttle 2	1	1		
20-20	260-26321-00	WIRE, pump	1	1		
20-21	92501-06012	SCREW, panhead	1	1		
20-22	92901-06100	WASHER, spring	1	1		
20-23	92901-06200	WASHER, plain	1	1		
20-24	257-13151-00	STAY	1	1		

www.bratschirepuestos.com.uy



Fig. 20 HANDLE · WIRE

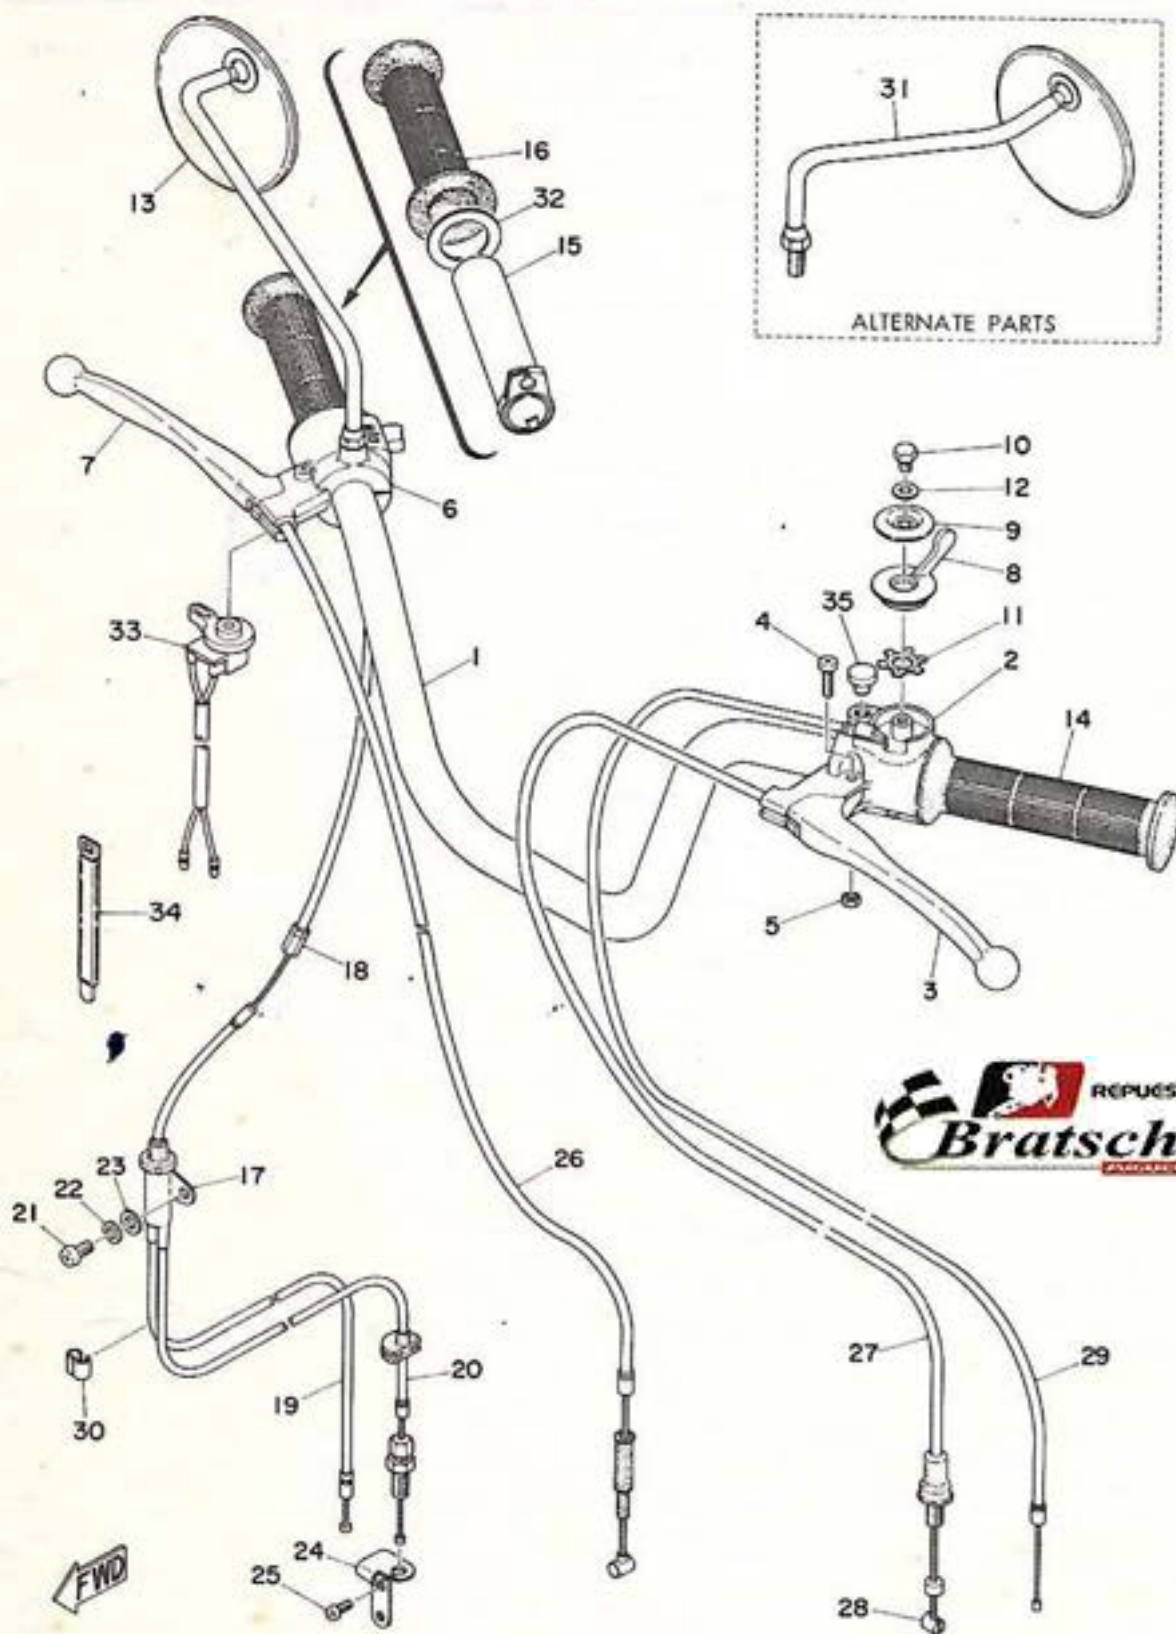


REPUESTOS
Bratschi
PARANAL, A. C. S.

HANDLE · WIRE

Ref. No.	Part No.	Description	Q'ty		Applicable Machine No.	Remarks
			YB50	YB60		
20-25	98502-05010	SCREW, panhead	2	2		
20-26	132-26341-10	WIRE, brake l	1	1		
20-27	260-26335-10	WIRE, clutch	1	1		
20-28	164-26363-00	. END, wire	1	1		
20-29	137-26331-11	WIRE, starter	1	1		
20-30	207-26391-00	CLIP	2	2		
20-31	266-26290-10	BACK MIRROR ASS'Y, left	1	1		Alternate Parts
20-32	150-26249-00	RING, leaf	1	1		
20-33	232-83980-30	FRONT STOP SWITCH ASS'Y	1	1		
20-34	168-83936-01	BAND, switch cord	1	1		
20-35	116-83931-00	PLUG, blind	1	1		



Fig. 21 FUEL TANK

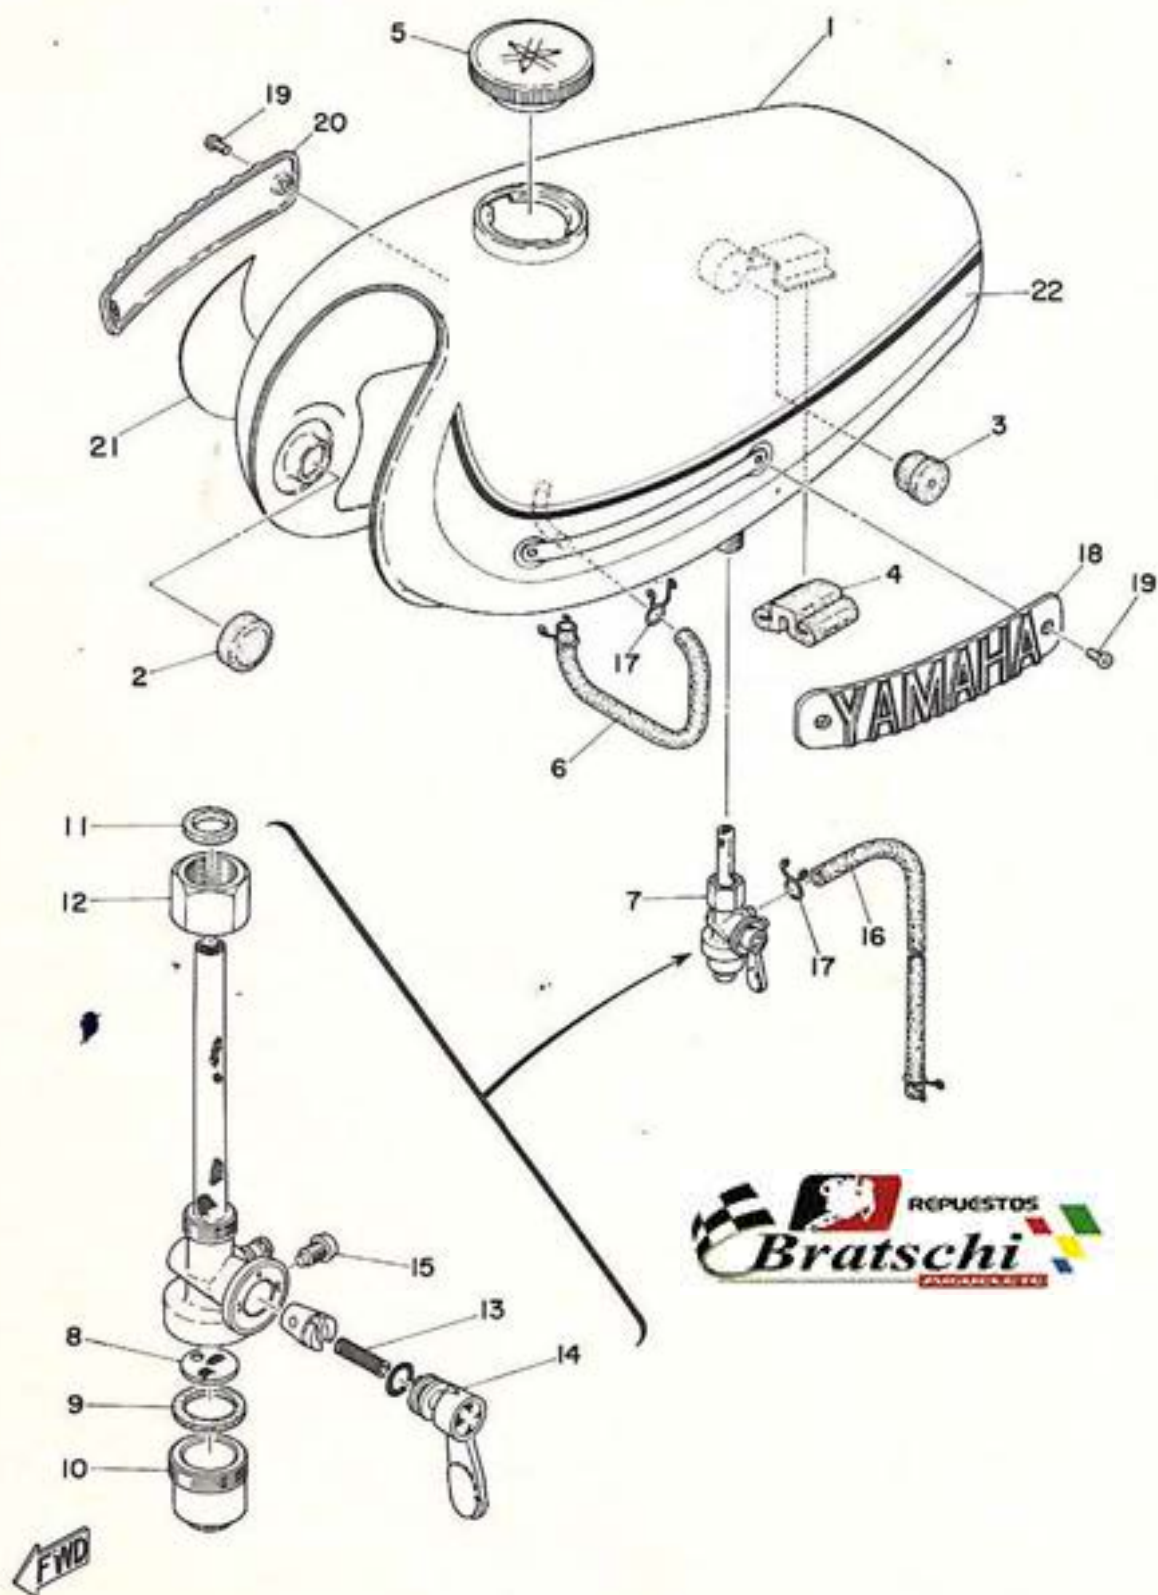


REPUESTOS
Bratschi
AUTOMOTRICE

FUEL TANK

Ref. No.	Part No.	Description	Q'ty		Applicable Machine No.	Remarks
			YB50	YB60		
21- 1	355-24110-00-01	FUEL TANK COMP.	1	1		High Sparkle Black
	355-24110-00-02	FUEL TANK COMP.	1	1		High Sparkle Red
	355-24110-00-03	FUEL TANK COMP.	1	1		High Sparkle Blue
21- 2	122-24181-00	DAMPER, locating 1	2	2		
21- 3	122-24182-01	DAMPER, locating 2	2	2		
21- 4	129-24183-00	DAMPER, locating 3	1	1		
21- 5	122-24610-01	CAP ASS'Y	1	1		
21- 6	137-24331-00	PIPE, level	1	1		
21- 7	207-24500-00	FUEL COCK ASS'Y	1	1		
21- 8	122-24515-00	. NET, filter	1	1		
21- 9	102-24522-00	. GASKET, filter	1	1		
21-10	122-24521-00	. CUP, filter	1	1		
21-11	122-24532-00	. GASKET, nut	1	1		
21-12	122-24531-00	. NUT	1	1		
21-13	102-24529-00	. SPRING	1	1		
21-14	122-24524-00	. LEVER, cock	1	1		
21-15	127-24535-00	. SCREW, lever fitting	1	1		
21-16	129-24311-00	PIPE, fuel	1	1		
21-17	101-24356-00	CLIP, pipe	4	4		
21-18	355-24161-00	EMBLEM, tank 1	1	1		
21-19	98501-04008	SCREW, panhead	4	4		
21-20	355-24162-00	EMBLEM, tank 2	1	1		
21-21	355-24244-00	GRAPHIC, fuel tank 1	1	1		
21-22	355-24245-00	GRAPHIC, fuel tank 2	1	1		

www.bratschirepuestos.com.uy

Fig. 22 OIL TANK

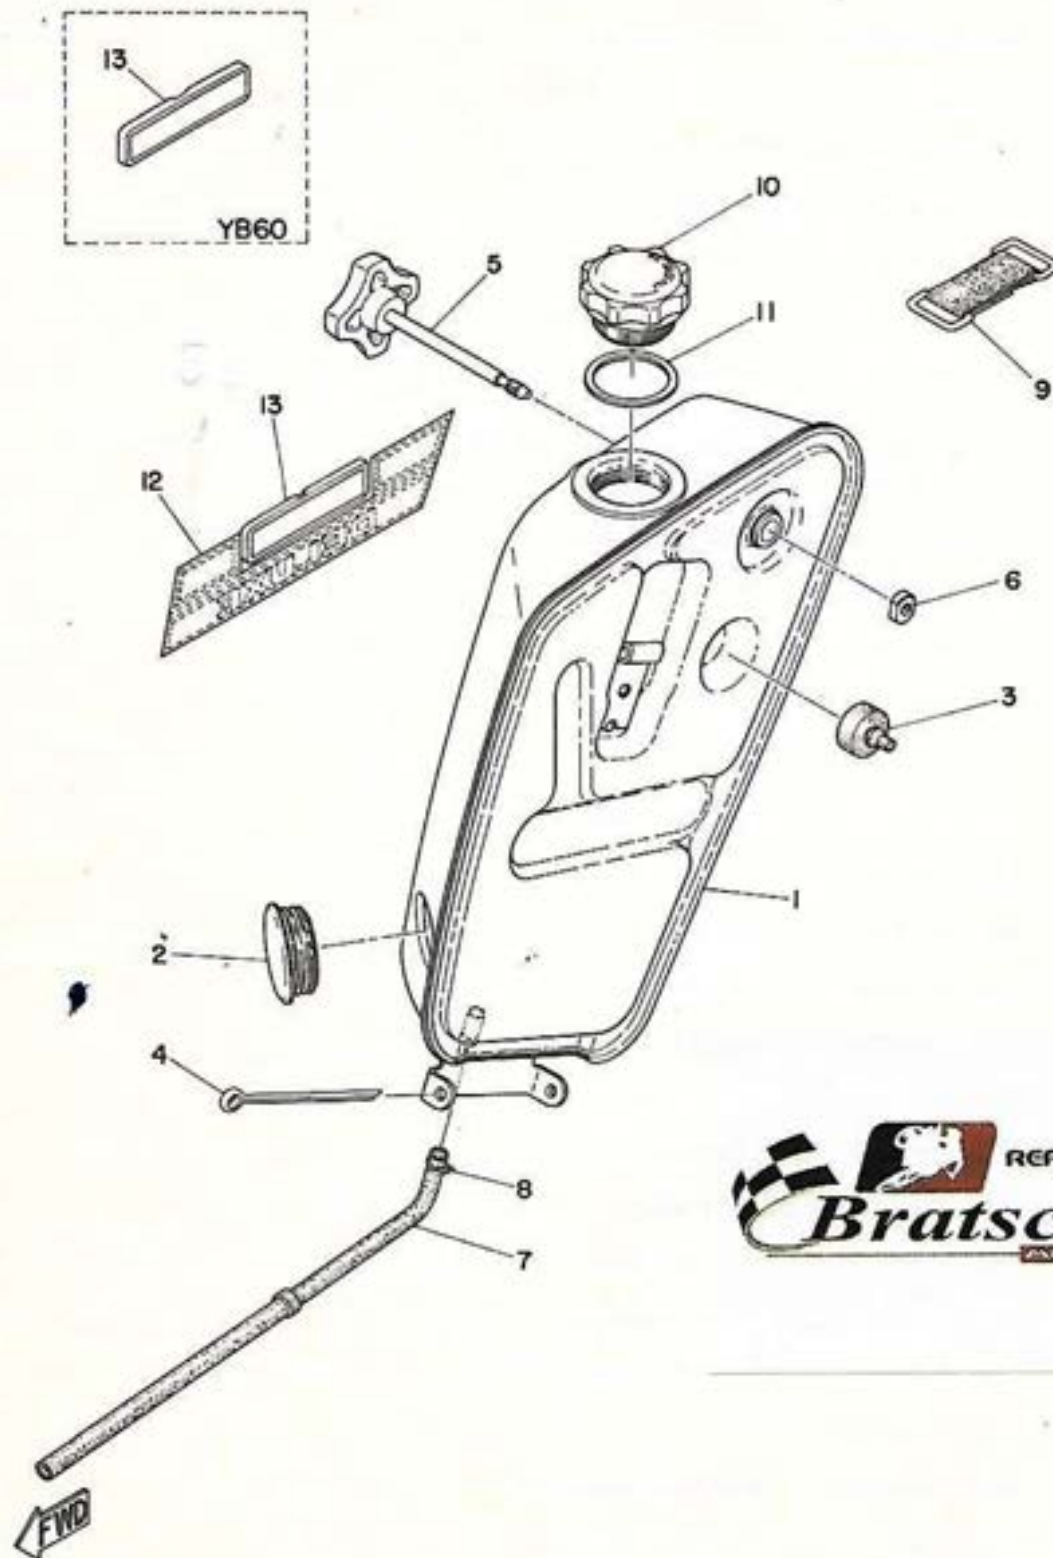


OIL TANK

Ref. No.	Part No.	Description	Q'ty		Applicable Machine No.	Remarks
			YB50	YB60		
22- 1	355-21705-00-R5	OIL TANK ASS'Y	1	1		High Sparkle Black
	355-21705-00-A4	OIL TANK ASS'Y	1	1		High Sparkle Red
	355-21705-00-F7	OIL TANK ASS'Y	1	1		High Sparkle Blue
22- 2	214-21761-00	. GAUGE, oil level	1	1		
22- 3	164-21778-00	DAMPER, locating	2	2		
22- 4	91401-50080	PIN, cotter	1	1		
22- 5	209-21724-00	KNOB, side cover right	1	1		
22- 6	136-21713-00	NUT, latch clamp	1	1		
22- 7	164-24319-00	PIPE, oil	1	1		
22- 8	101-24356-00	CLIP, pipe	2	2		
22- 9	164-21776-00	BAND, tank fitting	1	1		
22-10	183-21770-11	OIL TANK CAP ASS'Y	1	1		
22-11	214-21772-00	GASKET, cap	1	1		
22-12	355-21785-01	EMBLEM, oil tank	1	1		
22-13	355-21787-00	EMBLEM, oil tank 50	1			
	356-21787-00	EMBLEM, oil tank 60		1		

www.bratschirepuestos.com.u



Fig. 23 SEAT · CARRIER


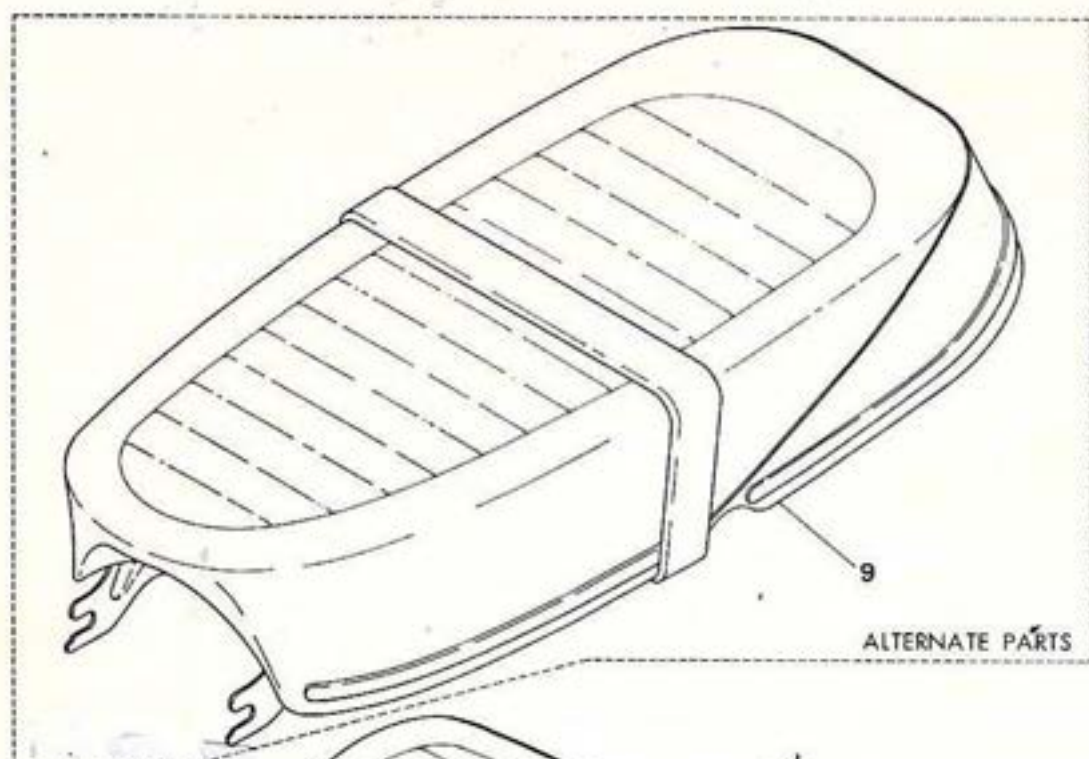


SEAT · CARRIER

Ref. No.	Part No.	Description	Q'ty		Applicable Machine No.	Remarks
			YB50	YB60		
23- 1	355-24710-00	SINGLE SEAT ASS'Y	1	1		
23- 2	91201-08015	BOLT	2	2		
23- 3	92901-08200	WASHER, plain	2	2		
23- 4	92901-08100	WASHER, spring	2	2		
23- 5	355-24810-00-93	CARRIER ASS'Y	1	1		
23- 6	97201-08015	BOLT	4	4		
23- 7	98801-08100	NUT	2	2		
23- 8	92901-08200	WASHER, plain	4	4		
23- 9	355-24730-00	DOUBLE SEAT ASS'Y	1	1		Alternate Parts



Fig. 24 FRONT WHEEL

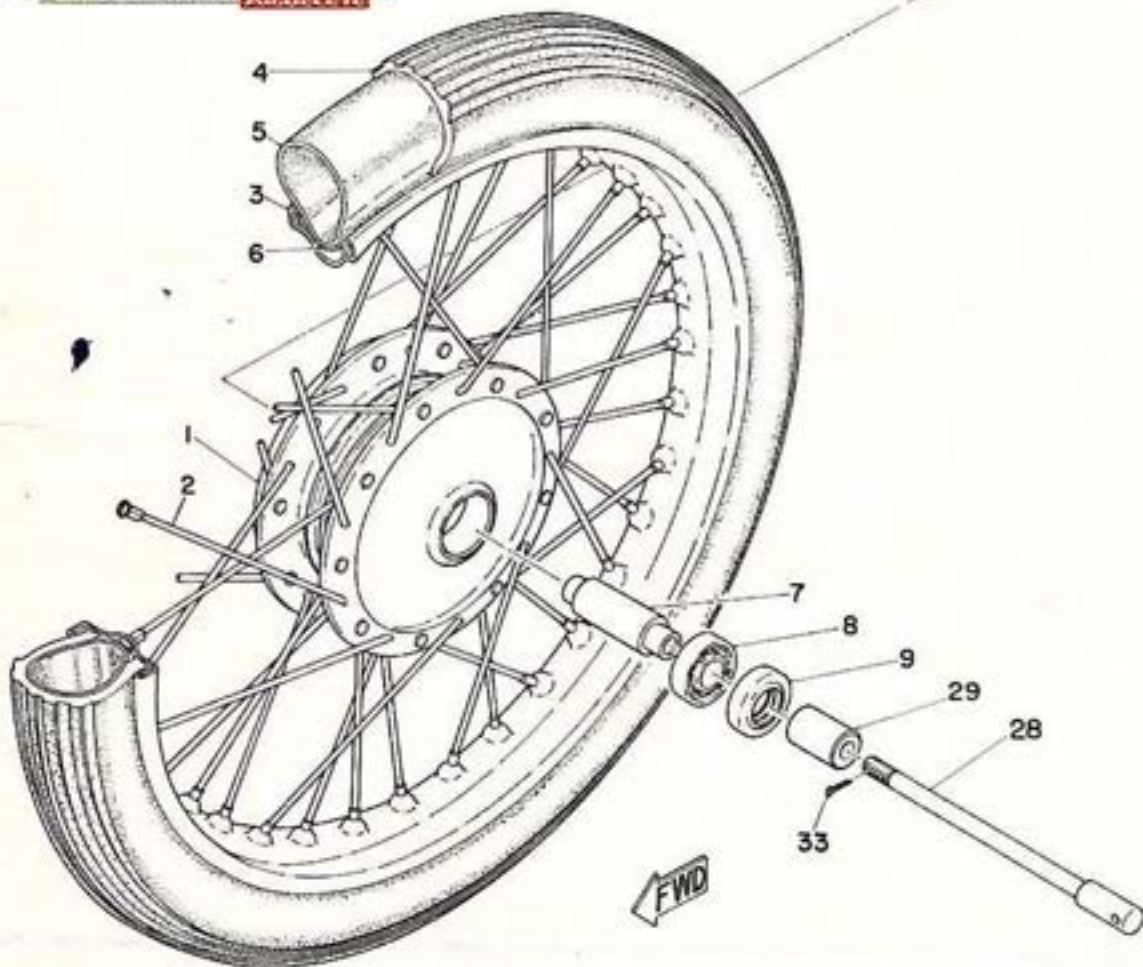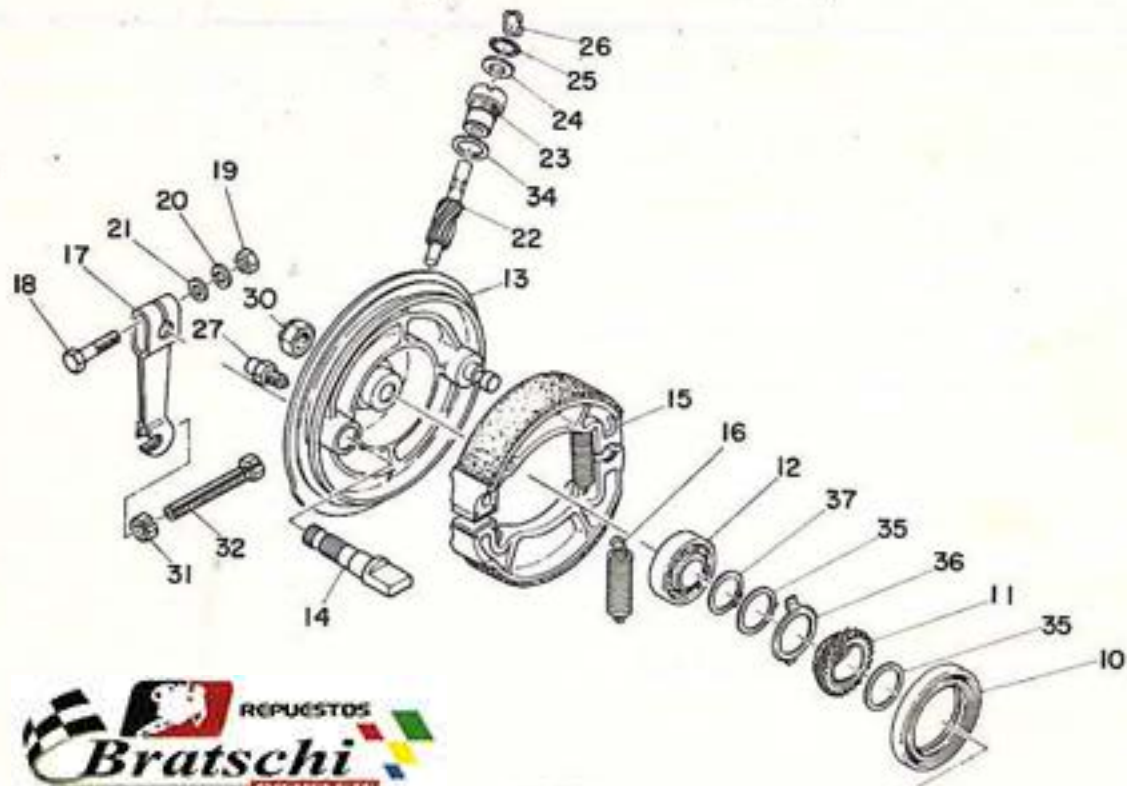



FRONT WHEEL

Ref. No.	Part No.	Description	Q'ty		Applicable Machine No.	Remarks
			YB50	YB60		
24- 1	296-25111-00	HUB, front	1	1		
24- 2	109-25104-00	SPOKE SET	1s	1		
24- 3	94412-17002	RIM (1.20A-17)	1	1		
24- 4	94122-17008	TIRE (2.25-17-4PR)	1	1		
24- 5	94222-17003	TUBE (2.25-17)	1	1		
24- 6	94322-17002	BAND, rim (2.25-17)	1	1		
24- 7	296-25117-00	SPACER, bearing	1	1		
24- 8	93306-30003	BEARING (6300Z)	1	1		
24- 9	93106-20001	OIL SEAL (DD20-35-7)	1	1		
24-10	93105-47007	OIL SEAL (SDD47-58-7)	1	1		
24-11	296-25135-00	GEAR, drive	1	1		
24-12	93306-30003	BEARING (6300Z)	1	1		
24-13	342-25121-00	PLATE, brake shoe	1	1		
24-14	122-25351-01	CAM SHAFT	1	1		
24-15	296-25330-00	BRAKE SHOE COMP.	2	2		
24-16	102-25333-00	SPRING, brake shoe return ...	2	2		
24-17	109-25155-00	LEVER, cam shaft	1	1		
24-18	91201-06030	BOLT	1	1		
24-19	98801-06100	NUT	1	1		
24-20	92901-06100	WASHER, spring	1	1		
24-21	92901-06200	WASHER, plain	1	1		
24-22	296-25138-00	GEAR, meter	1	1		
24-23	109-25136-00	BUSHING	1	1		
24-24	93104-07003	OIL SEAL (SO-7-14-4)	1	1		

www.bratschirepuestos.com.uy



Fig. 24 FRONT WHEEL

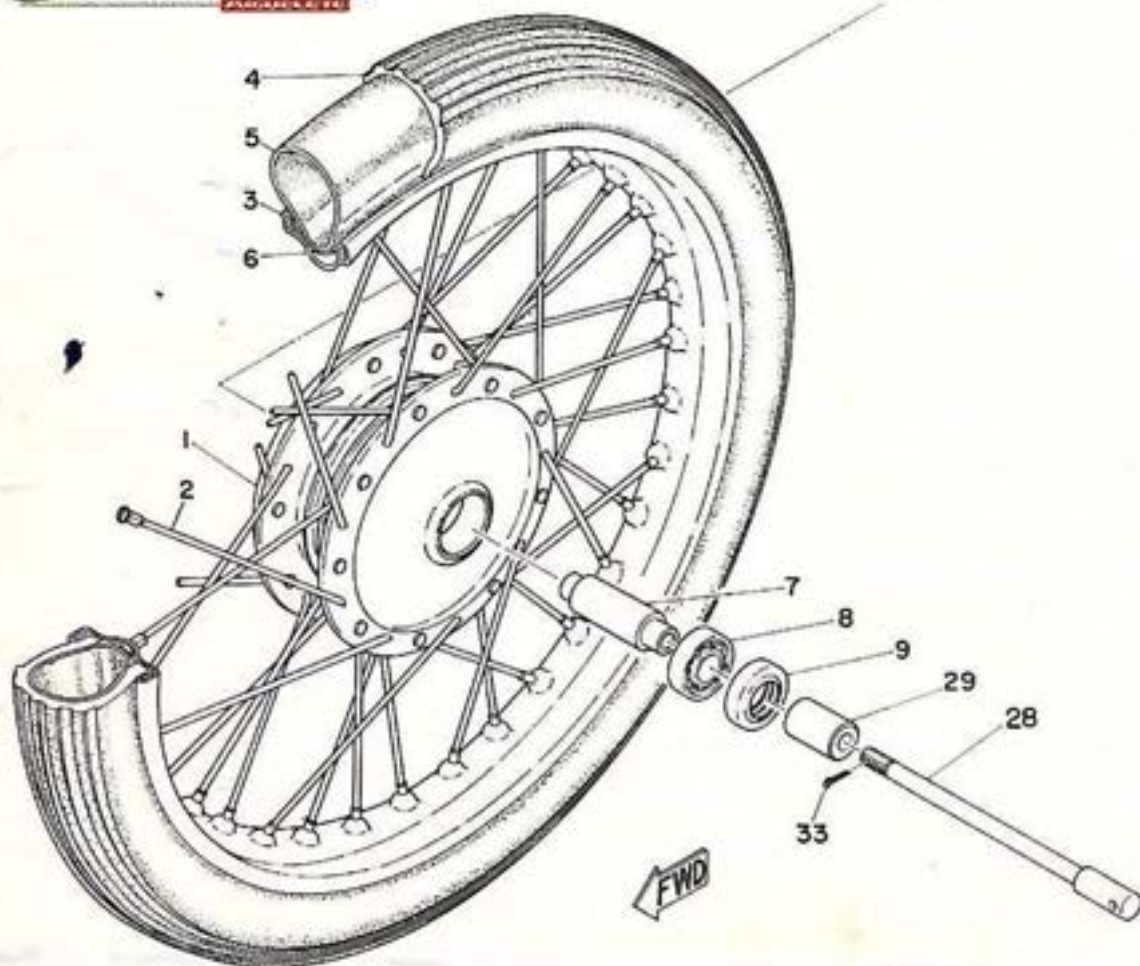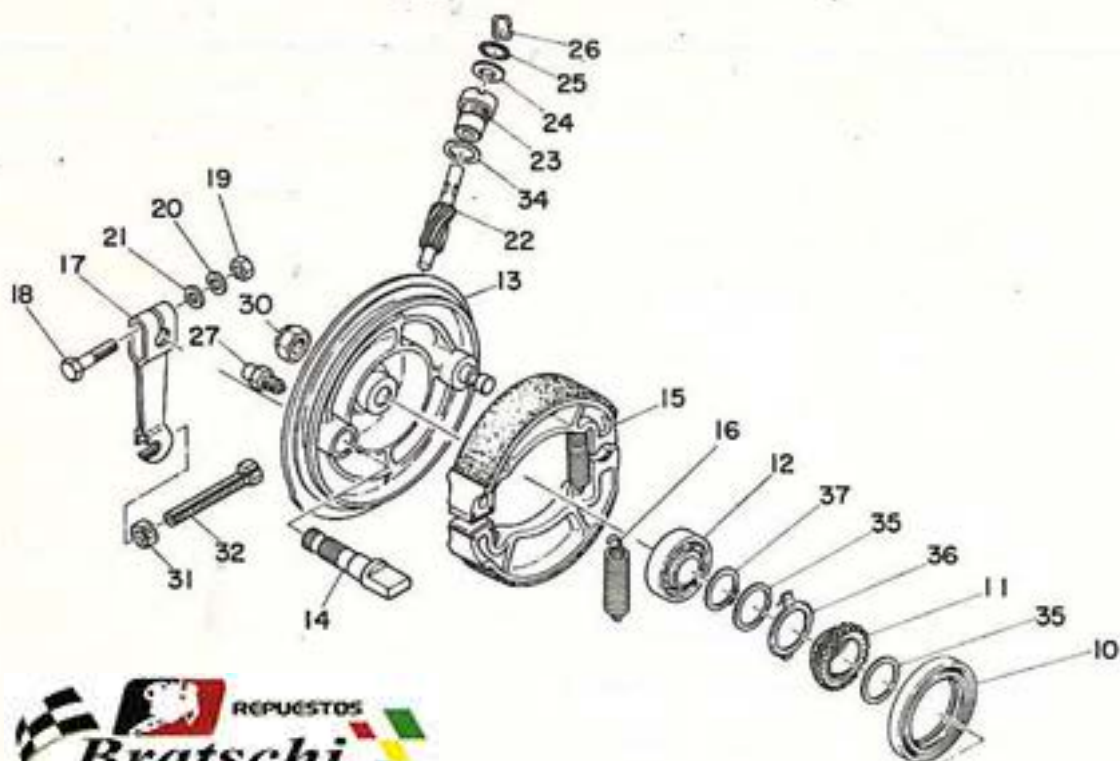


FRONT WHEEL

Ref. No.	Part No.	Description	Q'ty		Applicable Machine No.	Remarks
			YB50	YB60		
24-25	93210-14104	O-RING (2.4-13.4)	1	1		
24-26	102-25137-00	RING, stop	1	1		
24-27	93700-06001	NIPPLE, grease	1	1		
24-28	353-25181-00	SHAFT, front wheel	1	1		
24-29	296-25183-00	COLLAR, wheel shaft (10-20-31.5)	1	1		
24-30	353-25182-00	NUT, shaft	1	1		
24-31	109-26344-00	NUT, wire adjusting	1	1		
24-32	109-26345-00	BOLT, wire adjusting	1	1		
24-33	91401-20020	PIN, cotter	1	1		
24-34	183-25146-00	WASHER, thrust 1	1	1		
24-35	183-25147-00	WASHER, thrust 2	2	2		
24-36	183-25149-00	CLUTCH, meter	1	1		
24-37	93410-20009	CIRCLIP	1	1		

www.bratschirepuestos.com.uy



Fig. 25 REAR WHEEL

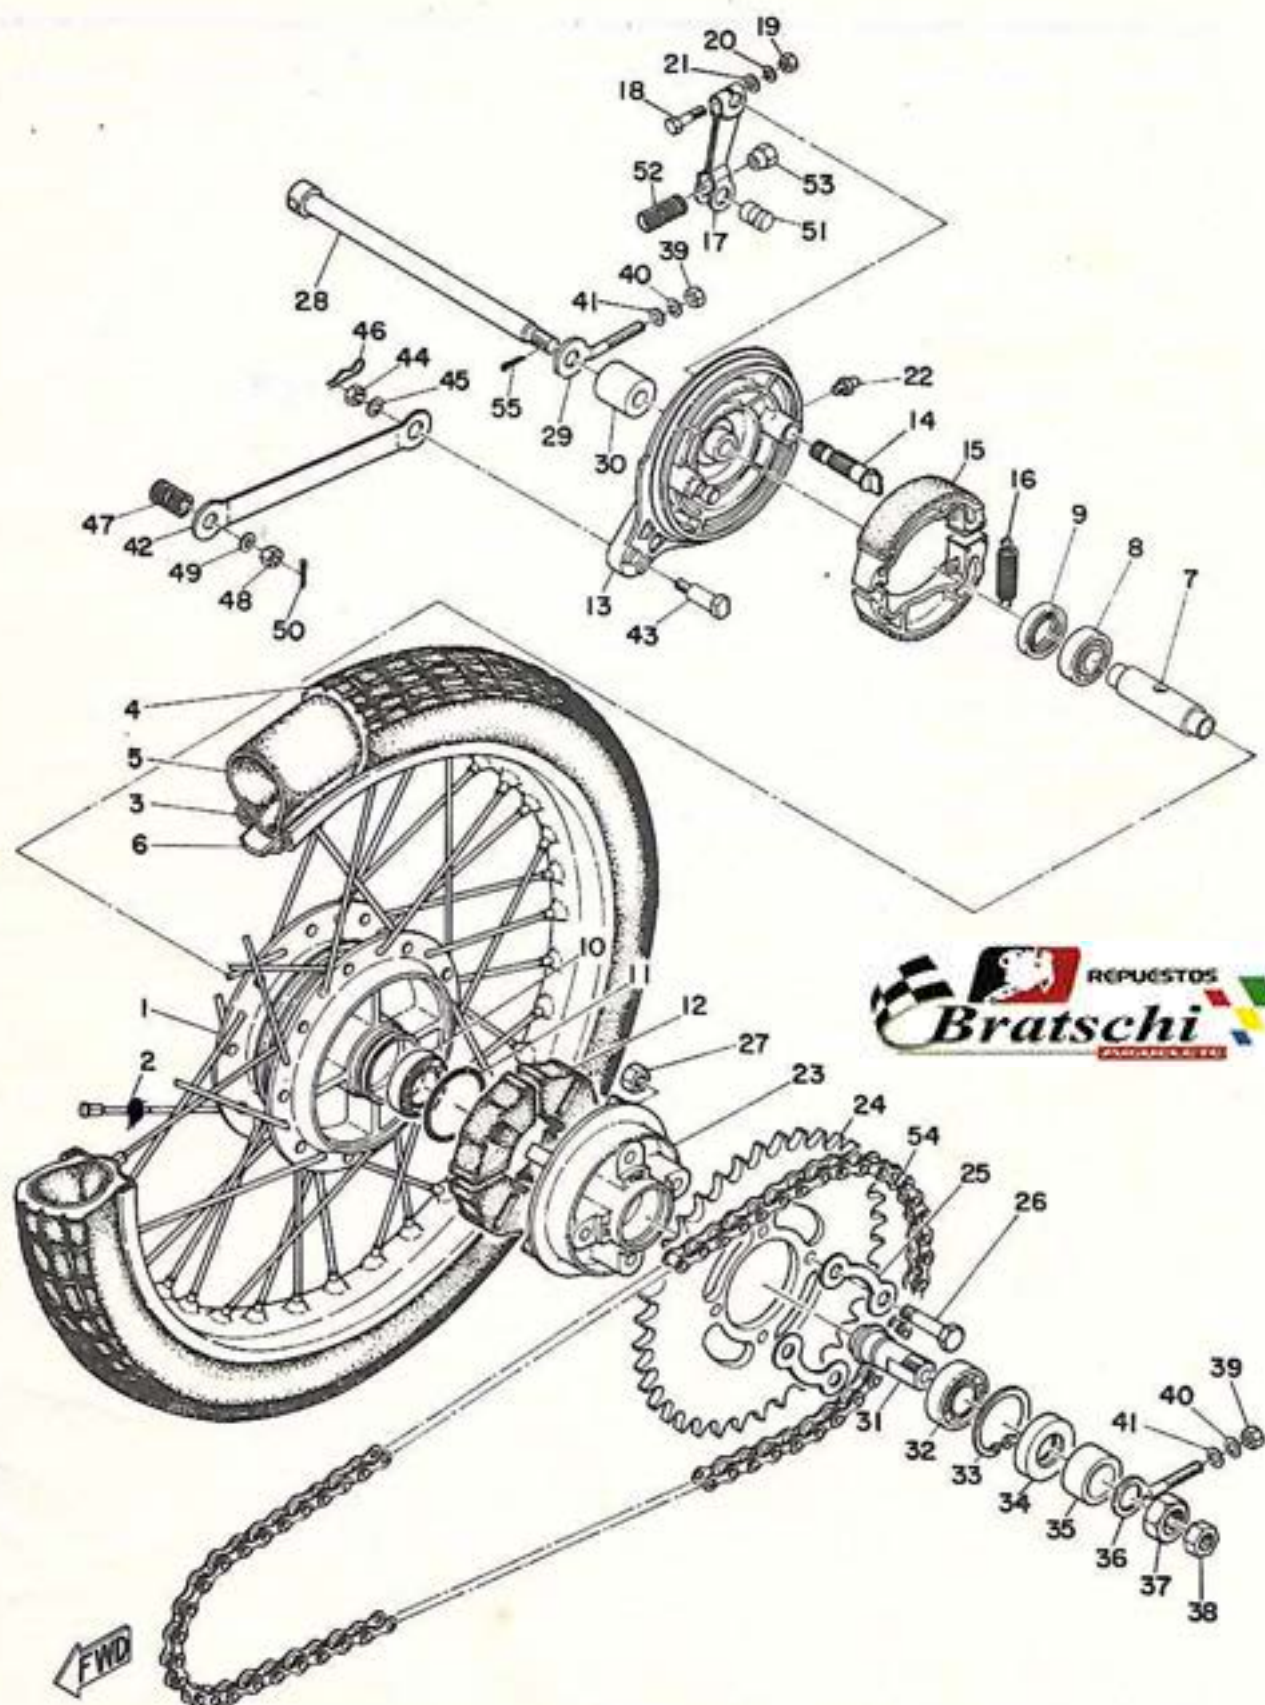


REAR WHEEL

Ref. No.	Part No.	Description	Q'ty		Applicable Machine No.	Remarks
			YB50	YB60		
25- 1	296-25311-00	HUB, rear	1	1		
25- 2	296-25304-00	SPOKE SET	1s	1s		
25- 3	94412-17002	RIM (1.20A-17)	1	1		
25- 4	94122-17009	TIRE, rear (2.25-17-4P)	1	1		
25- 5	94222-17003	TUBE (2.25-17)	1	1		
25- 6	94322-17002	BAND, rim (2.25-17)	1	1		
25- 7	296-25317-00	SPACER, bearing	1	1		
25- 8	93306-20201	BEARING (6202)	1	1		
25- 9	93104-21032	OIL SEAL (SO21-35-7)	1	1		
25-10	93306-20204	BEARING (6202Z)	1	1		
25-11	93210-41041	O-RING (4-40.5)	1	1		
25-12	132-25364-00	DAMPER, clutch	4	4		
25-13	102-25321-00	PLATE, brake shoe	1	1		
25-14	122-25351-01	CAM SHAFT	1	1		
25-15	296-25330-00	BRAKE SHOE COMP.	2	2		
25-16	102-25333-00	SPRING, brake shoe return ...	2	2		
25-17	122-25355-00	LEVER, cam shaft	1	1		
25-18	91201-06030	BOLT	1	1		
25-19	98801-06100	NUT	1	1		
25-20	92901-06100	WASHER, spring	1	1		
25-21	92901-06200	WASHER, plain	1	1		
25-22	93700-06001	NIPPLE, grease	1	1		
25-23	132-25366-01	CLUTCH, hub	1	1		
25-24	122-25439-11	GEAR, sprocket wheel (39T) ...	1	1		

www.bratschirepuestos.com.uy

Fig. 25 REAR WHEEL

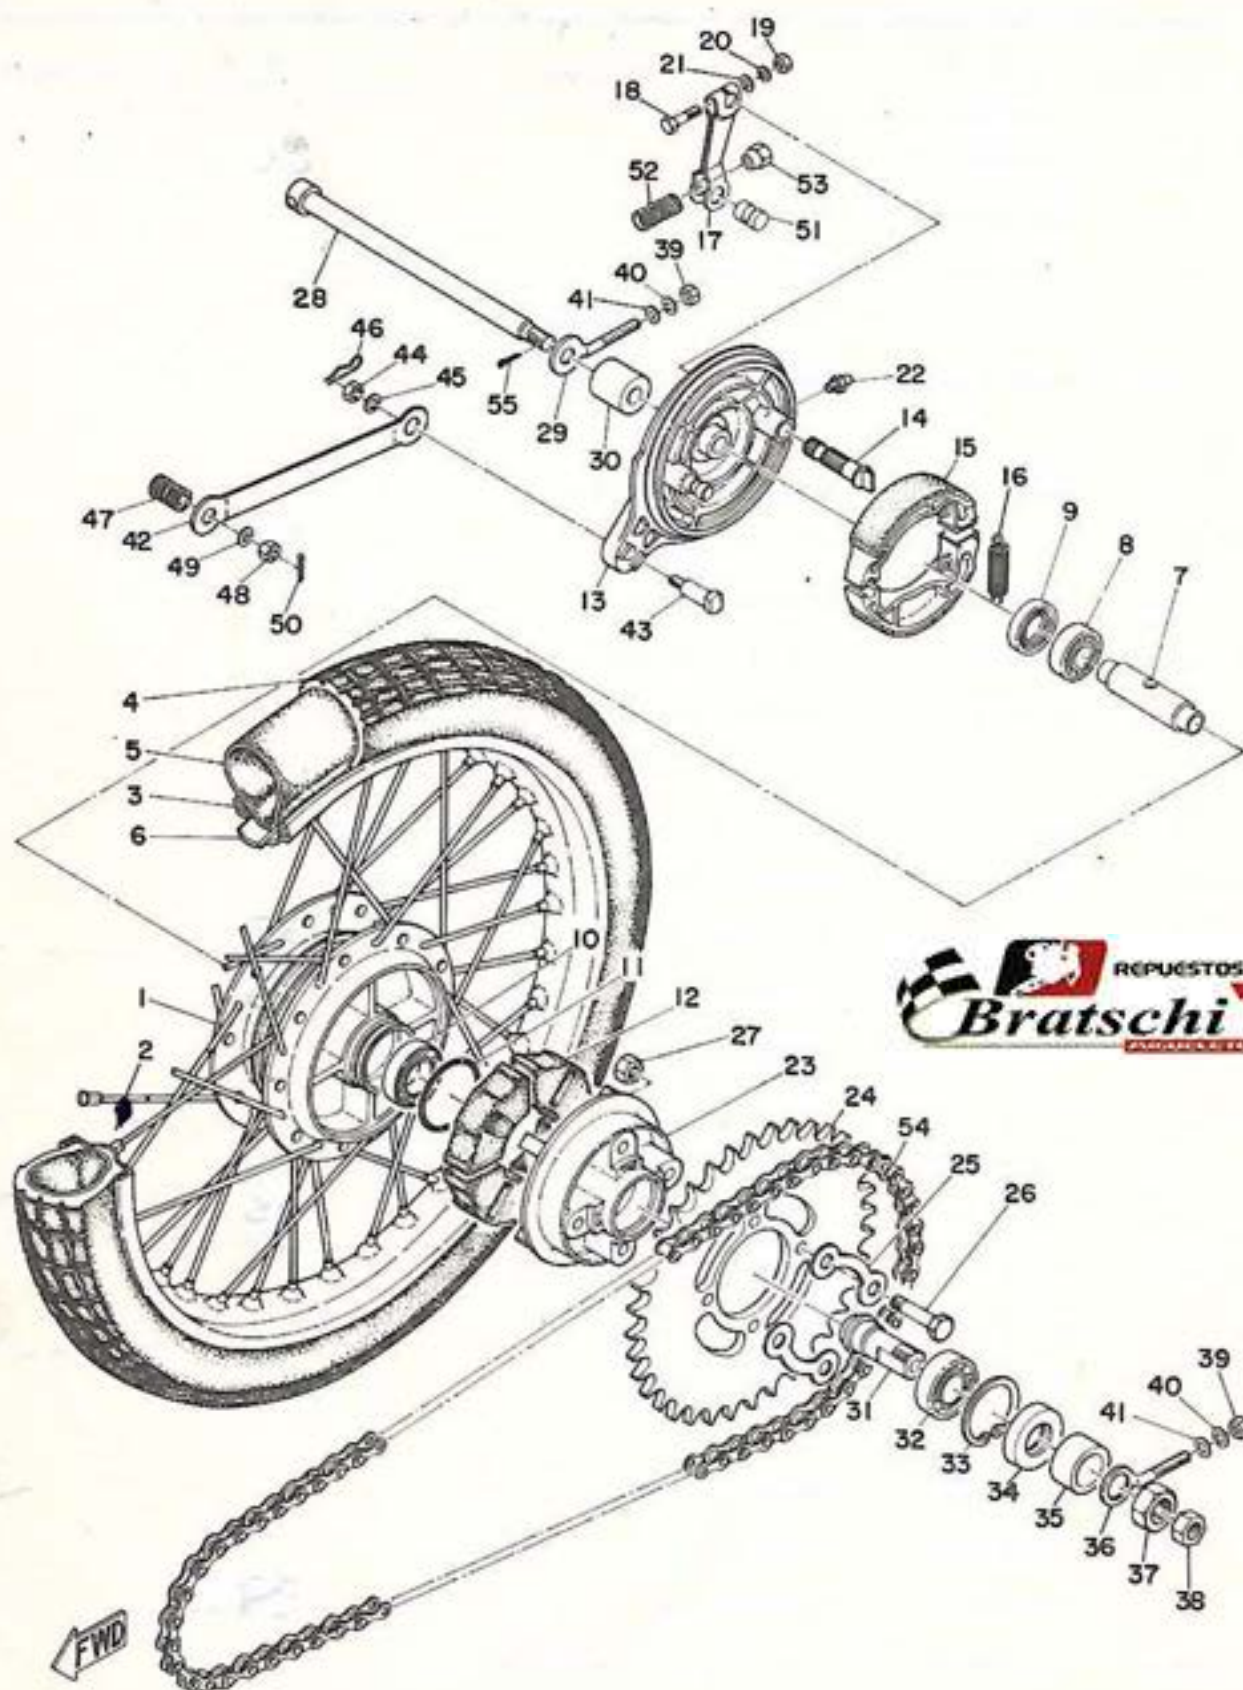


REAR WHEEL

Ref. No.	Part No.	Description	Q'ty		Applicable Machine No.	Remarks
			YB50	YB60		
	122-25440-11	GEAR, sprocket wheel (40T)	1	1		
25-25	102-25412-00	WASHER, lock	2	2		
25-26	207-25411-00	BOLT, fitting	4	4		
25-27	98801-08200	NUT	4	4		
25-28	357-25381-00	SHAFT, wheel	1	1		
25-29	102-25389-00	PULLER, chain right	1	1		
25-30	102-25383-00	COLLAR, wheel shaft (15-32-42)	1	1		
25-31	102-25387-02	SHAFT, sprocket	1	1		
25-32	93306-00406	BEARING (6004Z)	1	1		
25-33	93420-42007	CIRCLIP (R42)	1	1		
25-34	93106-30004	OIL SEAL (DD-30-42-8)	1	1		
25-35	102-25386-01	COLLAR, sprocket shaft (18-30-15)	1	1		
25-36	127-25388-00	PULLER, chain left	1	1		
25-37	102-25385-01	NUT, sprocket shaft	1	1		
25-38	353-25182-00	NUT, shaft	1	1		
25-39	98801-06100	NUT	2	2		
25-40	92901-06100	WASHER, spring	2	2		
25-41	92901-06200	WASHER, plain	2	2		
25-42	102-25371-00	BAR, tension	1	1		
25-43	102-25373-00	BOLT, tension bar	1	1		
25-44	98801-08300	NUT	1	1		
25-45	92901-08100	WASHER, spring	1	1		
25-46	102-25375-00	CLIP, tension bar	1	1		

www.bratschirepuestos.com.uy

Fig. 25 REAR WHEEL

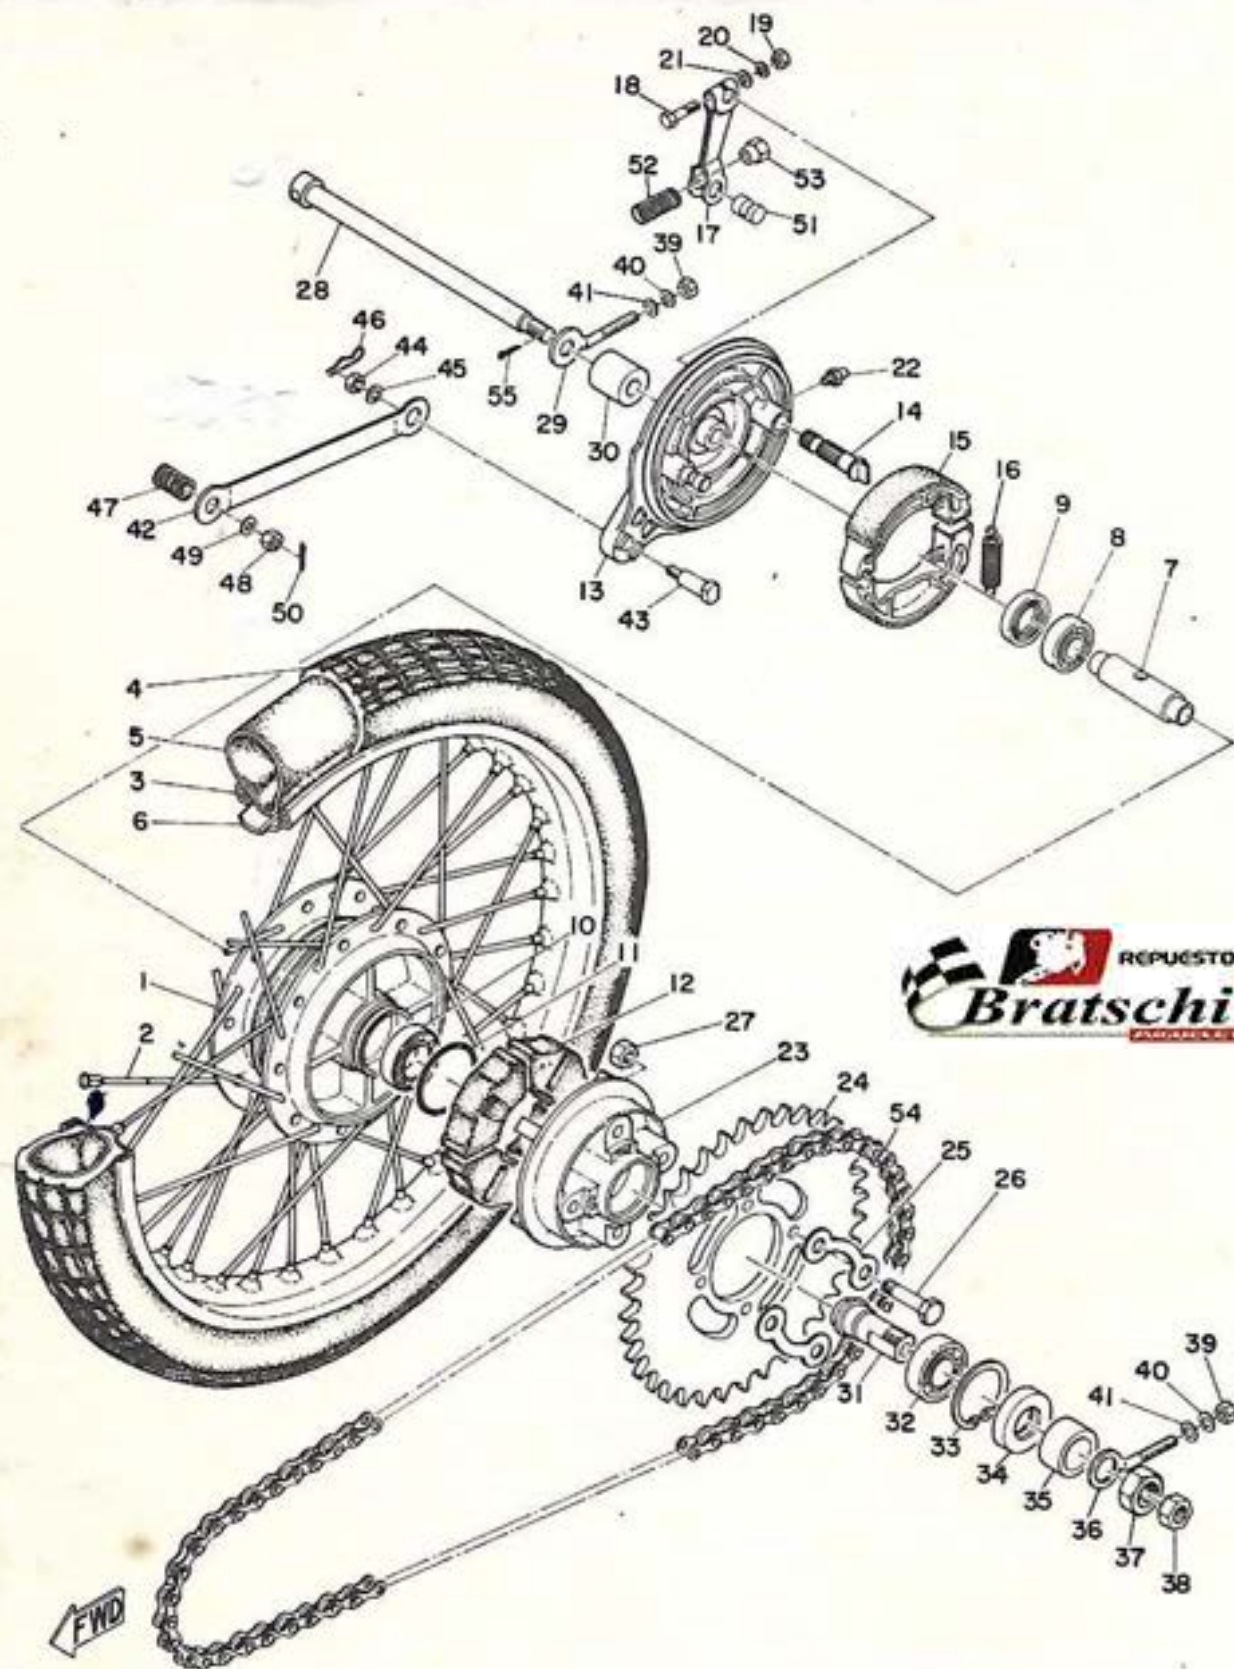


REPUESTOS
Bratschi
MOTORCYCLES

REAR WHEEL

Ref. No.	Part No.	Description	Q'ty		Applicable Machine No.	Remarks
			YB50	YB60		
25-47	102-25374-00	SPRING, tension bar	1	1		
25-48	98801-08300	NUT	1	1		
25-49	92901-08200	WASHER, plain	1	1		
25-50	91401-20012	PIN, cotter	1	1		
25-51	156-27237-00	PIN, clevis	1	1		
25-52	180-27236-00	SPRING, rod	1	1		
25-53	206-27238-00	NUT, adjusting	1	1		
25-54	94504-20098	CHAIN (420-98)	1	1		
25-54A	94604-20001	. JOINT, chain	1	1		
25-55	91401-20020	PIN, cotter	1	1		



Fig. 26 HEAD LAMP · SPEEDOMETER

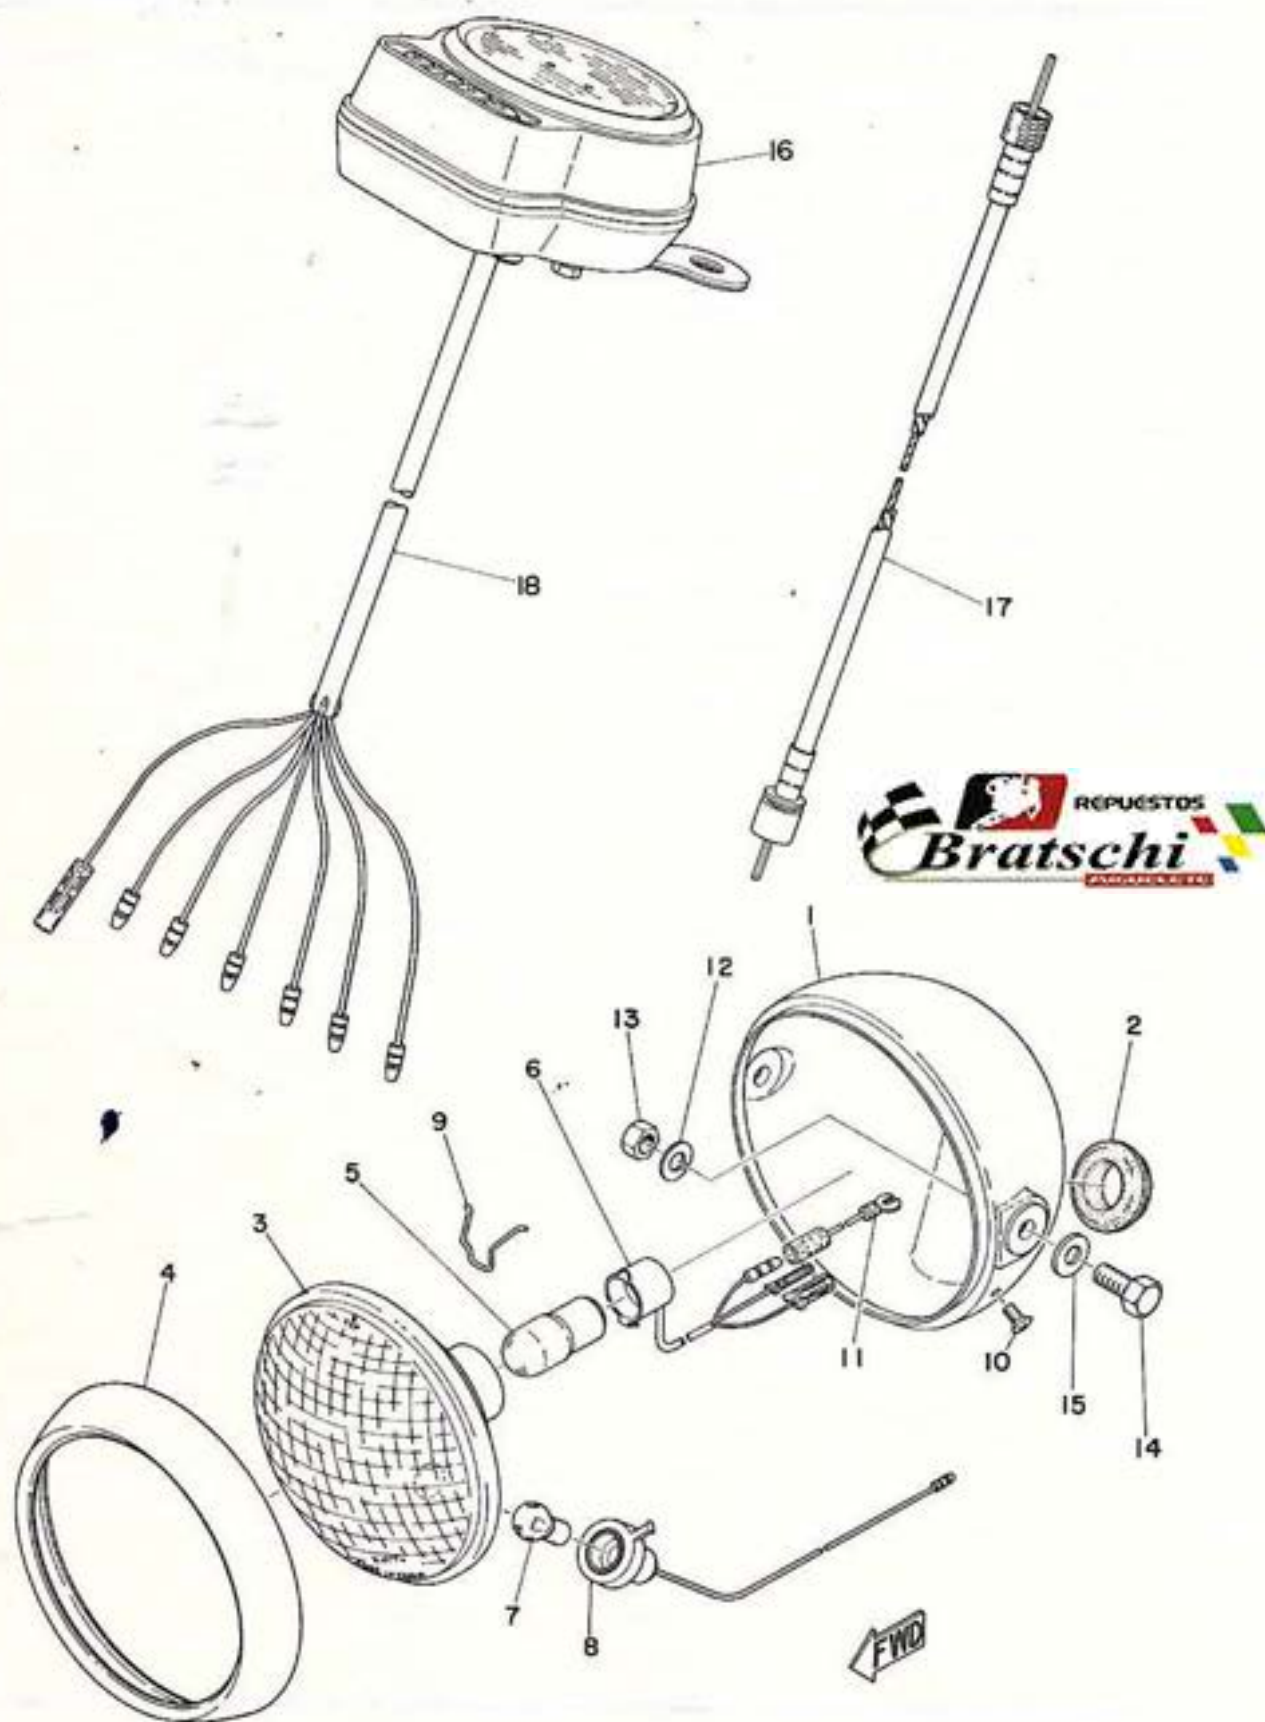


HEAD LAMP · SPEEDOMETER

Ref. No.	Part No.	Description	Q'ty		Applicable Machine No.	Remarks
			YB50	YB60		
26- 1	241-84330-00-R5	BODY ASS'Y	1	1		High Sparkle Black
	241-84330-00-A4	BODY ASS'Y	1	1		High Sparkle Red
	241-84330-00-F7	BODY ASS'Y	1	1		High Sparkle Blue
26- 2	150-84153-00	. BUSHING	2	2		
26- 0-1	355-84110-00	HEAD LAMP UNIT ASS'Y	1	1		
26- 3	254-84320-00	. LENS ASS'Y	1	1		
26- 4	195-84315-01	. RIM, head lamp	1	1		
26- 5	104-84114-00	. BULB (6V-15/15W)	1	1		
26- 6	241-84312-00	. CORD ASS'Y	1	1		
26- 7	266-85353-00	. BULB	1	1		
26- 8	254-84346-00	. CORD ASS'Y	1	1		
26- 9	195-84324-00	. SET, spring	3	3		
26-10	195-84325-00	SCREW, rim fitting	1	1		
26-11	173-84313-00	WIRE, earth	1	1		
26-12	92901-08100	WASHER, spring	2	2		
26-13	98801-08100	NUT	2	2		
26-14	97204-08018	BOLT	2	2		
26-15	92903-08200	WASHER, plain	2	2		
26-16	355-83510-51	SPEEDOMETER ASS'Y (Km/h)	1			
	355-83510-30	SPEEDOMETER ASS'Y (Mile/h)	1	1		
	356-83510-51	SPEEDOMETER ASS'Y		1		
26-17	260-83550-00	SPEEDOMETER CABLE ASS'Y	1	1		
26-18	359-83520-00	SOCKET ASS'Y	1			



Fig. 27 TAIL LAMP

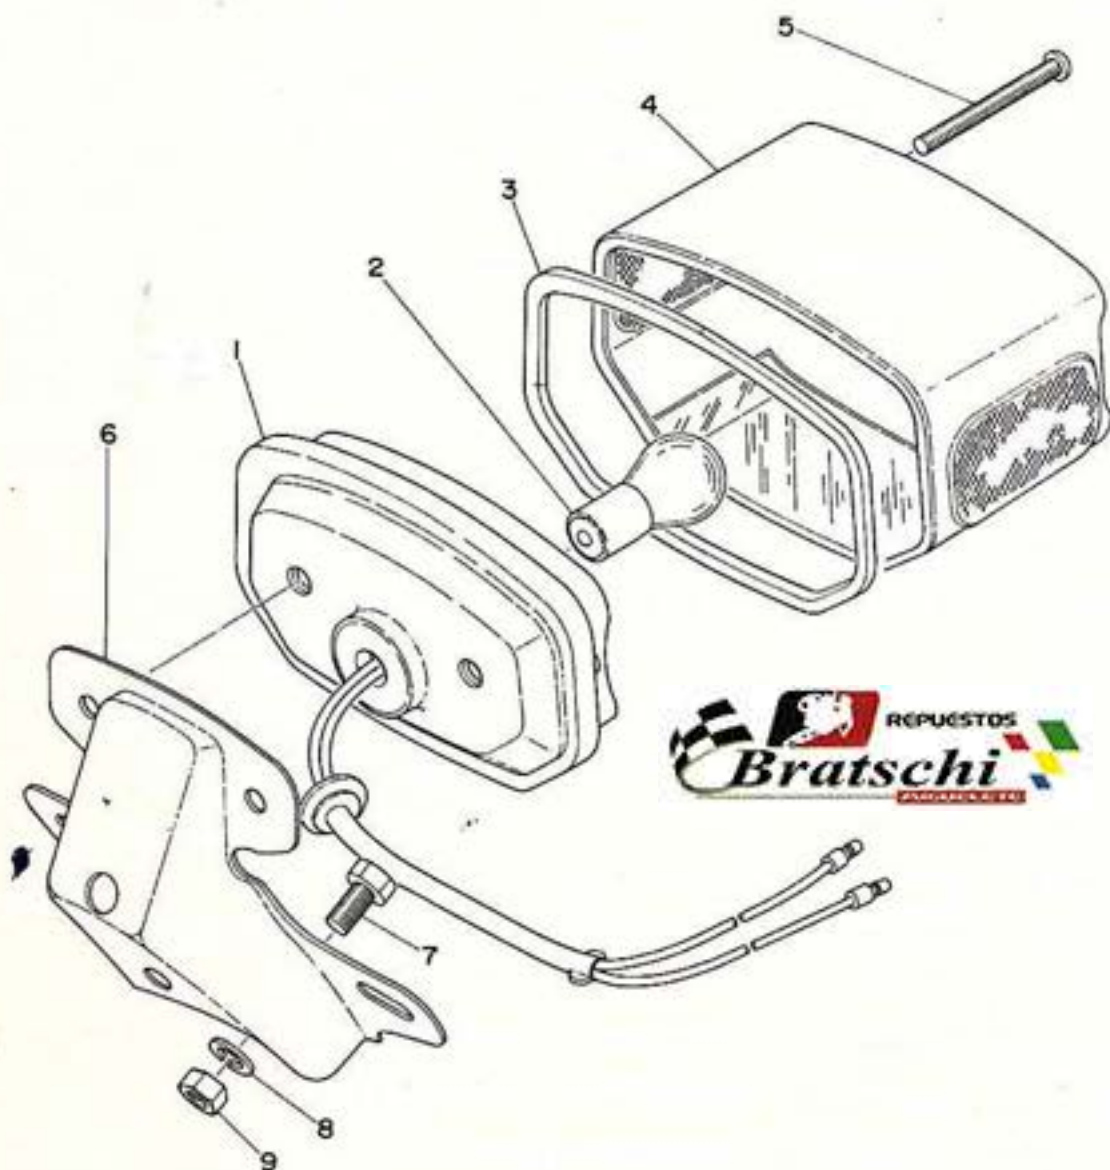


TAIL LAMP

Ref. No.	Part No.	Description	Q'ty		Applicable Machine No.	Remarks
			YBS0	YB60		
27- 0-1	296-84510-00	TAIL LAMP UNIT ASS'Y	1	1		
27- 1	296-84511-00	. BASE, tail lamp	1	1		
27- 2	122-84514-00	. BULB, tail lamp (6V-10/3W)	1	1		
27- 3	296-84523-00	. GASKET, tail lamp	1	1		
27- 4	296-84521-00	. LENS, tail lamp	1	1		
27- 5	127-84724-30	. SCREW, lens fitting	3	3		
27- 6	254-84751-00-35	BRACKET, license	1	1		
27- 7	91201-06012	BOLT	3	3		
27- 8	92901-06100	WASHER, spring	3	3		
27- 9	98801-06100	NUT	3	3		



Fig. 28 FLASHER LAMP

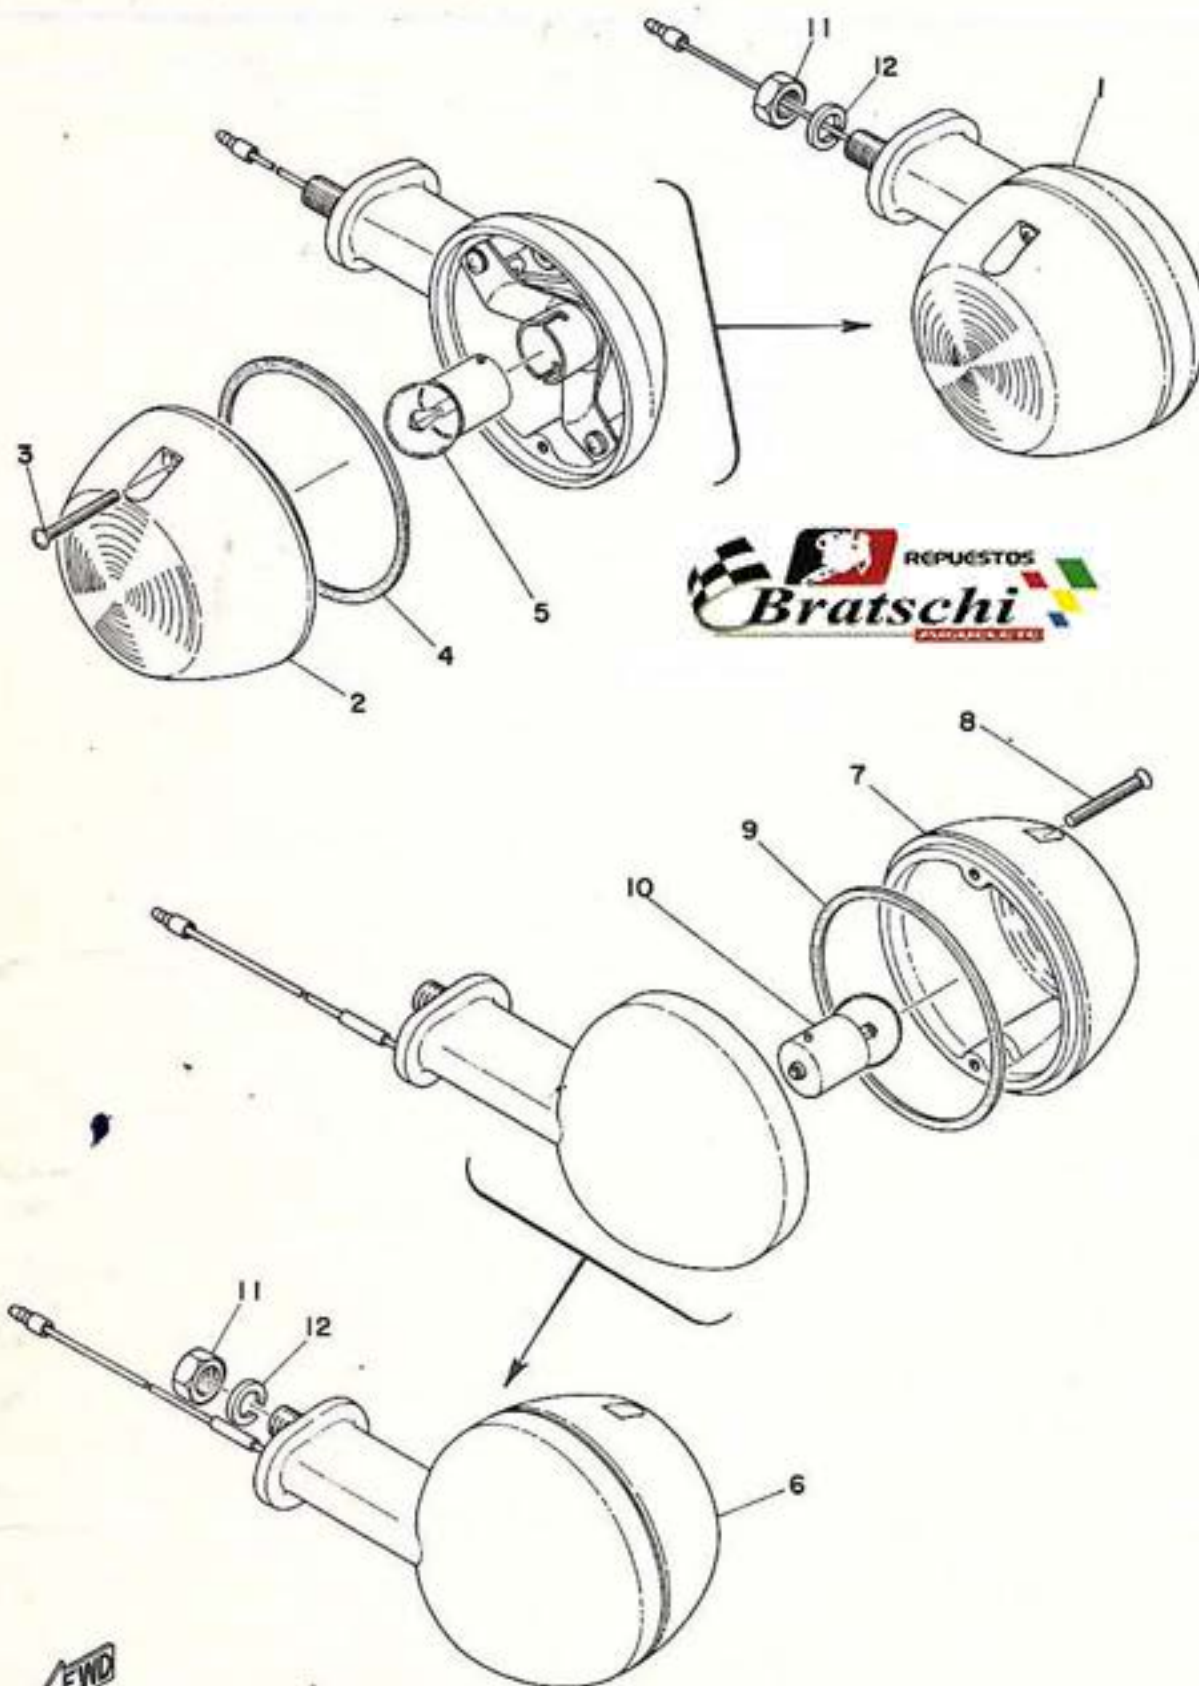


FLASHER LAMP

Ref. No.	Part No.	Description	Q'ty		Applicable Machine No.	Remarks
			YB50	YB60		
28- 1	260-83310-35	FRONT FLASHER LAMP ASS'Y	2	2		
28- 2	183-83332-20	. LENS, flasher	2	2		
28- 3	183-83333-21	. SCREW, lens fitting	4	4		
28- 4	183-83313-20	. GASKET, flasher lens	2	2		
28- 5	185-83311-10	. BULB, flasher (6V-8W)	2	2		
28- 6	355-83330-10-93	REAR FLASHER LAMP ASS'Y, left	1	1		
28- 6-1	355-83340-10-93	REAR FLASHER LAMP ASS'Y, right	1	1		
28- 7	183-83332-20	. LENS, flasher	2	2		
28- 8	183-83333-21	. SCREW, lens fitting	4	4		
28- 9	183-83313-20	. GASKET, flasher lens	2	2		
28-10	185-83311-10	. BULB, flasher (6V-8W)	2	2		
28-11	98801-08100	NUT	4	4		
28-12	92901-08100	WASHER, spring	4	4		



Fig. 29 ELECTRICAL

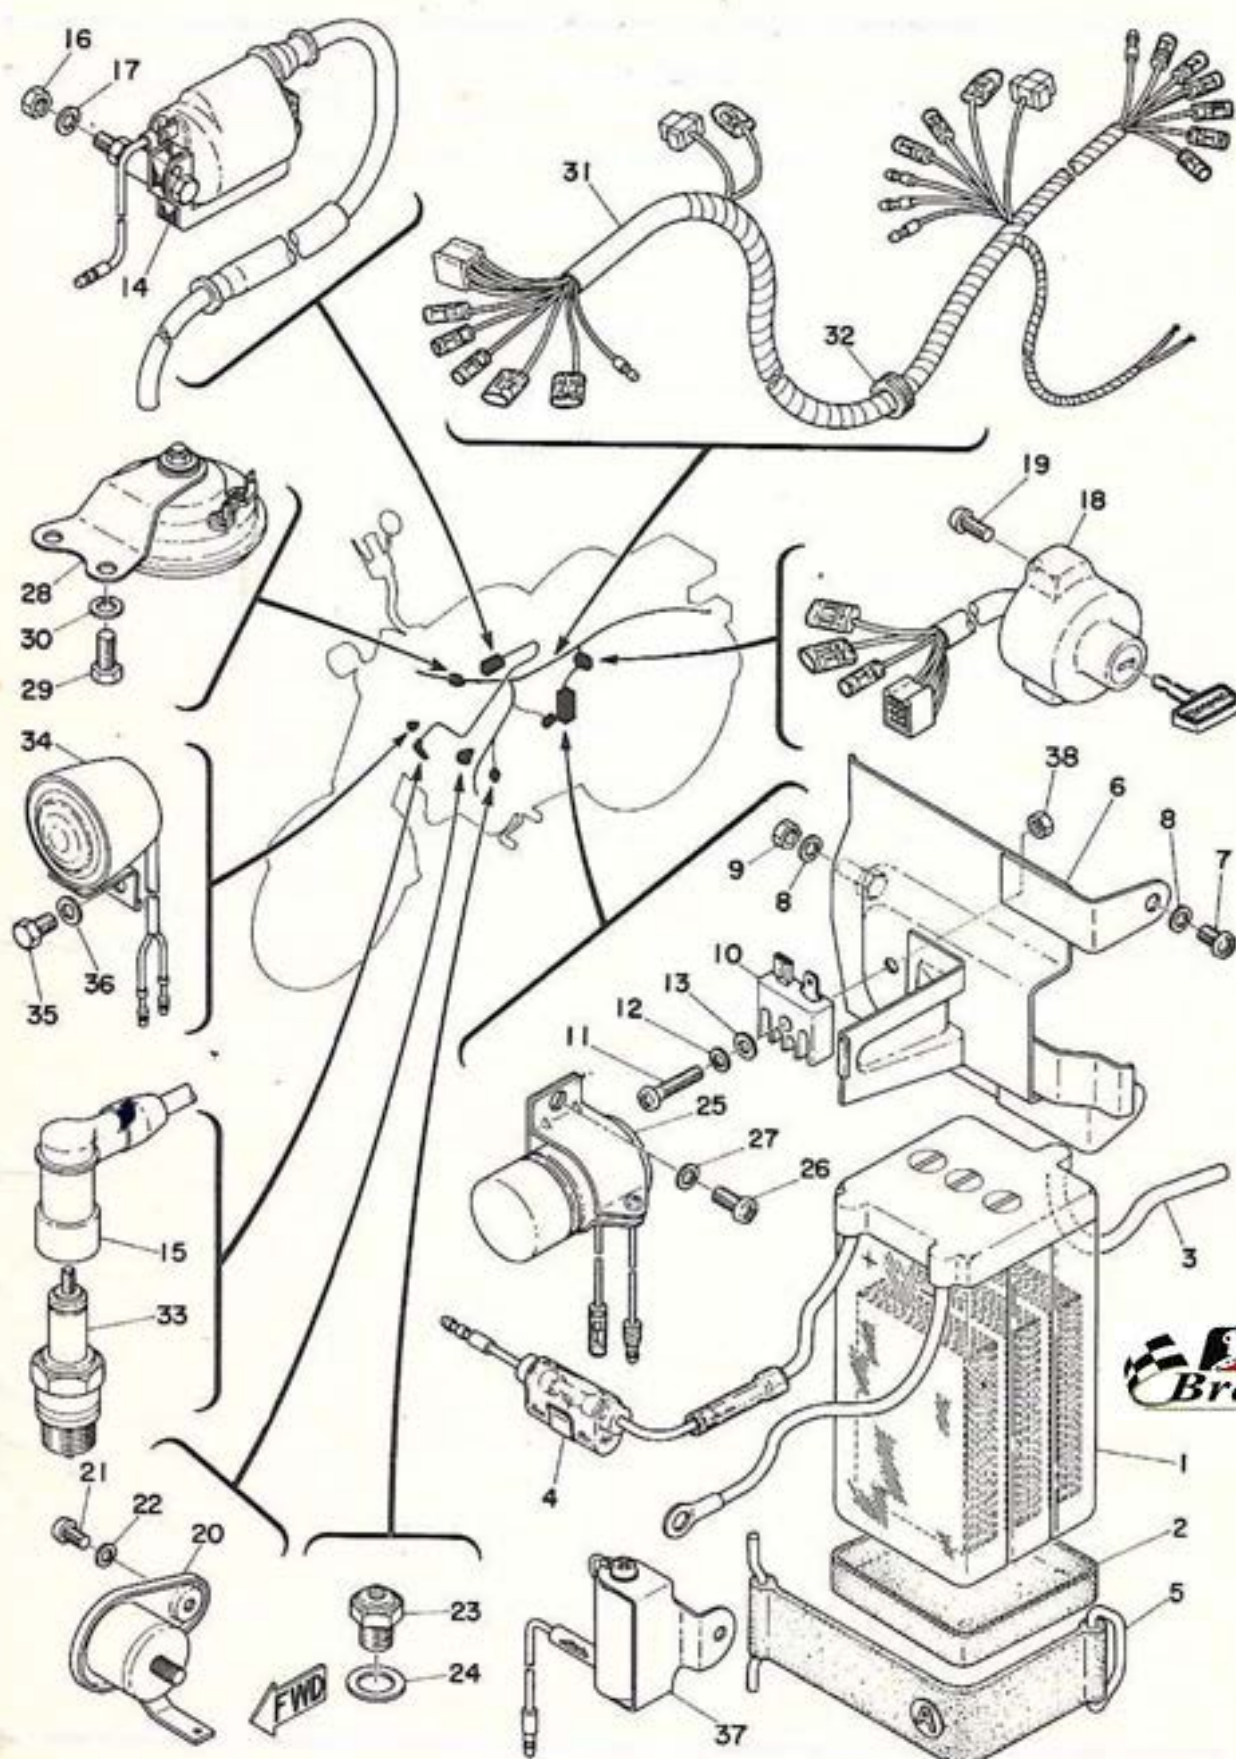


ELECTRICAL

Ref. No.	Part No.	Description	Q'ty		Applicable Machine No.	Remarks
			YB50	YB60		
29- 1	104-82110-20	BATTERY ASS'Y	1	1		
29- 2	104-82122-00	SEAT, battery	1	1		
29- 3	123-82112-00	PIPE, breather	1	1		
29- 4	116-82150-00	FUSE HOLDER ASS'Y	1	1		
29- 4A	116-82151-00	. FUSER (6V-10A)	2	2		
29- 5	164-82131-00	BAND, battery	1	1		
29- 6	220-81975-00	PLATE, rectifier fitting	1	1		
29- 7	92501-06010	SCREW, panhead	2	2		
29- 8	92901-06100	WASHER, spring	3	3		
29- 9	98801-06100	NUT	1	1		
29-10	353-81970-60-63	RECTIFIER ASS'Y 44	1	1		
29-11	98501-05025	SCREW, panhead	1	1		
29-12	92901-05100	WASHER, spring	1	1		
29-13	92901-05200	WASHER, plain	1	1		
29-14	355-82310-40	IGNITION COIL ASS'Y	1	1		
29-15	117-82370-20	PLUG CAP ASS'Y	1	1		
29-16	98801-06100	NUT	2	2		
29-17	92901-06100	WASHER, spring	2	2		
29-18	355-82508-20	MAIN SWITCH ASS'Y	1	1		
29-19	98701-05012	SCREW, panhead	2	2		
29-20	122-82530-00	STOP SWITCH ASS'Y	1	1		
29-21	98501-05010	SCREW, panhead	1	1		
29-22	92901-05100	WASHER, spring	1	1		
29-23	136-82540-00	NEUTRAL SWITCH ASS'Y	1	1		

www.bratschirepuestos.com.uy

Fig. 29 ELECTRICAL

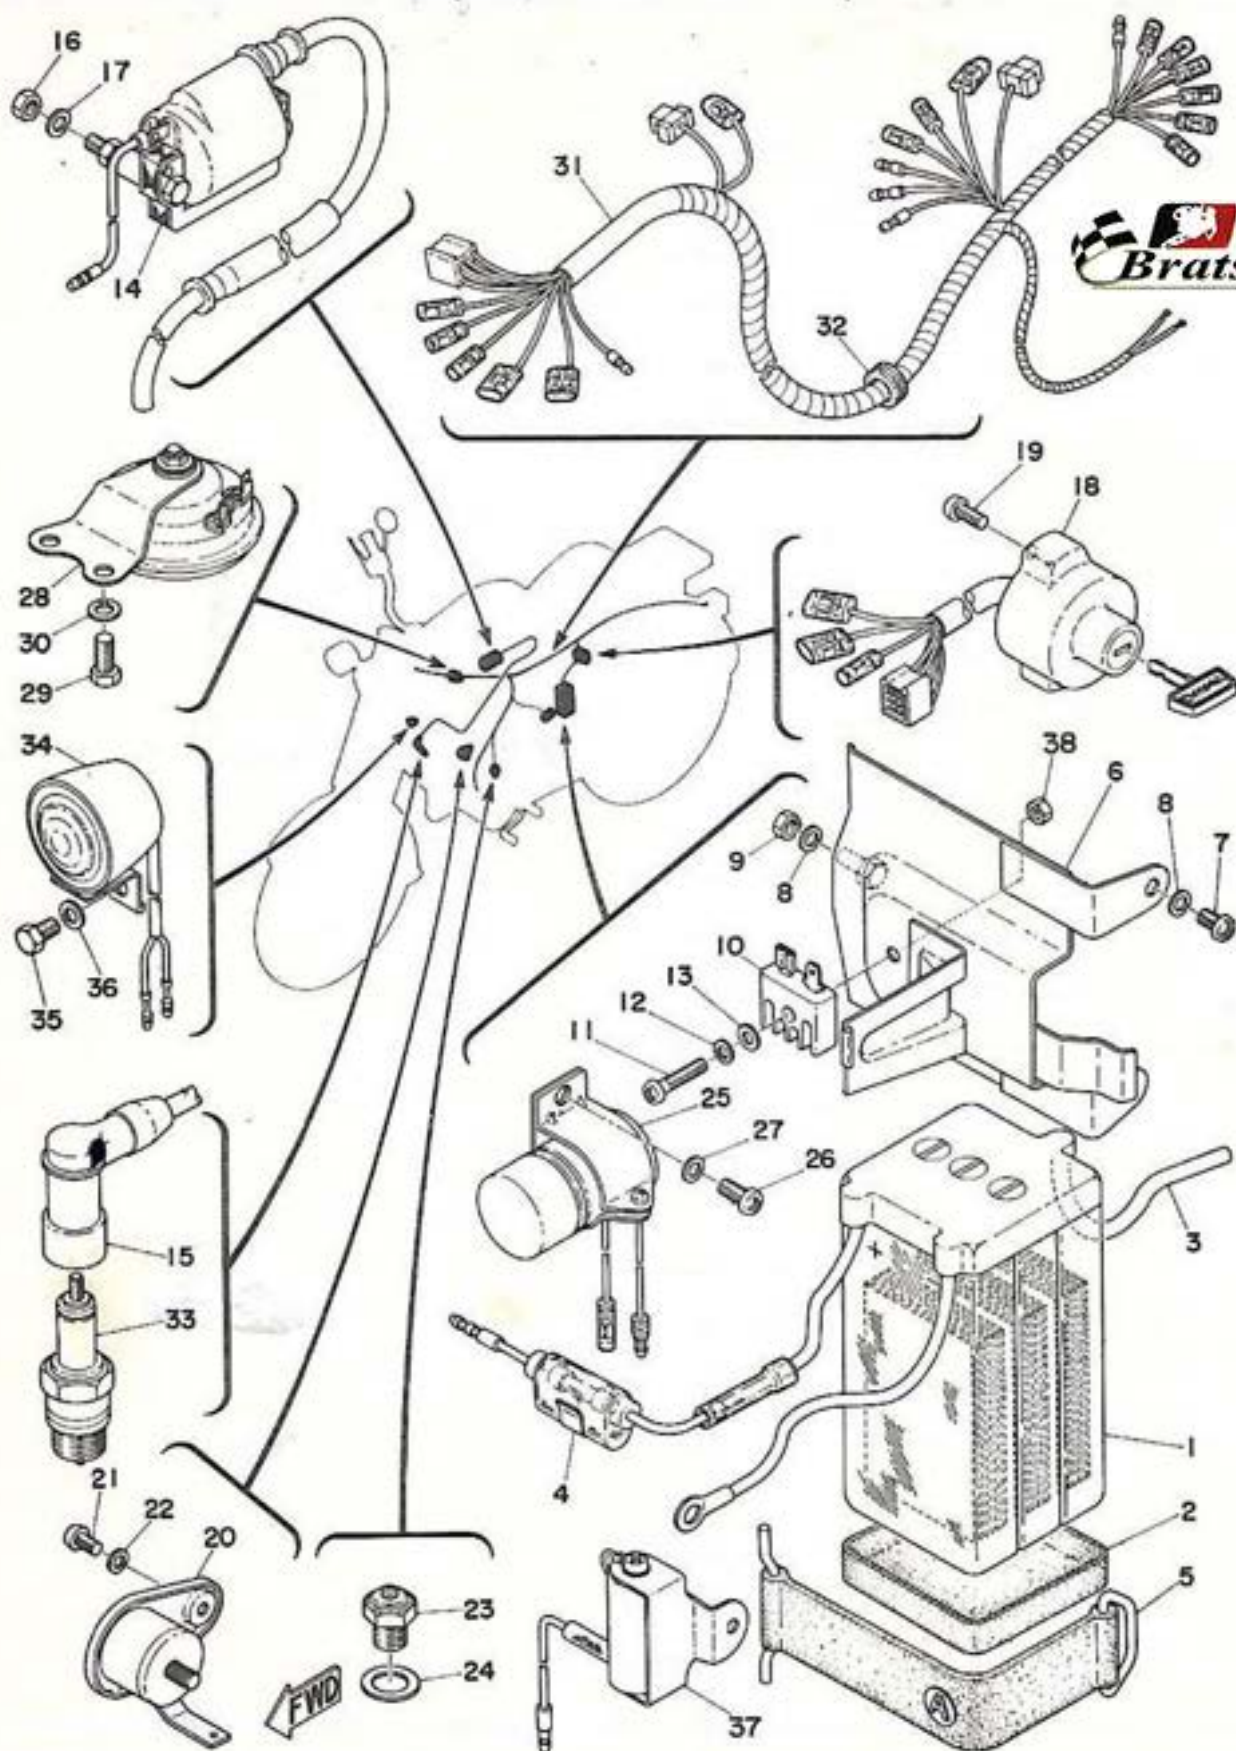

ELECTRICAL

Ref. No.	Part No.	Description	Q'ty		Applicable Machine No.	Remarks
			YB50	YB60		
29-24	102-82543-00	GASKET	1	1		
29-25	355-83350-10	FLASHER RELAY ASS'Y	1	1		
29-26	92501-06012	SCREW, panhead	1	1		
29-27	92901-06100	WASHER, spring	1	1		
29-28	355-83371-10	HORN	1	1		
29-29	91201-06015	BOLT	2	2		
29-30	92901-06100	WASHER, spring	2	2		
29-31	355-82590-20	WIRE HARNESS ASS'Y	1	1		
29-32	136-82598-00	GROMMET	1	1		
29-33	94701-00040	PLUG, spark (B-7HS)	1	1		
29-34	257-83390-10	AUDIO PILOT ASS'Y	1	1		
29-35	92501-06012	BOLT	1	1		
29-36	92901-08100	WASHER, spring	1	1		
29-37	257-85370-00	RESISTER ASS'Y	1	1		
29-38	98801-05200	NUT	1	1		

www.bratschirepuestos.com.uy



Fig. 30 LEG SHIELD



LEG SHIELD

Ref. No.	Part No.	Description	Q'ty		Applicable Machine No.	Remarks
			YB50	YB60		
30- 0-1	207-28300-01	LEG SHIELD ASS'Y	1	1		
30- 1	137-28311-00	. LEG SHIELD, left	1	1		
30- 2	137-28312-00	. LEG SHIELD, right	1	1		
30- 0-2	137-28320-01	. LEG SHIELD STAY SET	1	1		
30- 3	207-28321-01	. . STAY, leg shield upper	1	1		
30- 4	207-28322-01	. . STAY, leg shield under left	1	1		
30- 5	207-28332-00	. . STAY, leg shield under right	1	1		
30- 6	137-28323-00	. . WASHER	4	4		
30- 7	91103-06015	. . BOLT	12	12		
30- 8	136-28323-00	. . WASHER, leg shield	8	8		
30- 9	98803-06100	. . NUT	8	8		
30-10	92901-06100	. . WASHER, spring	8	8		
30-11	97201-08035	. . BOLT	2	2		
30-12	98801-08100	. . NUT	2	2		
30-13	92901-08100	. . WASHER, spring	2	2		
30-14	92901-08200	. . WASHER, plain	2	2		



NUMERICAL INDEX



NUMERICAL INDEX

Ref No.	Parts No.	Ref No.	Parts No.	Ref No.	Parts No.
21-17	101-24356-00 1	18- 6	109-23125-00	4-13	122-16164-00
22- 8	101-24356-00 1	18- 9	109-23143-00	18-31	122-21517-00
1-12	102-11181-01 1	18- 8	109-23145-00	15-10	122-21724-00
3- 8	102-11633-01 1	24- 2	109-25104-00	16- 5	122-22151-00
12- 7	102-18138-00	24-23	109-25136-00	18-19	122-23114-00
16- 2	102-22123-00 1	24-17	109-25155-00	18-35	122-23128-00
16- 9	102-22243-00 1	24-31	109-26344-00	18-23	122-23346-01
21- 9	102-24522-00 1	24-32	109-26345-00	19-12	122-23442-02
21-13	102-24529-00 1	17- 5	109-27115-00	19- 9	122-23443-00
24-26	102-25137-00 1	17-12	109-27216-00	19-10	122-23451-00
25-13	102-25321-00	14-15	109-81328-10	19- 7	122-23453-00
24-16	102-25333-00	13-13	110-81346-20	21- 2	122-24181-00
25-16	102-25333-00	14-12	110-81346-20	21- 3	122-24182-01
25-42	102-25371-00	13- 8	110-81347-20	21- 8	122-24515-00
25-43	102-25373-00	14- 8	110-81347-20	21-10	122-24521-00
25-47	102-25374-00	13- 4	110-81348-20	21-14	122-24524-00
25-46	102-25375-00 2	14- 4	110-81348-20	21-12	122-24531-00
25-30	102-25383-00	3- 7	113-11630-62	21-11	122-24532-00
25-37	102-25385-01	3- 7	113-11631-62-97	21- 5	122-24610-01
25-35	102-25386-01	3- 7	113-11631-62-98	24-14	122-25351-01
25-31	102-25387-02	3- 7	113-11635-62	25-14	122-25351-01
25-29	102-25389-00	20- 1	115-26111-10	25-17	122-25355-00
25-25	102-25412-00	15-15"	116-21783-00	25-24	122-25439-11
15-15	102-27114-00	15-23	116-28317-01	25-24	122-25440-11
29-24	102-82543-00	29- 4	116-82150-00 7	17- 2	122-27112-00
13-11	104-81326-20 36	29- 4A	116-82151-00	17- 6	122-27116-00
13-16	104-81328-20	20-35	116-83931-00	17- 8	122-27413-00
29- 1	104-82110-20	8-15	117-15644-00 2	29-20	122-82530-00
29- 2	104-82122-00	29-15	117-82370-20	20- 9	122-83942-00
26- 5	104-84114-00	1-18	120-15371-00	27- 2	122-84514-00
1-12	107-11181-01	16-20	120-27430-00	29- 3	123-82112-00
1-10	109-11351-00 30	16-20	120-27430-02	1-14	126-11171-60
1- 9	109-11361-00 30	16-21	120-27433-00	3- 3	126-11651-00
3- 7	109-11631-62-97 31	13- 7	120-81321-20 36	12- 1	126-13116-00
3- 7	109-11631-62-98 31	11- 7	122-14612-02	10-16	127-14116-09
3- 7	109-11635-62 31	2-13	122-15486-00	10- 8	127-14123-00
3- 7	109-11636-62 31	8- 2	122-15612-02	10-26	127-14124-20
16- 3	109-22141-00	4- 2	122-16164-00 2	10-25	127-14124-23

www.bratschirepuestos.com.uy

NUMERICAL INDEX

Ref No.	Parts No.	Ref No.	Parts No.	Ref No.	Parts No.
10-30	127-14125-01	25-12	132-25364-00 5	20-10	137-83945-00
10- 9	127-14134-00	25-23	132-25366-01	15-19	141-21717-00
10-13	127-14135-00	20-26	132-26341-10	3-24	146-11545-00
10-19	127-14136-00 34	15-11	136-21713-00	16-19	148-22315-00
10-18	127-14137-00	22- 6	136-21713-00	6- 6	150-18328-00
10- 1	127-14141-14 34	19- 6	136-23415-00 5	20-32	150-26249-00
10- 2	127-14143-24 34	30- 8	136-28323-00	17-17	150-27316-00
10- 2	127-14143-26 34	29-23	136-82540-00 21	26- 2	150-84154-00
10- 2	127-14143-28 34	15-21	136-82598-00	8- 6	156-15618-01
10-24	127-14161-00	29-32	136-82598-00	19- 1	156-23411-00
10-12	127-14171-00	12-15	137-13128-00	19- 3	156-23412-00
21-15	127-24535-00	12-10	137-13137-00	25-51	156-27237-00
25-36	127-25388-00	12-11	137-13138-01	2- 3	164-15415-00
27- 5	127-84724-30	12-20	137-13165-00	3-17	164-16119-00
21- 4	129-24183-00	12-19	137-13167-01	6-10	164-18561-00
21-16	129-24311-00	12- 4	137-13176-00	22- 9	164-21776-00
4- 5	131-16321-00 32	12-22	137-13187-00	22- 3	164-21778-00
3- 9	132-11634-00	10-27	137-14133-00	22- 7	164-24319-00
11- 3	132-14613-00 3	10-33	137-14197-00	20-28	164-26363-00
11-10	132-14713-00	5-20	137-15643-00	29- 5	164-82131-00
11-11	132-14714-00	4- 7	137-16333-00 32	13-17	165-81145-21
1-16	132-15351-00	4- 8	137-16337-01 5	14-16	165-81145-21
1-17	132-15353-00	4- 9	137-16356-00 6	13- 6	166-81332-20
8- 4	132-15616-01	3-18	137-16377-00 6	10-29	167-14119-00
8- 5	132-15617-00	4-10	137-16377-00 6	10-28	167-14121-00
8- 3	132-15625-01	4-11	137-16378-00 32	20-34	168-83936-01
5-29	132-15653-00	21- 6	137-24331-00	26-11	173-84313-00
8-13	132-15664-00 3	20-15	137-26243-60	6-19	174-18544-00
8-12	132-15665-00 3	20-17	137-26261-01	1-19	180-13554-00
8-11	132-15676-00 3	20-29	137-26331-11	16-18	180-22117-00
4-18	132-16346-00	30- 1	137-28311-00	17-11	180-27231-01
7-10	132-18113-01 4	30- 2	137-28312-00	25-52	180-27236-00
7- 2	132-18123-00 4	30- 0-2	137-28320-01	22-10	183-21770-11
7- 3	132-18124-00 4	30- 6	137-28323-00	19- 5	183-23411-00
7- 4	132-18133-00 4	20- 2	137-82710-10	19- 4	183-23412-00
7- 7	132-18137-00 4	20- 3	137-83912-01 36	24-34	183-25146-00
6-16	132-18143-00 4	20- 8	137-83941-01	24-35	183-25147-00
6-15	132-18177-00 5	20-11	137-83944-00	24-36	183-25149-00

www.bratschirepuestos.com.uy

NUMERICAL INDEX

Ref No.	Parts No.	Ref No.	Parts No.	Ref No.	Parts No.
28- 4	183-83313-20 ³⁸	30- 0-1	207-28300-01	3- 2	257-11422-00
28- 9	183-83313-20 ³⁸	30- 3	207-28321-01	3- 5	257-11681-00
28- 2	183-83332-20 ¹⁰	30- 4	207-28322-01	12- 0-1	257-13101-00
28- 7	183-83332-20 ¹⁰	30- 5	207-28332-00	20-24	257-13151-00
28- 3	183-83333-21 ³⁸	14- 2	207-81312-10	12-25	257-13161-00
28- 8	183-83333-21 ³⁸	13- 2	207-81312-20 ³⁴	12- 2	257-13175-00
28- 5	185-83311-10	14- 3	207-81313-10	12- 6	257-13178-00
28-10	185-83311-10	13- 3	207-81313-20 ³⁴	3-13	257-13512-00
26- 4	195-84315-00	14- 7	207-81321-10	3-14	257-13515-00
26- 9	195-84324-00 ⁸	14-11	207-81326-10	1-20	257-13551-00
26-10	195-18425-00 ⁸	14-14	207-81331-10	10-17	257-14112-15
5-19	201-15653-00	14- 1	207-81350-10	10-32	257-14197-00
18-20	205-23111-40	20- 4	207-83915-00	9- 7	257-14417-00
25-53	206-27238-00 ⁸	22- 5	209-21724-00	11- 2	257-14753-00
16-22	206-27436-00	20-18	212-26311-00 ³⁵	1- 1	257-15111-01
16- 1	207-22110-00-A4	3-21	214-11557-01	1- 2	257-15121-01
16- 1	207-22110-00-R5	12-23	214-13162-00	2- 1	257-15410-01
16- 1	207-22110-00-F7	12-24	214-13164-00	2-14	257-15413-00
16- 6	207-22210-00-A4	22- 2	214-21761-00	4-24	257-15417-01
16- 6	207-22210-00-F7	22-11	214-21772-00	2- 7	257-15421-01
16- 6	207-22210-00-R5	9-11	220-14455-00	2-18	257-15433-00
16-11	207-22310-00-35 ³⁵	29- 6	220-81975-00	2- 8	257-15451-00
16-17	207-22331-00	20- 6	232-82720-30	2-15	257-15463-00
18-21	207-23112-00	20- 7	232-83922-30 ³⁶	5-21	257-15651-01
18-16	207-23116-01	20-33	232-83980-30	8-18	257-15668-00
18-10	207-23117-00	26- 6	241-84312-00	3-16	257-16111-00
18-11	207-23141-00	26- 1	241-84330-00-A4	3-15	257-16136-00
18-12	207-23142-00	26- 1	241-84330-00-F7	4- 1	257-16150-00
18- 3	207-23147-00	26- 1	241-84330-00-R5	4-12	257-16181-00
18- 7	207-23150-00	4-25	254-15631-00 ³³	4- 0-1	257-16301-00
18-15	207-23163-00	26- 3	254-84320-00	4- 4	257-16324-00
19- 8	207-23435-00-33	26- 8	254-84345-00	4-21	257-16341-00
21- 7	207-24500-00	27- 6	254-84751-00-35	4-16	257-16342-01
25-26	207-25411-00	18-32	256-85111-10	4-23	257-16343-00
20-19	207-26312-00	1-13	257-11111-01	4-17	257-16345-00
20-30	207-26391-00	1-11	257-11311-00	4- 6	257-16351-00
17- 1	207-27111-00-33	3- 0-1	257-11400-01	4-15	257-16357-00
15-12	207-28100-00	3- 1	257-11412-01	4- 3	257-16371-00

www.bratschirepuestos.com.uy

NUMERICAL INDEX

Ref No.	Parts No.	Ref No.	Parts No.	Ref No.	Parts No.
5- 4	257-17121-00	18-22	257-23340-00-33	3-10	288-11601-20
5- 2	257-17131-01 33	17- 3	257-27211-00	2-19	288-14455-00
5- 5	257-17141-00 33	17- 7	257-27411-00-33	2-17	288-14481-01
5-16	257-17211-00 33	14- 0-1	257-81300-10	6-14	296-18140-02
5-17	257-17219-00-04	13- 0-1	257-81300-21	16- 7	296-22242-00
5-17	257-17219-00-06	14- 6	257-81332-10	24- 1	296-25111-00
5-17	257-17219-00-08	13- 1	257-81350-21	24- 7	296-25117-00
5-13	257-17221-01 33	29-34	257-83390-10	24-11	296-25135-00
5-15	257-17231-00 33	29-37	257-85370-00	24-22	296-25138-00
5-11	257-17241-00	1-13	259-11111-00	24-29	296-25183-00
5-12	257-17258-00	1-11	259-11311-00	25- 2	296-25304-00
5- 1	257-17411-01 33	3- 0-1	259-11400-00	25- 1	296-25311-00
5- 3	257-17414-00 33	3- 1	259-11412-00	25- 7	296-25317-00
5-14	257-17414-00	3- 2	259-11422-00	24-15	296-25330-00
5-10	257-17421-01 33	3-10	260-11601-00 31	25-15	296-25330-00
5-26	257-17461-20 34	3-10	260-11601-10 31	28- 6	296-83330-35
5-26	257-17461-30 34	3-10	260-11601-20 31	28- 6-1	296-83340-35
5-26	257-17461-40 34	10-14	260-14114-00	27- 0-1	296-84510-00
5-26	257-17461-50 34	10-20	260-14131-00	27- 1	296-84511-00
5-25	257-17462-00	10-10	260-14142-25 34	27- 4	296-84521-00
5-28	257-17463-00	10-21	260-14158-01	27- 3	296-84523-00
5-27	257-17464-00 34	10- 6	260-14181-00	1-27	304-15373-00
5- 8	257-17471-01	10- 4	260-14184-00 34	8-16	305-15641-00
7- 1	257-18101-01	10- 3	260-14185-00 34	8- 8	305-15660-01
7- 9	257-18111-00	10-11	260-14190-12	2-12	315-15362-01
6- 2	257-18511-01	18-25	260-23318-40	8-17	315-15687-00
6- 3	257-18512-01	20-20	260-26321-00	24-13	342-25121-00
6-17	257-18531-00	20-27	260-26335-10	12-26	353-13552-00
6- 1	257-18534-00	28- 1	260-83310-35	24-28	353-25181-00
6- 7	257-18541-61	26-17	260-83550-00 38	24-30	353-25182-00
6- 4	257-18552-00	20-13	266-26290-00	25-38	353-25182-00
6-13	257-18589-00	20-31	266-26290-10	20-14	353-26241-00
18-13	257-23122-90-A4	17-14	266-27311-00-33	20-16	353-26242-00
18-13	257-23122-90-F7	17-15	266-27317-00	29-10	353-81970-60
18-13	257-23122-90-R5	26- 7	266-85363-00	10- 0-1	355-14101-60
18-14	257-23132-90-A4	12-18	278-13169-00	9- 1	355-14411-00
18-14	257-23132-90-F4	3-10	288-11601-00	9- 1	355-14411-00
18-14	257-23132-90-R5	3-10	288-11601-10	9- 1	355-14411-00

www.bratschirepuestos.com.uy

NUMERICAL INDEX

www.bratschirepuestos.com.uy

Ref No.	Parts No.	Ref No.	Parts No.	Ref No.	Parts No.
9- 3	355-14412-00	19-18	355-23480-00	19-13	91214-06035
9- 9	355-14422-00	21- 1	355-24110-00-01	10-15	91401-12008
9- 2	355-14451-00 ³⁵	21- 1	355-24110-00-02	12-16	91401-12018
9- 6	355-14453-00	21- 1	355-24110-00-03	17-13	91401-20012
9- 5	355-14454-00	21-18	355-24161-00	25-50	91401-20012
11- 1	355-14611-01	21-20	355-24162-00	24-33	91401-20020
11- 6	355-14710-02	21-21	355-24244-00	25-55	91401-20020
11-12	355-14781-01	21-22	355-24245-00	22- 4	91401-50080
15- 1	355-21110-00-A4	23- 1	355-24710-00	2- 2	91810-02014
15- 1	355-21110-00-F7	23- 9	355-24730-00	2- 9	91810-02014
15- 1	355-21110-00-R5	23- 5	355-24810-00-93	1- 3	91810-05016
15-14	355-21398-01	29-14	355-82310-40	29- 7	92501-06010
18-26	355-21510-00-35	29-18	355-82508-20	5- 9	92501-06012
15- 2	355-21610-00-A4	29-31	355-82590-20	20-21	92501-06012
15- 2	355-21610-00-F7	29-25	355-83350-10 ³⁸	29-26	92501-06012
15- 2	355-21610-00-R5	29-28	355-83371-10	29-35	92501-06012
22- 1	355-21705-00-A4	26-16	355-83510-30	1-25	92501-06015
22- 1	355-21705-00-F7	26-16	355-83510-51	2-16	92501-06018
22- 1	355-21705-00-R5	26- 0-1	355-84110-00	10- 7	92501-06018
15- 9	355-21711-00-A4	15-20	356-21786-00	1- 4	92501-06030
15- 9	355-21711-00-F7	22-13	356-21787-00	2-10	92501-06033
15- 9	355-21711-00-R5	26-16	356-83510-51	2- 6	92501-06040
15-13	355-21784-01	8- 0-1	357-15610-00	2-11	92501-06040
22-12	355-21785-01	8- 1	357-15611-00	1- 5	92501-06045
15-20	355-21786-00	25-28	357-25381-00	2- 5	92501-06045
22-13	355-21787-00	26-18	359-83520-00	1- 6	92501-06050
18- 0-1	355-23101-90-00	13-12	802-81331-20	2-20	92501-06050
18-17	355-23121-30-A4	9-10	90115-06002	1-26	92501-06055
18-17	355-23121-90-F7	15- 3	91101-06015	1- 7	92501-06060
18-17	355-23121-90-R5	8- 7	91101-06020	1- 8	92501-06065
18- 4	355-23124-90	30- 7	91103-06015	19-19	92701-06015
18- 1	355-23126-90-35	18-29	91201-06012	15-22	92701-06030
18-18	355-23131-90-A4	27- 7	91201-06012	16- 4	92801-10100
18-18	355-23131-90-F7	29-29	91201-06015	19-15	92801-10100
18-18	355-23131-90-R5	7-11	91201-06020	19-17	92801-10200
18- 5	355-23134-90	24-18	91201-06030 ²	16- 8	92804-10700
18- 2	355-23136-90-35	25-18	91201-06030	10-22	92901-04100
19-11	355-23441-00	23- 2	91201-08015	13- 5	92901-04100

NUMERICAL INDEX

Ref No.	Parts No.	Ref No.	Parts No.	Ref No.	Parts No.
13- 9	92901-04100	25-21	92901-06200	25-11	93210-41041
13-14	92901-04100	25-41	92901-06200	10- 5	93220-08002
13-18	92901-04100	11- 5	92901-08100	25-32	93306-00406
14- 5	92901-04100	15- 8	92901-08100	25- 8	93306-20201
14- 9	92901-04100	15-17	92901-08100	25-10	93306-20204
14-13	92901-04100	17-10	92901-08100	5- 7	93306-20303
14-17	92901-04100	18-28	92901-08100	3-19	93306-20412
13-10	92901-04200	23- 4	92901-08100	24- 8	93306-30003
13-15	92901-04200	25-45	92901-08100	24-12	93306-30003
14-10	92901-04200	26-12	92901-08100	3-11	93306-30302
6-12	92901-05100	28-12	92901-08100	5-23	93306-30305
11- 9	92901-05100	29-36	92901-08100	3- 6	93310-11268
12-12	92901-05100	30-13	92901-08100	3- 4	93310-41810
16-14	92901-05100	23- 3	92901-08200	5- 6	93410-13004
18-33	92901-05100	23- 8	92901-08200	5-18	93410-13004
29-12	92901-05100	25-49	92901-08200	5-22	93410-13004
29-22	92901-05100	30-14	92901-08200	8-10	93410-15005
16-15	92901-05200	18-24	92901-10100	24-37	93410-20009
18-34	92901-05200	19-16	92901-10100	8-14	93410-25017
29-13	92901-05200	16-10	92901-10200	25-33	93420-42007
11-13	92901-06100	3-22	92901-12100	6-20	93430-03014
18-30	92901-06100	26-15	92903-08200	6- 5	93430-08006
19-14	92901-06100	12- 5	93101-10001	7- 8	93430-10016
20-22	92901-06100	12-14	93101-10001	17- 4	93430-12008
24-20	92901-06100	7- 6	93101-12004 ¹⁵	12- 8	93440-08001
25-20	92901-06100	3-20	93102-20009 ³⁰	6- 8	93440-32017
25-40	92901-06100	5-24	93102-25017 ³⁴	4-14	93501-04004
27- 8	92901-06100	1-21	93103-28012 ³⁰	19- 2	93501-04011
29- 8	92901-06100	24-24	93104-07003	4-20	93503-16003
29-17	92901-06100	25- 9	93104-21032	12-17	93505-32002
29-27	92901-06100	24-10	93105-47007 ¹⁵	3-12	93603-08067
29-30	92901-06100	24- 9	93106-20001 ³⁷	12- 3	93603-22028
30-10	92901-06100	25-34	93106-30004	1-24	93604-14012
1-15	92901-06200	4-19	93108-15001 ³²	6- 9	93604-22050
15- 4	92901-06200	8- 9 ⁴³	93109-15001	6-18	93605-20043
20-12	92901-06200	1-23	93210-12014	24-27	93700-06001
20-23	92901-06200	24-25	93210-14104	25-22	93700-06001
24-21	92901-06200	1-22	93210-23029	24- 4	94122-17008

www.bratschirepuestos.com.uy

NUMERICAL INDEX

Ref No.	Parts No.	Ref No.	Parts No.	Ref No.	Parts No.
25- 4	94122-17009	11-14	98801-06100		
24- 5	94222-17003	24-19	98801-06100		
25- 5	94222-17003	25-19	98801-06100		
24- 6	94322-17002	25-39	98801-06100		
25- 6	94322-17002	27- 9	98801-06100		
24- 3	94412-17002	29- 9	98801-06100		
25- 3	94412-17002	29-16	98801-06100		
25-54	94504-20098 ³⁷	4-22	98801-06300		
25-54A	94604-20001	7- 5	98801-08100		
29-33	94701-00040 ¹⁷	11- 4	98801-08100		
15-16	97101-08080	15- 7	98801-08100		
15- 6	97101-08095	23- 7	98801-08100		
15- 5	97101-08120	26-13	98801-08100		
18-27	92701-08012	28-11	98801-08100		
15-18	97201-08015	30-12	98801-08100		
23- 6	97201-08015	25-27	98801-08200		
17- 9	97201-08020	17-16	98801-08300		
30-11	97201-08035	25-44	98801-08300		
26-14	97204-08018	25-48	98801-08300		
2- 4	98501-04006	3-23	98801-12200		
9- 8	98501-04008	20- 5	98803-05300		
21-19	98501-04008	30- 9	98803-06100		
10-23	98501-04010	9- 4	98803-06700		
11- 8	98501-05008	12-21	98901-04008		
29-21	98501-05010				
6-11	98501-05012				
12- 9	98501-05015				
16-16	98501-05020				
29-11	98501-05025				
16-12	98501-05035				
20-25	98502-05010				
29-19	98701-05012				
13-19	98701-05015				
14-18	98701-05015				
10-31	98801-05100				
16-13	98801-05100				
12-13	98801-05200				
29-38	98801-05200				

www.bratschirepuestos.com.uy

